



Gaming is winning.™


GameSir GM500

User Manual ►

GAMESIR GM500 GAMING MOUSE PRODUCT REQUIREMENTS

- PC with one available USB port

GAMESIR GM500 GAMING MOUSE KEY LAYOUT

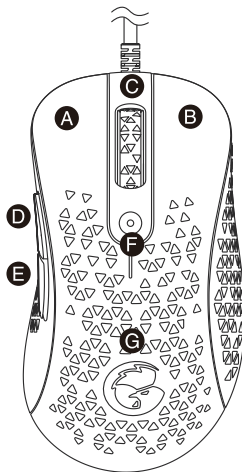

- A** Left button
- B** Right button
- C** Scroll wheel
- D** Mouse button 5
- E** Mouse button 4
- F** DPI button
- G** LOGO indicator light

GAMESIR GM500 GAMING MOUSE DPI ADJUSTMENT

DPI	Indicator Color
400	Green
800	Red
1600	Blue
2400	Yellow
3200	Orange
6400	Purple
12000	White

DPI refers to the cursor travel distance based on the mouse movement. The higher the DPI, the further the cursor travels with the same mouse movement.

GameSir GM500 Gaming Mouse has a default DPI of 1600. Press the DPI Button on the back of the GM500 Mouse to cycle through seven DPI levels, 400/800/1600/2400/3200/6400/12000.

As you switch, the backlight on the back of the GM500 Mouse will flash with the corresponding color.

GAMESIR GM500 GAMING MOUSE POLLING RATE ADJUSTMENT

Polling Rate	Flashing Times
125hz	White flashing 1 time
250hz	White flashing 2 times
500hz	White flashing 3 times
1000hz	White flashing 4 times

The higher the polling rate, the more frequently the computer receives information about the mouse status, thus shortening the response time of the mouse cursor.

GameSir GM500 Gaming Mouse has a default polling rate of 1000Hz. Press the GM500 Scroll Wheel + DPI Button to switch among 4 polling rates, 125hz (8ms) / 250hz (4ms) / 500hz (2ms) / 1000hz (1ms). As you switch, the backlight will flash to indicate the level.

GAMESIR GM500 GAMING MOUSE LIGHTING ADJUSTMENT

Press the GM500 Mouse Button 5 + DPI Button to cycle through 3 levels of light effects.

- Seven Colors (default)
- Monochrome Permanent
- Monochrome Breathing

Press the GM500 Mouse Button 4 + DPI Button to cycle through 3 levels of brightness.

- High
- Medium (default)
- Low

▲ NOTICE Please read this Precautions carefully.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

GAMESIR GM500ゲームマウス 製品要求

- 一つのUSBポートが使えるPCを持っています

GameSir GM500ゲームマウス ボタン・キーレイアウト

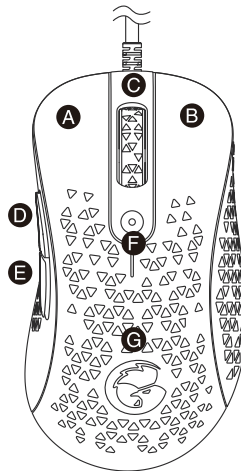

- A 左ボタン
- B 右ボタン
- C ホイール
- D マウスボタン5
- E マウスボタン4
- F DPIキー
- G LOGO指示ランプ

GameSir GM500ゲームマウス DPI調節

DPI	指示カラー
400	緑色
800	赤色
1600	青色
2400	黄色
3200	オレンジ色
6400	紫色
12000	白色

DPIとは、カーソルがマウスの移動距離に応じて移動する距離のことをいいます。DPIが高いほど、マウスの移動距離が同じなのにカーソルの移動距離が遠いです。

GameSir GM500ゲームマウスのデフォルトのDPI値は1600です。GM500マウスの裏側のDPIサイクルキーを押すと400/、800/1600/2400/3200/6400/12000の7段階のDPI調整が切り替わります。

切り替え時にはGM500マウスのバックライトが点滅し、相応のライトカラーになってヒントを出します。

GameSir GM500ゲームマウス ポーリング頻度 調整

ポーリング頻度	点滅回数
125hz	白色点滅1回
250hz	白色点滅2回
500hz	白色点滅3回
1000hz	白色点滅4回

ポーリング率が高いほど、コンピュータがマウスの状態情報を受信するのが頻繁になり、マウスポインタの反応時間が増加します。
GameSir GM500ゲームマウスのポーリング頻度はデフォルトで1000 Hzです。GM500マウスホイール+DPIキーを押すと、125hz(8ms)/250hz(4ms)/500hz(2ms)/1000hz(1ms)の4段階のポーリング頻度が切り替わります。切り替え時にはバックライトが点滅してヒントを出します。

GameSir GM 500ゲームマウス ライト効果 調整

GM500のマウスボタン5+DPIキーを押すと、3段階のライト効果が循環的に切り替わります。

- 七色カラフル(デフォルト)
- 単色常時点灯
- 単色呼吸

GM 500のマウスボタン4+DPIキーを押すと、3段階の照明の明るさが循環的に切り替わります。

- 高
- 中(デフォルト)
- 低


▲ご注意:保護者の方へ必ずお読みください。

- 小さいな部品がありますので3歳未満のお子様には絶対に与えない てください。
- 乳幼児の手の届くところに置かない ください。万一飲み込んだ場合は、すぐに医師に相談してください。
- 火気のある場所では絶対に使用しないで ください。
- 長時間直射日光当てたり、高温となる場所に置かない ください。
- 本品を湿気やホコリの多いところに置かない ください。
- 本品に物を当てたり、落下させるような強い衝撃を与えない ください。
- 故障の原因になりますので、USB端子を直接手で触ない ください。
- ケーブル部を強く曲げたり引っ張ったりしない ください。
- お手入れの際には、乾いた柔らかい布を使用して ください。
- ペンジン、シンナーなどの薬品は使用しない ください。
- 分解や修理、改造は絶対にしない ください。
- 本来の目的以外には使用しない ください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。
- 光学式ライトの光を直接見ない ください。強い光より、目を痛める可能性があります。

GAMESIR GM500 게임 마우스 제품 요구

- 사용 가능한 USB 포트가 있는 PC 한개

GAMESIR GM500 게임 마우스 키보드 배치

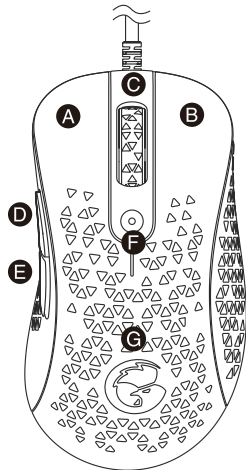

- A 좌버튼
- B 우버튼
- C 롤러
- D 마우스 버튼5
- E 마우스 버튼4
- F DPI 버튼
- G LOGO표시등

GAMESIR GM500 게임 마우스 DPI 조정

DPI	표시 색상
400	녹색
800	적색
1600	남색
2400	황색
3200	등색
6400	퍼플
12000	흰색

DPI란, 마우스가 이동하는 거리에 근거하여, 커서가 이동하는 거리입니다. DPI 가 높을 수록, 마우스 이동 거리가 같을때 커서가 이동하는 거리가 더욱 멀게됩니다.

GameSir GM500 게임 마우스의 디폴트DPI값은1600입니다. GM500 마우스 뒷측의DPI 순환 버튼을 눌러 400/800/1600/2400/3200/6400/12000 등 7단으로DPI를 조정할 수 있습니다.

전환할때GM500 마우스 배광이 깜박이며 대응하는 라이트 색상으로 제시합니다.

GAMESIR GM500 게임 마우스 폴링율 조정

폴링율	깜박임 횟수
125hz	흰색 깜박임1회
250hz	흰색 깜박임2회
500hz	흰색 깜박임3회
1000hz	흰색 깜박임4회

폴링율이 높을 수록 컴퓨터가 마우스 상태를 접수하는 정보가 더욱 빈번하기에 마우스 커서의 반응 시간을 증가 시킵니다.

GameSir GM500게임 마우스의 폴링율은 디폴트로 1000Hz 입니다. GM500마우스 롤러+DPI버튼을 눌러 125hz (8ms) /250hz (4ms) /500hz (2ms) /1000hz (1ms) 등 4단 폴링율을 전환 조정할 수 있습니다.

전환할때 배광이 깜박이면서 제시합니다.

GAMESIR GM500 게임 마우스 램프 효과 조정

GM500마우스 버튼 5+DPI버튼을 눌러 3단 램프 효과로 순환 전환 가능합니다.

- 칠색 환채 (디폴트)
- 단색 커집
- 단색 호흡

GM500마우스 버튼4+DPI버튼을 눌러 3단 램프 밝기를 순환 전환 가능합니다.

- 높음
- 중등 (디폴트)
- 낮음


▲ 한국KC 경고문구:

- 1.강렬한 진동을 피하고 사사로이 해체,개조,수리를 하지 마십시오.
- 2.습한곳,고온,오일과 연기가 있는 장소를 피하여 보관하십시오.
- 3.물 혹은 기타 액체가 컨트롤러 내부로 들어가면 컨트롤러 기능에 영향을줄수 있습니다.
- 4.배터리가 내장되었기에 컨트롤러를 불속에 넣지 마십시오,폭박할 수있습니다.
- 5.본 제품충전 전압은 USB3.7-5.5V, 직류전원(보통 안드로이드 휴대폰충전전원이면 바로 사용할 수 있음)이고, 아닐 경우 충전에실패하거나,제품 훼손을 초래할 수 있습니다.
- 6.어린이는 성인의 보호하에 본 제품을 사용하십시오.
- 7.임의의 품질 문제거나 건의 사항은 판매업체거나 소비자 상담실에연락하십시오,연락처는 제품 겉면 포장에 있습니다.

GAMESIR GM500 游戏鼠标 产品要求

- 具有一个可用 USB 端口的 PC

GAMESIR GM500 游戏鼠标 按键布局

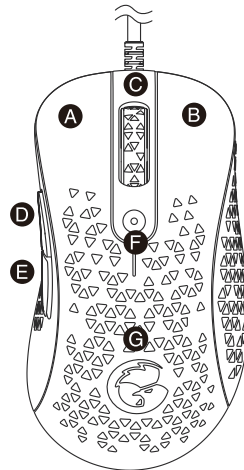

- A 左键
- B 右键
- C 滚轮
- D 鼠标按键 5
- E 鼠标按键 4
- F DPI键
- G LOGO指示灯

GAMESIR GM500 游戏鼠标 DPI 调节

DPI	指示颜色
400	绿色
800	红色
1600	蓝色
2400	黄色
3200	橙色
6400	紫色
12000	白色

DPI是指根据鼠标移动的距离，光标移动的距离。DPI 越高，鼠标移动距离相同时光标移动的距离越远。

GameSir GM500 游戏鼠标 默认DPI值为1600。按下GM500鼠标的背部的DPI循环键可切换400/800/1600/2400/3200/6400/12000七档DPI调节。切换时GM500鼠标背光将闪烁对应灯光颜色提示。

GAMESIR GM500 游戏鼠标 轮询率 调节

轮询率	闪烁次数
125hz	白色闪烁1次
250hz	白色闪烁2次
500hz	白色闪烁3次
1000hz	白色闪烁4次

轮询率越高，计算机接收鼠标状态的信息越频繁，从而增加鼠标指针的反应时间。

GameSir GM500游戏鼠标轮询率默认为1000Hz。按下GM500鼠标滚轮+DPI键可切换125hz (8ms) /250hz (4ms) /500hz (2ms) /1000hz (1ms) 四档轮询率调节。切换时背光闪烁提示。

按下GM500鼠标按键5+DPI键可循环切换3档灯效

按下GM500鼠标按键5+DPI键可循环切换3档灯效。

- 七色幻彩（默认）
- 单色常亮
- 单色呼吸

按下GM500鼠标按键4+DPI键可循环切换3档灯光亮度

- 高
- 中（默认）
- 低

⚠ 注意事项

1. 若商品有质量问题，请首先联系我们的客服进行登记。
联系方式：
QQ:800082537
电话:400-8828035(时间:9:00-18:00)
官网:www.xiaoji.com
出品:广州小鸡快跑网络科技有限公司
地址:广州市天河区建业路华翠街68号301A-1
2. 如需退、换商品，请确保商品完好无损(包括商品外包装、赠品、说明书、售后卡、标签等)，不影响二次销售。
3. 如要保修商品，请务必完整填写用户姓名、联系电话、联系地址，正确填写售后要求与详细说明售后原因，将售后卡随货寄回(如不完整填写保修卡信息，恕无法提供任何售后售后服务)。

保修卡

(售后政策：非人为损坏，3个月包换、1年保修)

用户姓名

联系电话

联系地址

售后要求

☐ 退

☐ 换

☐ 保修

售后原因

订单编号

(注：非小鸡官网途径购买的产品，售后问题请直接与购买商家联系)

