

Gaming is winning.™



GameSir F7 Claw

User Manual ►

PACKAGE CONTENTS

- F7 gamepad
- GameSir stickers
- Type-C charging cable
- User Manual
- Certificate
- Anti-drop sticker x2 sets

COMPATIBLE TABLET SIZES

Length: unlimited


Width: unlimited

Thickness: 6-12mm


COMPATIBLE GAMES

Virtual buttons customizable mobile games

EQUIPMENT LAYOUT

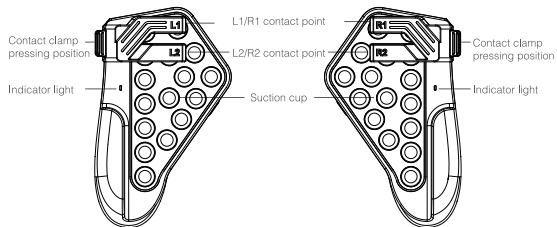

EQUIPMENT LAYOUT

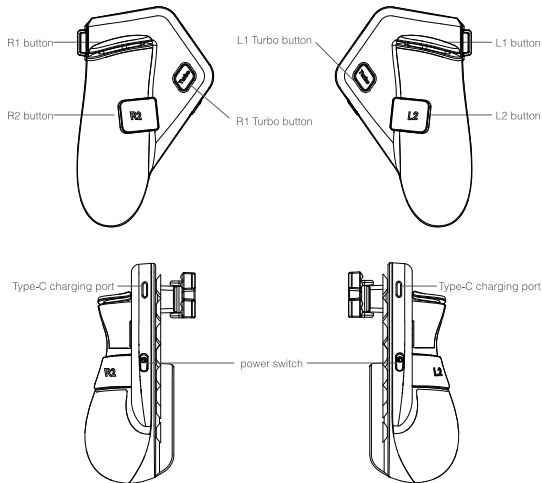

POWER ON AND OFF

Power on: Flip the power switch to the upside

Shut down: Flip the power switch to the downside


ON  OFF

INSTRUCTIONS

Step 1: Install F7 on the tablet (take the left gamepad as an example)

1. Press the contact clip to open it;
2. Place the Tab in your suitable position and press the Tab so that the suction cup is tightly combined with the bottom of the Tab (Attach the anti-drop sticker on the F7 suction cup on the back of the tablet to make the F7 bind to the tablet more firmly);
3. Release the contact clip slowly and ensure that the two black contacts on the contact clip are tightly in contact with the tablet screen;

1 press / 3 release

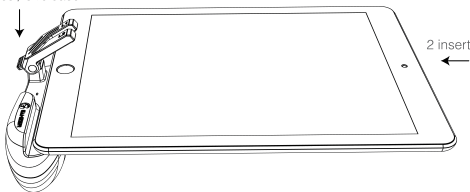

Step 2

Enter the game's custom Settings, move the shoot, aim or jump virtual buttons to the contact position, remove the overlapping virtual buttons, make sure that the contact position corresponds to only 1 virtual button and save the Settings.

Step 3

After setting, turn off the screen and turn it on again to play the game.

TURBO MODE

The "Turbo" buttons on the back of the left and right gamepad control the burst frequency of the L1 and R1 buttons respectively.

By pressing the "Turbo" button, it can cycle through the 5 gears shown on the table, and the indicator light will change accordingly in different gears.

Indicator status	Function Description
No lighting	No Turbo
Green	3 Turbos
Orange	6 Turbos
Red	9 Turbos
Flashing green	Recording Turbo

HOW TO SETUP COMBOS

Long press the corresponding Turbo button for 3 seconds to enter setup mode, and the indicator light flashes in red.

Press "L1" or "R1" to start setup. After the setup is completed, press the Turbo button again, and the red light will go out, indicating setup successful

Long press the "L1" or "R1" button to trigger the setup cycle.

CHARGING

Use the supplied charging cable to connect to the F7 charging port and 5V power adapter (not included)

BATTERY INDICATOR

Indicator Status	Explanation
Red flashing	Charging
Red flashing fast	Less than 10% power
Steady green	Charging completed

SCREEN OUT CORRECTION

During use, if the buttons are not responding/breaking/failure, etc., try to turn off the phone screen and turn it back on to recover.

COMBO KEY FUNCTION

Turn on: Press and hold the Turbo + L2 or R2 button for 3 seconds at the same time, the green indicator light flashes 3 times;

Turn off: press and hold the Turbo + L2 or R2 key for 3 seconds at the same time, the red-light flashes 3 times;

Note: When the gamepad is restarted, the L2/R2 function is enabled by default.

⚠ NOTICE Please read this Precautions carefully.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

パッケージ内容

- F7ゲームパッド
- GameSirシール
- Type-C 充電ケーブル
- 取扱説明書
- 合格证
- 剥離防止シールx2

対応タブレットPCサイズ

長さ:無制限


幅:無制限

厚さ:6~12mm


対応のゲーム

仮想ボタンがカスタマイズ可能なゲーム

各部の名前

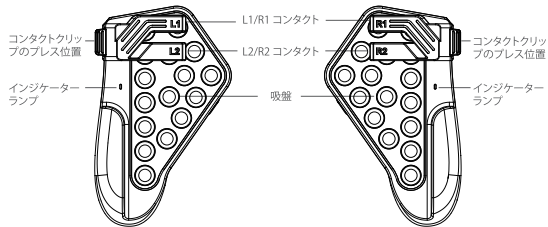

各部の名前

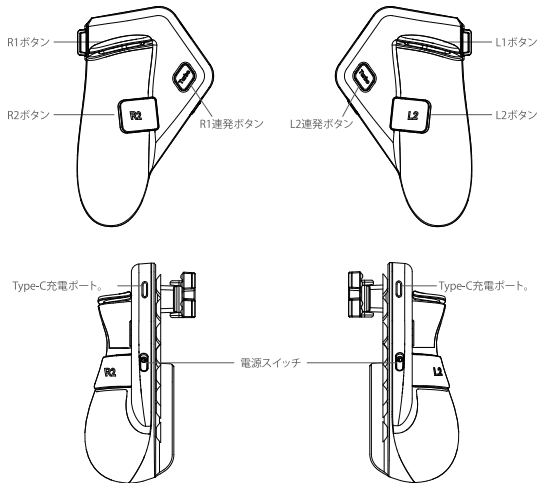

電源のON/OFF

ON:電源スイッチをオンにする

OFF:電源スイッチをオフにする


ON  OFF

取扱説明書

手順1:F7をタブレットPCに取り付ける(左のゲームパッドを例にして)

- 1.コンタクトクリップを押して開いた状態にします。
- 2.自分の使用習慣に合った位置を確認し、表示されている位置にタブレットPCを入れ、タブレットPCの底に吸盤がしっかりと接着するようにタブレットを押してください。(F7の吸盤位置でタブレットPCの裏面に付属の剝離防止シールを貼り付けて、F7をよりしっかりとタブレットPCに密着させます)。
- 3.コンタクトクリップをゆっくりと離し、コンタクトクリップの両方の黒い接点がタブレットの画面に密着していることを確認してください。

1押す/3放す

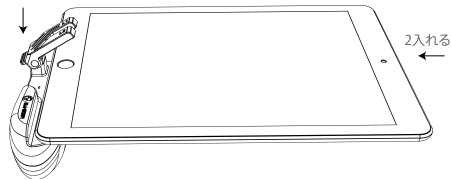

手順2:

ゲームのカスタマイズ設定に入って、移動射撃、照準、ジャンプなどの仮想ボタンを接触位置に移動し、重なった仮想ボタンを移動させる
接触位置が1つの仮想ボタンのみに対応していることを確認し、設定を保存します。

手順3:

設定が完了したら、タブレットPCの画面をオフにしてから再度オンにしてゲームを開始します。

連射モード

後ろの「Turbo」ボタンで、L1とR1ボタンの連射回数を切り替えることができる。

「Turbo」ボタンを押すと、5段階に連射モードを切り替えできて、切り替える時にインジケータの色が変わり、現在の連射モードを示します。

インジケータランプ	説明
消灯	連発なし
緑色点灯	3連発
橙色点灯	6連発
赤色点灯	9連発
緑色点滅	カスタマイズモード

カスタマイズモードの設定方法

カスタマイズモードとは、連射間隔と連射回数をカスタマイズしたの連射モード。

「Turbo」ボタンを3秒長押ししてカスタマイズモードに入り、ランプが赤色で点滅します。
L1/R1ボタンを押し、カスタマイズで連射間隔と連射回数を録し、記録完了したと、「Turbo」ボタンを押します。ランプが消灯すると、記録成功します。

L1/R1ボタンを長押しすると、記録された動作がトリガーすることができます。

充電

充電ケーブル(付属)を5V電源アダプタ(別売)に接続し、F7を充電します。

インジケータランプ	バッテリーの状態
赤色点滅	充電中
赤ですばやい点滅	バッテリーの残量が10%以下
緑色点灯	充電完了

オフスクリーン修正

使用中にボタンが反応しない/故障する場合は、スマートフォン画面をリスタートしてもう一度やってみてください。

背面ボタン機能

オン:「Trubo+ L2/R2」ボタンを 3 秒長押し、ランプが緑色で3回点滅します。

オフ:「Trubo+ L2/R2」ボタンを 3 秒長押し、ランプが赤色で3回点滅します。

ご注意:ゲームパッドを再起動するとL2 /R2機能がデフォルトでオンになります。

▲ ご注意:保護者の方へ必ずお読みください。

- 小さいな部品がありますので3歳未満のお子様には絶対に与えない ください。
- 乳幼児の手の届くところに置かない ください。万一飲み込んだ場合は、すぐに医師に相談してください。
- 火気のある場所では絶対に使用しない ください。
- 長時間直射日光当てたり、高温となる場所に置かない ください。
- 本品を湿気やホコリの多いところに置かない ください。
- 本品に物を当てたり、落下させるような強い衝撃を与えない ください。
- 故障の原因になりますので、USB端子を直接手で触ない ください。
- ケーブル部を強く曲げたり引っ張ったりしない ください。
- お手入れの際には、乾いた柔らかい布を使用してください。
- ベンジン、シンナーなどの薬品は使用しない ください。
- 分解や修理、改造は絶対にしない ください。
- 本来の目的以外には使用しない ください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。
- 光学式ライトの光を直接見ない ください。強い光より、目を痛める可能性があります。

포장내용

- F7게임조이스틱
- GameSir스티커
- Type-C충전코드
- 사용설명서
- 합격증
- 탈락방지스티커x2세트

호환되는태블릿사이즈

길이 : 제한없음


넓이 : 제한없음

두께 : 6—12mm


호환하는게임

가상버튼으로모바일게임을사용자가지정할수있습니다.

설비배치

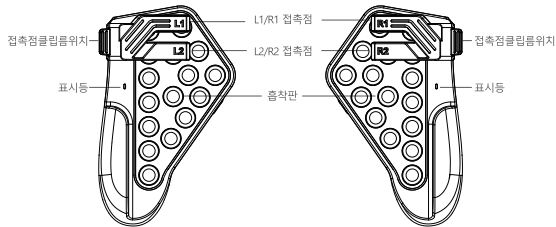

설비배치

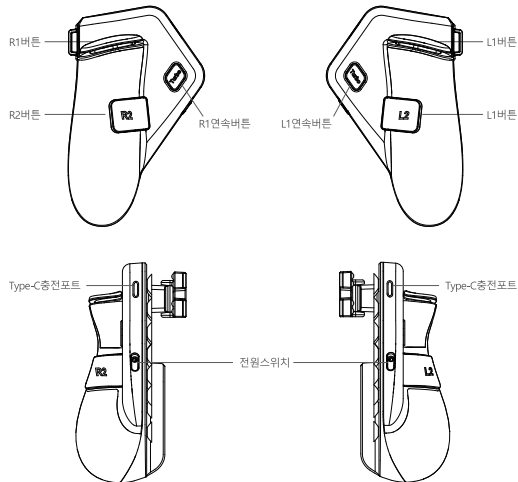

켜기및끄기


켜기 : 전원스위치를 ① 한측으로이동
끄기 : 전원스위치를 ① 다른한측으로이동

ON  OFF

사용설명

제1단계 : F7를 태블릿에 설치합니다 (좌측 조이스틱을 예로함)

1. 접착점 클립을 눌러 벌어지게합니다 ;
2. 자신의 사용 습관에 적합한 위치를 찾고 태블릿을 도면에 표시된 위치에 삽입하며 또한 태블릿을 눌러 흡착판과 태블릿 아래 부분을 밀착 시킵니다(설비와 함께 부송된 탈락 방지 스티커를 태블릿 뒷면 F7 흡착판 위치에 부착하여F7 와 태블릿을 튼튼히 결합시킴) ;
3. 접착점 클립을 천천히 놓으며 접착점 클립상의 2개 흑색 접착점이 태블릿 스크린과 밀착하였음을 확보 하십시오 ;

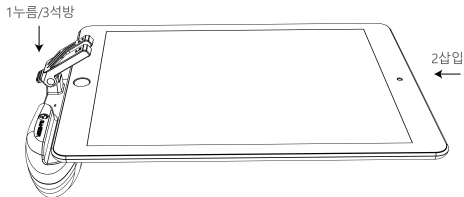

제2단계

게임의 사용자 지정 설정에 진입하여 이동 사격, 묘준 또는 점프하는 가상 버튼을 접착점 위치로 이동하고 중첩된 가상 버튼을 제거하여 접착점 위치가 오직 1개 가상 버튼과 대응함을 확보한 후 설정을 저장 합니다.

제3단계

설정 완성후, 휴대폰 스크린을 끄고 다시 켜면 게임을 진행할 수 있습니다.

연속 모식

좌우 조이스틱 뒷측의 "Turbo" 연속 버튼으로 L1및R1 버튼의 연속 발송 주파수를 각각 제어합니다.

"Turbo" 버튼을 눌러 우측 도면5개 단 사이에서 순환 전환할 수 있으며 서로다른 단에서 표시등이 해당 변화가 나타납니다.

표시등 상태	기능 설명
꺼짐	연속 없음
녹색	3연속
등색	6연속
적색	9연속
녹색 깜박	연속을 녹화

연속을 녹화하는 방법

대응하는 연속 버튼을3초간 길게 누르면 녹화 모식에 진입하고 표시등이 적색으로 깜박입니다. "L1" 또는 "R1"버튼을 눌러 녹화를 시작하며 녹화 완성 후 다시 연속 버튼을 클릭하면 적색등이 꺼지고 녹화 성공을 표시합니다
"L1" 또는 "R1"버튼을 길게 눌러 녹화 동작을 순환으로 촉발 가능합니다.

충전

설비와 함께 부송된 충전 코드로F7충전 포트 및5V 전원 어댑터를 연결 합니다.
(부송하지 않음)

전력을 요해

표시등 상태	설명
적색 깜박임	충전중
적색 빠른 깜박임	10% 전력 미만
녹색 켜짐	충전 완성

스크린 끄기 교정

사용 과정에서 버튼이 반응없음/접촉 차단/무효 현상이 발생한 경우, 휴대폰 스크린을 끄고 다시 시작하면 회복됩니다.

뒷버튼 기능

켜기 : 연속 버튼+L2또는R2버튼을 동시에 3초간 길게 누르면, 표시등이 녹색으로 3회 깜박입니다 ;

끄기 : 연속 버튼+L2또는R2버튼을 동시에 3초간 길게 누르면, 표시등이 적색으로 3회 깜박입니다 ;

주: 조이스틱이 다시 켜진 후 , L2/R2기능이 디폴트로 켜집니다.

▲ 한국KC 경고문구:

- 1.강렬한 진동을 피하고 사사로이 해체,개조,수리를 하지 마십시오.
- 2.습한곳,고온,오일과 연기가 있는 장소를 피하여 보관하십시오.
- 3.물 혹은 기타 액체가 컨트롤러 내부로 들어가면 컨트롤러 기능에 영향을줄수 있습니다.
- 4.배터리가 내장되었기에 컨트롤러를 불속에 넣지 마십시오,폭박할 수있습니다.
- 5.본 제품충전 전압은 USB3.7-5.5V, 직류전원(보통 안드로이드 휴대폰충전전원이면 바로 사용할 수 있음)이고, 아닐 경우 충전에실패하거나,제품 훼손을 초래할 수 있습니다.
- 6.어린이는 성인의 보호하에 본 제품을 사용하십시오.
- 7.임의의 품질 문제거나 건의 사항은 판매업체거나 소비자 상담실에연락하십시오,연락처는 제품 길면 포장에 있습니다.

包装内容

- F7游戏手柄
- GameSir贴纸
- Type-C 充电线
- 使用说明书
- 合格证
- 防脱贴纸 x2套

兼容的平板电脑尺寸

长度:不限


宽度:不限

厚度:6—12mm


兼容的游戏

虚拟按钮可自定义移动的游戏

设备布局

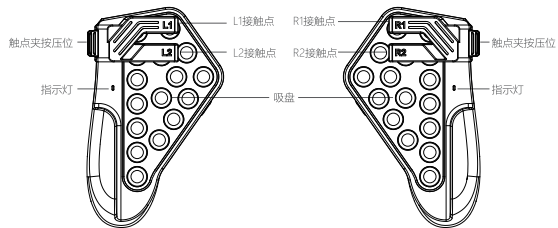

设备布局

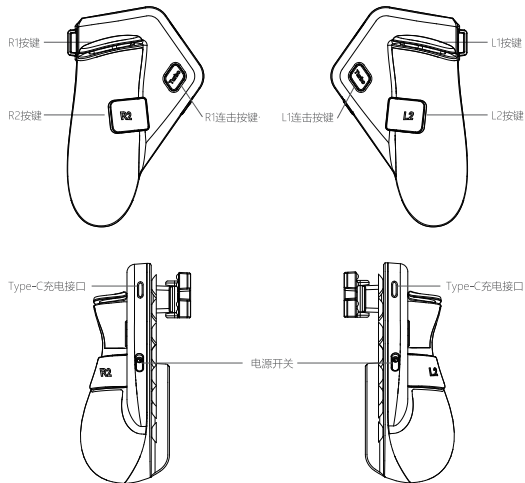

开机与关机

开机: 拨动电源开关至  一侧


关机: 拨动电源开关至  另一侧

ON  OFF

使用说明

第一步: 将F7安装至平板电脑上 (以左手柄为例)

1. 按压触点夹使其张开;
2. 找到适合自己使用习惯位置将平板放入图示位置, 并按压平板使吸盘与平板底部紧密结合 (将随机附送的防脱贴纸粘贴在平板电脑背面F7吸盘位置可以使F7与平板电脑结合得更牢固);
3. 缓慢释放触点夹并确保触点夹上两个黑色触点都能与平板电脑屏幕紧密接触;

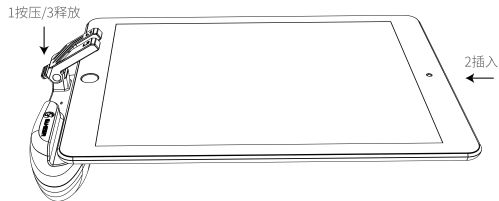

第二步

进入游戏自定义设置, 移动射击, 瞄准或跳跃的虚拟按钮至触点位置, 挪开重叠的虚拟按钮, 确保触点位置仅对应1个虚拟按钮, 保存设置。

第三步

设置完成后, 将手机屏幕关闭后重新打开, 即可进行游戏。

连击模式

左右手柄背部的“Turbo”连击按键, 分别控制L1及R1按键的连发频率

通过按压“Turbo”按键, 可在右图5个档位间循环切换, 不同档位时指示灯会相应变化。

指示灯状态	功能说明
不点亮	无连击
绿色	3连击
橙色	6连击
红色	9连击
绿色闪烁	录制连击

如何录制连击

长按对应连击按键3秒, 进入录制模式, 指示灯红色闪烁, 按下“L1”或“R1”键开始录制, 录制完成后, 再次点击连击按键, 红灯熄灭表示录制成功, 长按“L1”或“R1”键即可循环触发录制动作

充电

使用随机附送的充电线连接F7充电接口及5V电源适配器 (未附送)

了解电量

指示灯状态	说明
红色闪烁	充电中
红色快速闪烁	低于10%电量
绿色常亮	充电完成

熄屏校正

使用过程中, 按键若出现没反应/断触/失灵等现象, 尝试将手机屏幕关闭后重新打开进行恢复

背键功能

开启: 同时长按连击键+L2或R2键3秒, 指示灯绿灯闪烁3次;

关闭: 同时长按连击键+L2或R2键3秒, 指示灯红灯闪烁3次;

注: 当手柄重新开机后, L2/R2功能默认开启。

⚠ 注意事项

1. 若商品有质量问题, 请首先联系我们的客服进行登记。

联系方式:

QQ: 800082537

电话: 400-8828035(时间: 9:00-18:00)

官网: www.xiaoji.com

出品: 广州小鸡快跑网络科技有限公司

地址: 广州市天河区建业路华翠街68号301A-1

2. 如需退、换商品, 请确保商品完好无损(包括商品外包装、附赠品、说明书、售后卡、标签等), 不影响二次销售。

3. 如要保修商品, 请务必完整填写用户姓名、联系电话、联系地址, 正确填写售后要求与详细说明售后原因, 将售后卡随货寄回(如不完整填写保修卡信息, 恕无法提供任何售后服务)。

保修卡

(售后政策: 非人为损坏, 3个月包换、1年保修)

用户姓名

联系电话

联系地址

售后要求



退



换



保修

售后原因

订单编号

(注: 非小鸡官网途径购买的产品, 售后问题请直接与购买商家联系)

