



구성품

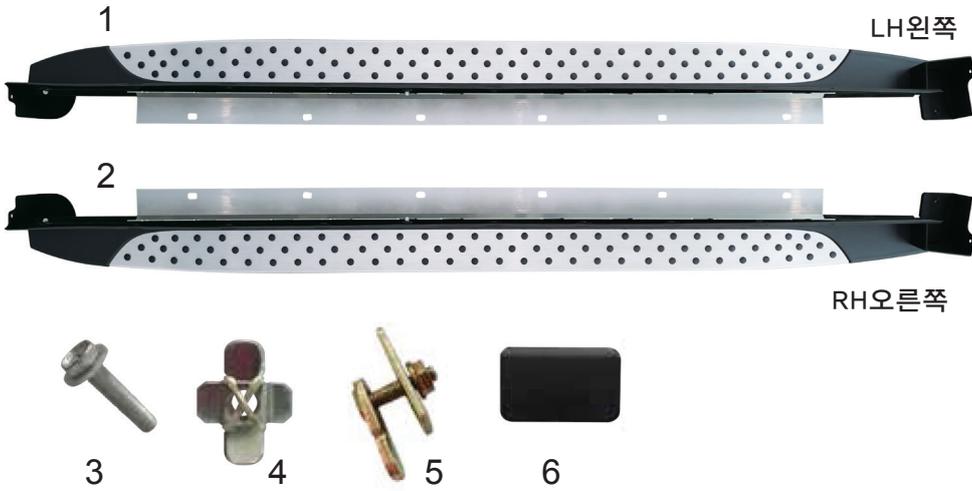

1	Side Step (LH / RH)	2
2	Bracket - AL (LH / RH)	2
3	M10 BOLT	16
4	M10 CROSS NUT	16
5	M10 T-BOLT / NUT	12
6	공용캡	16
7	FASTER 여분	2
8	M10 BOLT/CROSS NUT 여분	2
9	Manual	1

장착시 필요공구

코너 드라이버, 십자드라이버, 10 미리 박스,스패너, 전동드라이버, 펀치, 일자드라이버, 십자 주먹드라이버, 리무버,안전장갑

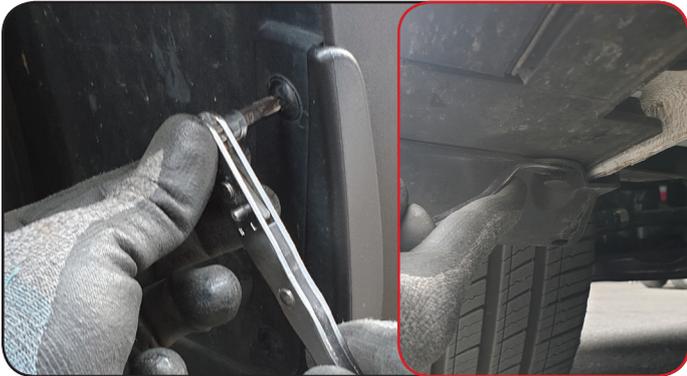

1. Remove screw bolt and mud guard, keep the bolt.



2. 2,Remove screw bolt. Keep the bolt



3. Check garnish bottom side link point and remove plastic fastnner



4. Remove mounted plastic fastnner



5. Pull up garnish strongly



6. Remove plastic fastnner



7. Remove fastnner



8 Remove bottom side fastner .



9. Remove cap except fron and rear point, re-use



10. Cut silicon slicly



11. Cut pointed part silicon slice



12. Remove rubber strip from side garnish and install to side step



11. Install nut to hole



12 Mount nut to hole as picture' s red point



13. Match the side step on car



14 Mount bolt to nut , not too tightly




15. Put T bolt to hole and fasten nut tightly



16. Hit Front and middle plastic fastner mounted part strongly



17. Fasten bolt tightly

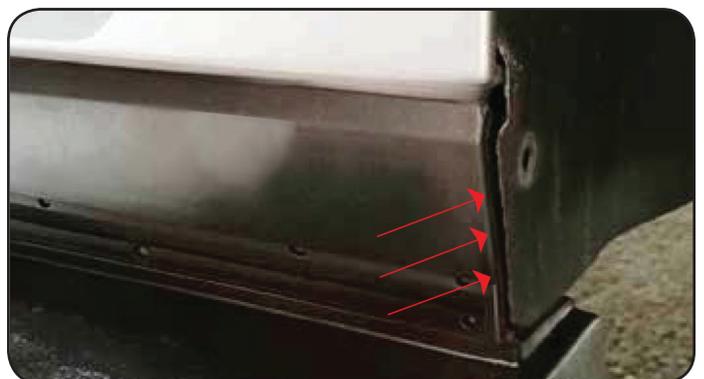

18. put pointed part to inside



19. Patch cap to each hole



20. Can put cap to side step bottom hole



21. Fasten front and rear bolt to each hole