

INSTALL INTRODUCE




1. CHECK ALL ACCESSORY BEFORE INSTALL



2. REMOVE TRUNK COVER PLATE




3. LOOKING FOR THE ORIGINAL CAR INTERFACE

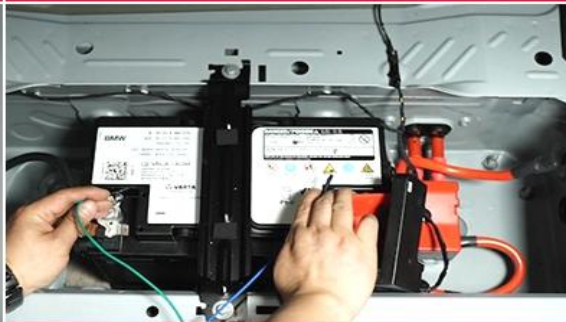

4. SPOILER CONNECT BATTERY



5. RAISE UP SPOILER

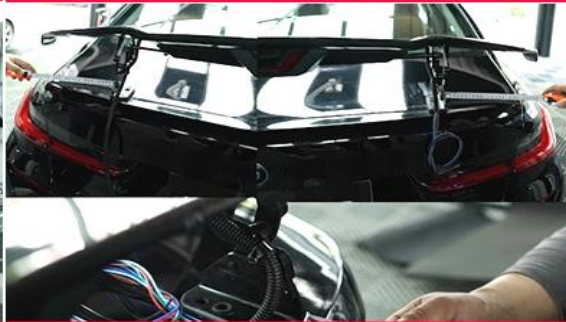


6. AIM THE SPOILER IN THE MIDDLE



7. MARK LOCATION BY PEN



8. MAKE SURE THE HOLE LOCATION

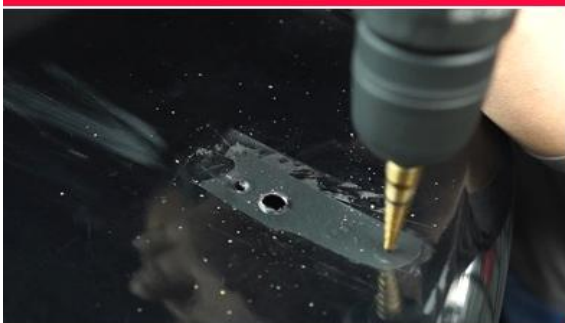


9. PUNCHING BY PROVIDE BORING CROWN




10. SANDING HOLE AND COVER BY INK PEN



11.ADD THE STIFFENER IN TRUNK BACK SIDE

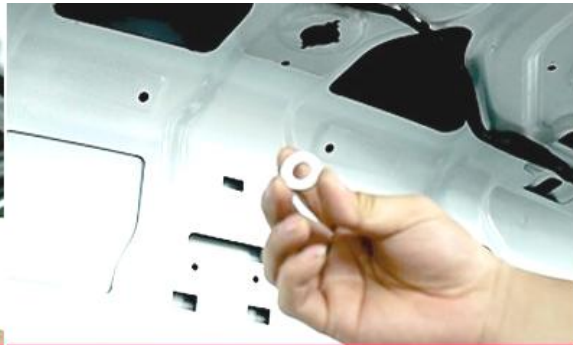


PUT SHIM IN RIVETING

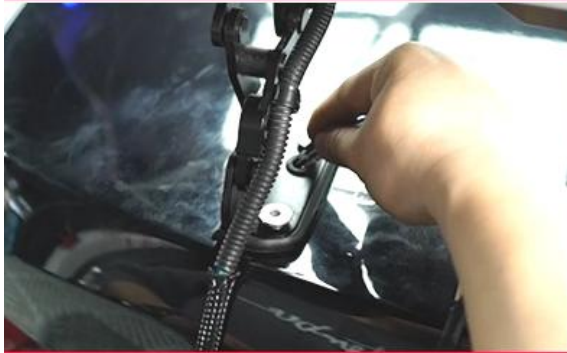

12. INSTALL SPOILER SCREW



13. FIXED WIRE

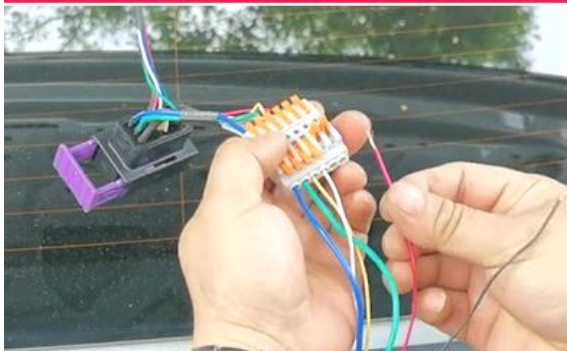


14. FOLLOW INSTALL INTRODUCE PAPER CONNECT THE WIRES ACCORDING TO THE COLOR



15. FINAL CONNECT POWER BATTERY



16.CONNECT COMPUTER BOARD
FINALLY AND FIXED

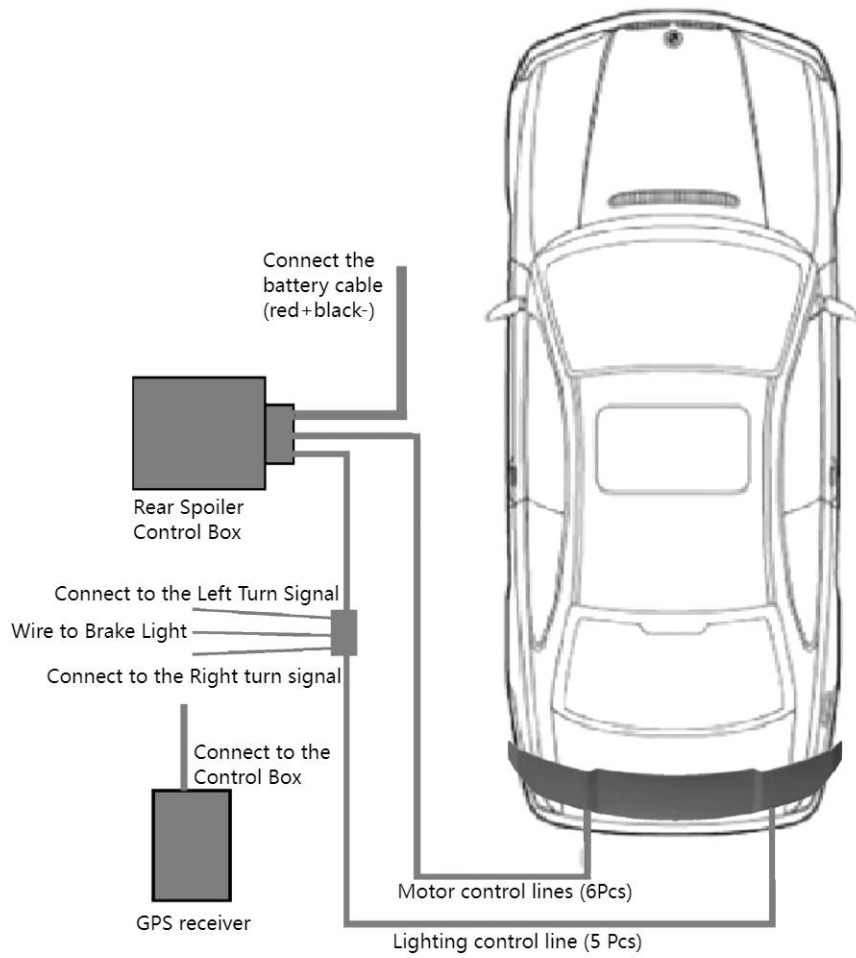

Wire blue to the left turn signal
Wire white to the right turn signal
Wire green to the brake light

