

LEVELING LIFT KITS


9F032

1994 + RAM 2WD Truck Front leveling lift kit installation instructions



Note : The actual thickness \neq lift height .

1. Raise the vehicle and remove wheels. Always ensure proper safety procedure is followed when working underneath your car, including the use of jack stands or other equipment.

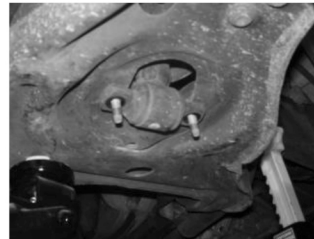

2. Remove brake calipers.



5. Disconnect lower shock mounting bolts.

6. Disconnect upper sway bar end links and bushings.



3. Disconnect ABS line at or behind fender liner.

4. Disconnect upper shock mount and bushing.



7. Disconnect tie rod end nut and break loose with hammer.



8. Loosen upper ball joint nut and break loose with hammer.



9. While supporting suspension, remove upper ball joint nut.

10. Slowly lower suspension and remove coil spring.

11. Remove upper isolator and replace with new lift spacer. Don't install the factory upper isolator.



12. Reinstall coil spring and properly fix on lower control arm.

13. Carefully lift suspension enough to engage upper ball joint.

14. Reconnect brake calipers, sway bar end links, and tie rods.

15. Reattach the wheel.

In the end, check all hardware is mounted at correct torque settings. Recheck all work. Re-tighten Control Arm mounting bolts. Test driving, then have a trained technician perform an alignment.



Thank you for the purchases!

It is our honor to help you. So please write us about what you think and what you need. We will reply you ASAP and try our overwhelming best to help you solve the problem. Please feel free to contact us via eBay message or Amazon tools.

Email: speed@nbgoldenlion.com

Amazon:

1. Visit www.amazon.com/your-orders
2. Find your product
3. Click on "contact seller"
4. Include your order #

eBay:

1. Visit www.ebay.com
2. Click on "My eBay"
3. Find your product
4. Click on "More actions"
5. Click on "Contact seller"