

LEVELING LIFT KITS

9K818



Polaris Ranger leveling lift kits installation instructions

Please note that it is recommended that all kits be installed by a professional shop.

FRONT

1. Raise front off ground; secure with jack stands.



2. Remove Wheels.

3. Disconnect the Sway Bar from Sway Bar Links.



4. Disconnect the lower shocks.

5. Install the Front Brackets with the new bolts. Pay attention to the direction of

bracket slope.



6. Install Shocks to Front Brackets with stock hardware.



7. Tighten Sway Bar to Sway Bar Links.


8. Tighten all hardware completely (make sure all the hardware tightened). Reinstall Wheels.

REAR

1. Raise rear off ground; secure with jack stands.

2. Remove Wheels.

3.loosen Sway Bar from Sway Bar Links.

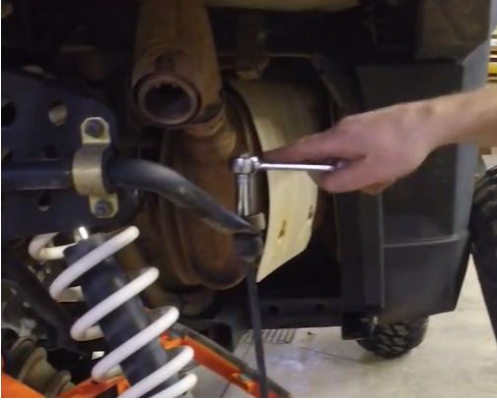

4.Disconnect the lower shocks.

5.Install the rear Brackets with the new bolts. Pay attention to the direction of bracket slope.



6.Install Shocks to Rear Brackets with stock hardware.



7.Tighten Sway Bar to Sway Bar Links.

8.Tighten all hardware completely.
Reinstall Wheels.

We suggest that re-tightening all bolts and nuts on the lift kits after 100-200 miles of driving.

Thank you for the purchases!

It is our honor to help you. So please write us about what you think and what you need.

We will reply you ASAP and try our overwhelming best to help you solve the problem. Please feel free to contact us via eBay message or Amazon tools.

Amazon:

- 1.Visit www.amazon.com/your-orders
2. Find your product
3. Click on “contact seller”
4. Include your order #

eBay:

- 1.Visit www.ebay.com
2. Click on ”My eBay”
- 3.Find your product
4. Click on “More actions”
5. Click on “Contact seller”