

LEVELING LIFT KITS

9K017 / 9R025-25

Toyota 4Runner leveling kit installation instructions



Actual thickness \neq Real lift height. Professional installation and alignment is highly recommended.

1. To begin with, please remove the wheels.



2. Using a 12mm wrench to remove bolt holding the brake line bracket to frame.



3. Then find a 17mm socket and use this kit to disconnect the sway bar links.




4. Using a 17mm socket remove the rear lower shock hardware.



5. Using a jack stand, lower the rear Axle and remove the factory coil spring.



6. Place the new lift spacer on top of the spring and place the spacer bump stop on top of the lift spacer.

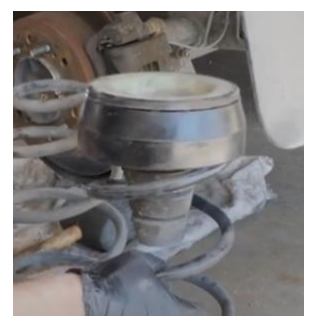

7. Make sure the coil spring fits into the spring seat correctly.



8. Reinstall the sway bar link brake line bracket and lower shock bolt.



9. Repeat instruction on opposite side.

10. Reinstall the all wheels and torque to appropriate specs after installation. We recommended taking your vehicle in for a full alignment.

In the end, check all hardware is mounted at correct torque settings. Recheck all work. Test drive, then have a trained technician perform an alignment.



Thanks For Purchase !

Return Policy

100% brand guarantee

Reply within 24hrs

Return and Refund accepted even installed or pass the return date or any other quality problems. Expecting your sharing of installation experience! As a dealer or wholesaler, please do feel free to contact us for more cooperation. Contact us with any issues on installation, missing parts, not fit. Please feel free to contact us via eBay message or Amazon tools.

Amazon:

1. Visit www.amazon.com/your-orders
2. Find your product
3. Click on “contact seller”
4. Include your order #
5. Click on “Contact seller”

eBay:

1. Visit www.ebay.com
2. Click on ” My eBay”
3. Find your product
4. Click on “More actions”