

Installation & CARE

Tools Required

13mm Socket
Ratchet
Torque Wrench

Part List

- ① ×2 Step Bar
- ② ×6 Bracket
- ③ ×12 M8 Hexagon Bolt
- ④ ×12 M8 Flat Washer
- ⑤ ×12 M8 Hexagon Nut
- ⑥ ×12 M8 Hexagon Bolt (on step bar)
- ⑦ ×12 M8 Flat Washer (on step bar)



Notes


Read this instruction carefully before starting installation.
Proper tools will improve the quality of installation and reduce the time required.
If missing parts or any damage found, please take a picture, and contact us.

Step 1:

1. Locate (3) mounting positions each side.
2. There are 4 mounting positions each side, we will use the 1st, 2nd, 4th.
3. Clean the sealant and dirt around mounting positions.
4. Remove rubber plugs and clean factory threaded inserts.


Step 2:

1. Attach bracket to the rocker panel and secure with (2) M8 hex bolts, (2) M8 flat washers.
2. Repeat to install other brackets, do not fully tighten.

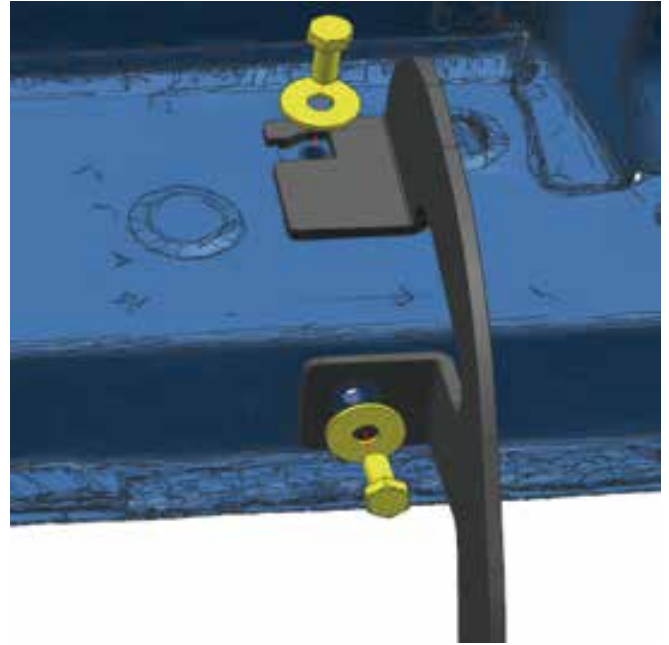


Step 3:

1. Remove (6) M8 hex bolts and (6) M8 flat washers from the back of step bar.
2. Slide mounting tracks to proper positions.
3. With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets with (6) M8 hex bolts and (6) M8 flat washers.
4. Repeat to install the other side step bar, do not fully tighten.

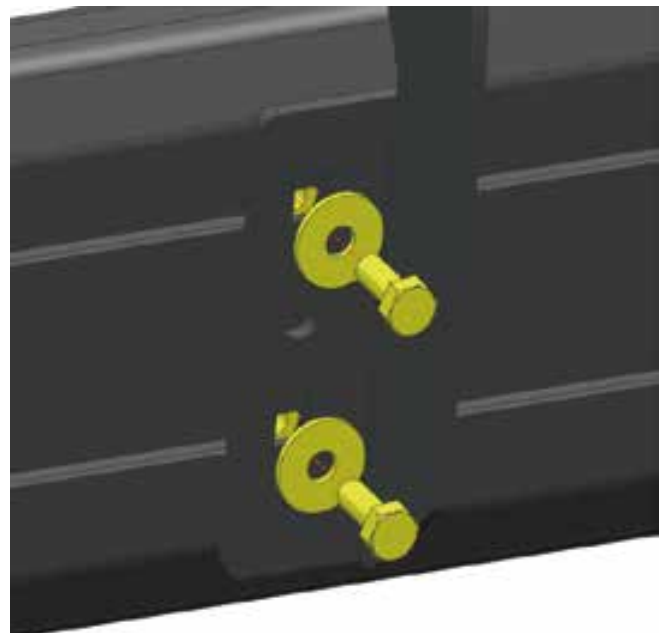

Step 4:

1. Tighten M8 hex bolts on vehicle with 15 ft. lbs. torque.
2. Adjust the step bar to level and tighten M8 hex bolts with 15 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

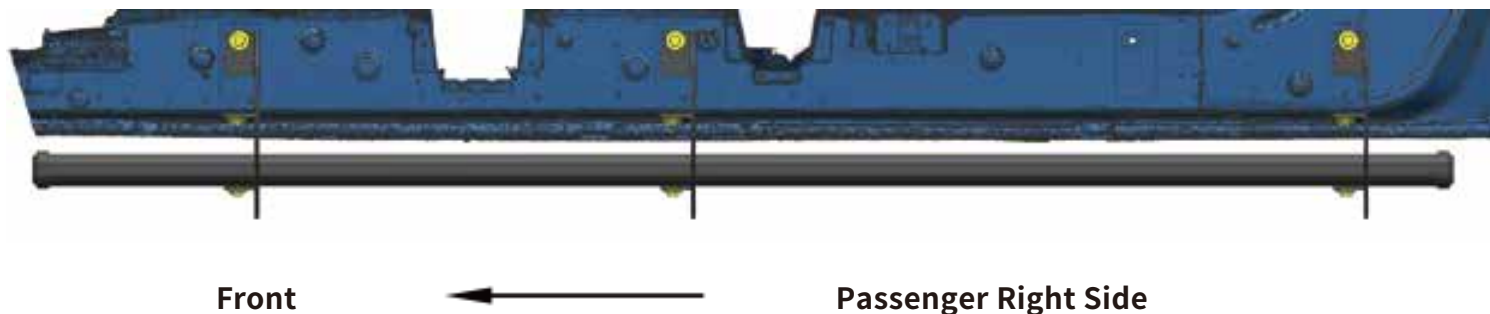

Contact us

If you have any questions regarding the installation of your product, just give us a call Monday through Friday from 8:00 AM-5:00 PM Pacific time

Steps for reference

- ☆Log into your My account.
- ☆Go to My account, select Purchases and find this order.
- ☆Click on "Contact Seller"

Thank you for selecting Running Board.
Your new running board are custom molded to fit your specific vehicle.