INSTALLATION INSTRUCTION

DESCRIPTION: 3" BULL BAR FOR TACOMA 05-15


Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affection for your fitting.


PART LIST

NO	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
1	Bull Bar	1		7	LARGE WASHER	12	ф 10*30*3. 0
2	Bracket	2		8	SPRING WASHER	6	ф 10
3	Bracket	2		9	HEXAGON NUT	6	M10
4	THICKEN WASHER	4		10	HEXAGON BOLT	2	M12*40
(5)	HEXAGON BOLT	2	M10*120	(11)	LARGE WASHER	2	ф 12*30*2. 5
6	HEXAGON BOLT	4	M10*30	(12)	SPRING WASHER	2	ф 12
REMARK: It is the same installation for left and right bracket.							

INSTALLATION PICTURE

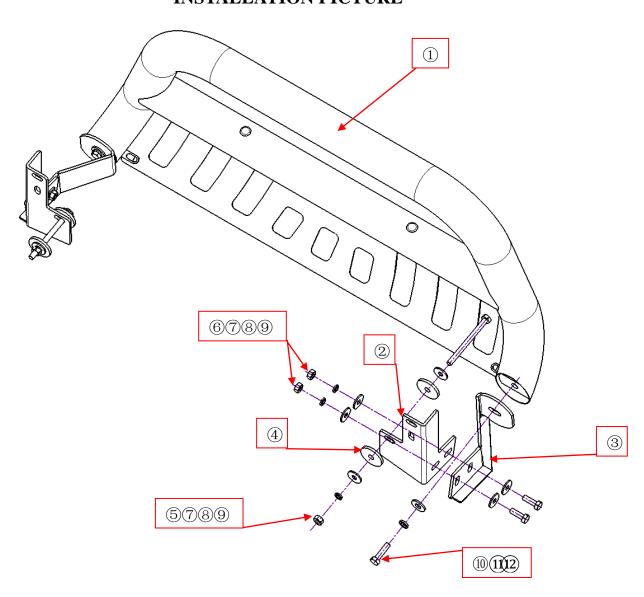

Driver Side Installation Pictured

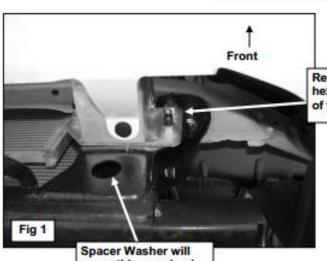

Remove (2) factory hex nuts on outside of frame


Factory hex nuts


Spacer Washer will cover this opening in the end of the frame Fig 2

Insert 12mm Spacer Washer between the Mounting Bracket and the frame



10mm x 20mm Small Flat Washer 10mm Lock Washer 10mm Hex Nut

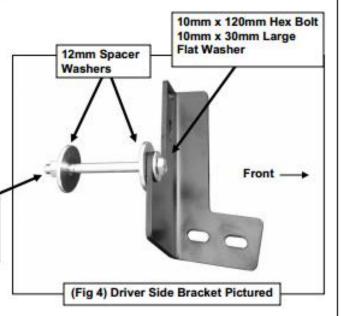

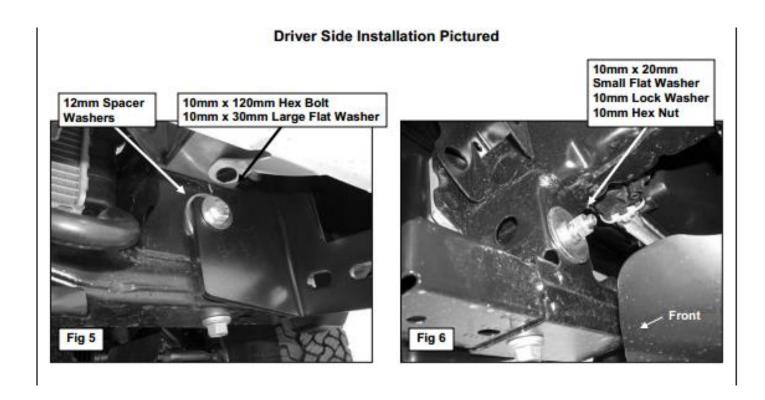

Disclaimer: Caused due to improper installation initiates some related problem and losses, are beyond our company's quality assurance.