

尺寸：85*128mm 9折页 英文在正面，中文在背面


5d 2 professional photography kit

Use instructions



English

Product list

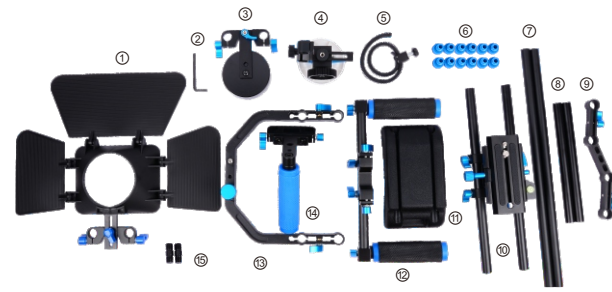


- ① Matte box (diameter 82mm) x 1
- ② L type wrench x 1
- ③ Counter weight 1kg x 1
- ④ Follow focus F0 x 1
- ⑤ Gear Belt (suit the lens blew 100mm) x 1
- ⑥ Rubber plug x 12
- ⑦ 40cm tube x 2
- ⑧ 20cm tube x 2
- ⑨ Z type bracket x 1
- ⑩ 30cm tube Mount Baseplate x 1
- ⑪ Shoulder pad x 1
- ⑫ Front Handle Grips Clamp Mount x 1
- ⑬ C type bracket x 1
- ⑭ The handle x 1
- ⑮ Conduit connector x 2

Assembly instructions

A1 Put ⑬ c type bracket in to two aluminum tube of ⑩ 30cm tube Mount Baseplate to the picture.



A2 Put ⑨ z type bracket into A1.

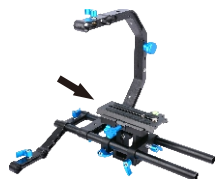

A3 Put ④ follow focus f0 into A2.




Assembly instructions


A4 Put ⑫ Front Handle Grips Clamp Mount into A3.



A5 Put ⑦ 40cm tube into A4.

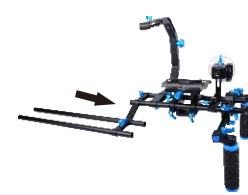

A6 Put ⑪ Shoulder pad on the 40cm tube, adjust it to a position which is suitable for human's body.

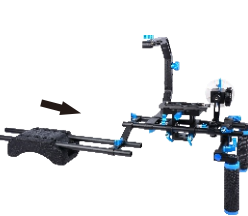

Assembly instructions

A7 Put ③ counter weight on the 40 cm tube , behind the Shoulder pad, and then twist the screw.



A8 Put ① Matte box on the A7.




A9 Put two ⑧ 20cm tube on 13 c type bracket.




Assembly instructions


A10 Put ⑥ the handle on the ⑧ 20cmtube, adjust it to a suitable distance and then lock it.

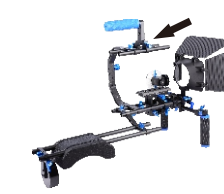

A11 A. Install the camera: first take off the quick release plate, put the camera on the quick release plate. As shown.
B. Put ⑤ Gear Belt on the lens and lock.

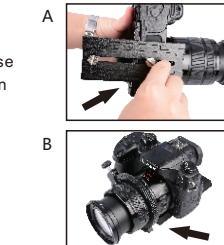

A12 Put A 11 on the Mount Baseplate of 30cm tube Mount Baseplate, the camera lens to matte box, adjust it to a fit position, tighten the button.

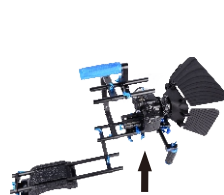

Assembly instructions

A13 According to the position of gear belt on lens to move the follow focus, match the two gears on follow focus and gear belt, then fixed it.




A14 Put ⑥ Rubber plug on the 30cm tube and 40cm tube.



A15 Tighten all the screw, Avoid the separation and loosening of the parts.



Pay attention to

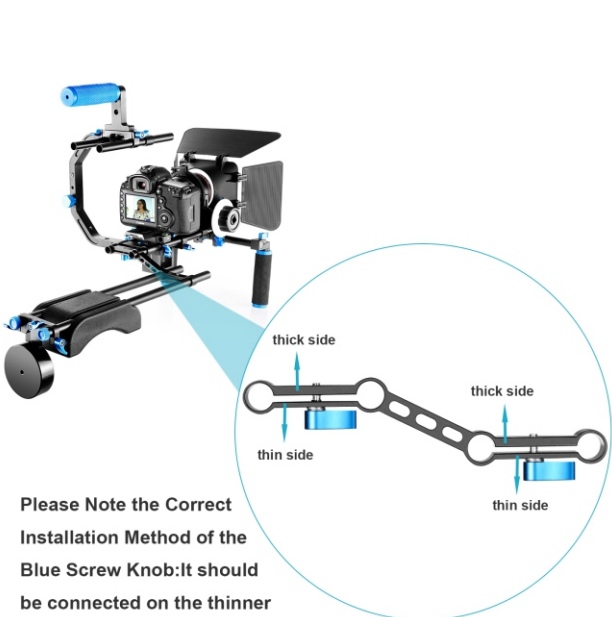

Please Note the Correct Installation Method of the Blue Screw Knob:It should be connected on the thinner side not the thicker side

Using sketch map



尺寸：85*128mm 9折页 英文在正面，中文在背面


5D2专业摄影摄像套件

使用说明书



中文版


产品清单

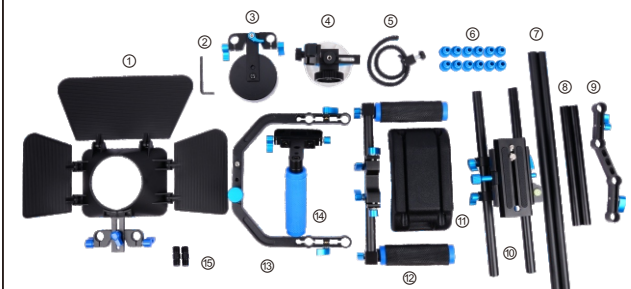


- | | |
|------------------------------|----------------|
| ① 遮光斗M1
(口径82mm) x 1 | ⑩ 20cm导管 x 2 |
| ② L型扳手 x 1 | ⑪ Z型支架 x 1 |
| ③ 砝码1kg x 1 | ⑫ 30cm管底座板 x 1 |
| ④ 跟焦器F0 x 1 | ⑬ 肩垫 x 1 |
| ⑤ 跟焦环 (适合100mm
以下的镜头) x 1 | ⑭ 前手柄底座 x 1 |
| ⑥ 胶塞 x 12 | ⑮ C型支架 x 1 |
| ⑦ 40cm导管 x 2 | ⑯ 提手 x 1 |
| | ⑰ 导管连接器 x 2 |

组装说明

A1 将 ⑩ (C型支架)按
图示位置装入 ⑫
(30cm管底座板)
的两根铝管。

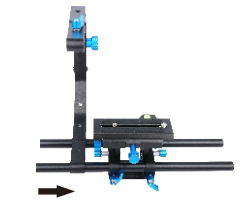

A2 将 ⑪ (Z型支架)按
图示方向装入A1。

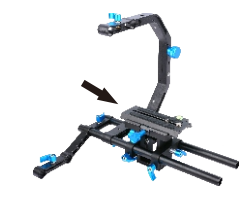

A3 将 ⑬ (跟焦器F0)按
图示方向装入A2。



组装说明


A4 将 ⑭ (前手柄底座)按
图示方向装入A3。



A5 将 ⑦ (40cm导管)按
图示方向装入A4
Z型支架上。



A6 将 ⑬ (肩垫)按图示
方向装入40cm导
管上，调节到适合
人体距离的一个大
概位置上。

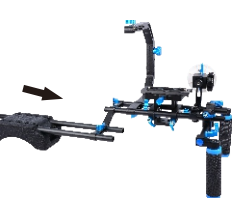

组装说明

A7 将 ③ (砝码)按图示
方向装入40cm导
管上，肩垫的后面，
然后扭紧手扭。



A8 将 ① (遮光斗M1)按
图示方向装到A7上。



A9 将2根 ⑩ (20cm导管)
装入 ⑪ (C型支架)上。




组装说明


A10 将 ⑯ (提手) 装入
⑰ (20cm导管) 上，
调节至适合人体距
离后锁紧。



A11 A. 安装相机：先取
下快装板，将相机
安装到快装板上。
如图所示
B. 将 ⑤ (跟焦环)
装到相机镜头上扭紧。

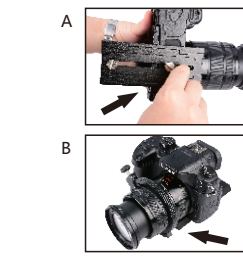


A12 将A11按图示装到30cm
管底座板上，镜头方向
要装入遮光斗内，调节
到合适的位置，扭紧
固定快装板旋钮。

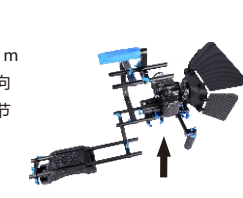

组装说明

A13 根据镜头上跟焦环的位置，
移动跟焦器，将跟焦器上的
齿轮与跟焦环上的齿轮
配合住，配合好后，固定
跟焦器手扭。

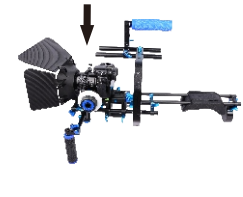


A14 将 ⑥ (胶塞) 按图示方向
装入30cm导管和40cm
导管上。



A15 将所有的手扭扭紧，以
避免各部件脱离和松动，
造成不必要的损失。



温馨提示

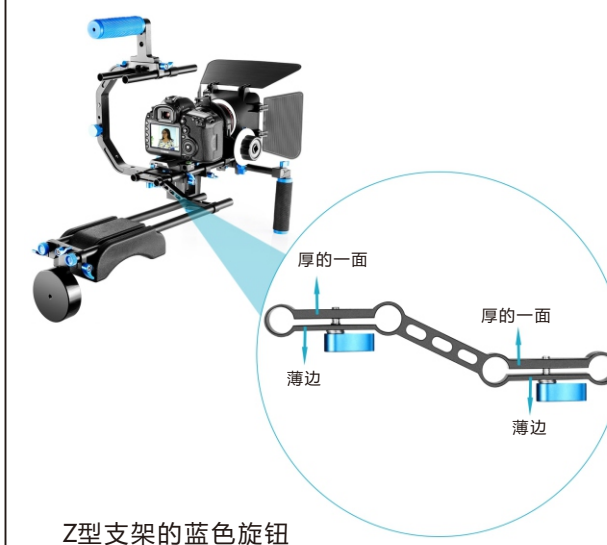

Z型支架的蓝色旋钮
正确安装方法：
它应该连接在较薄的一侧
而不是较厚的一侧。

使用示意图

