

2 PK Side Platform

Installation Guide

Suggested tools

1. 5mm T-handle hex wrench
2. 13mm ratchet wrench
3. hand drill

Before installation the side platform, please be sure that two top short boards haven't been installed, or have been taken off.

1. Align the bracket to inner corner post. If you want the side platform a little bit higher than side board, choose the first and the second holes of corner post to install the bracket. If you want the platform lower than side board, choose the second and the third holes.



2. Insert bolt from inside of corner post to shelf bracket.



3. Turn on the nylon lock nut by hand.



4. Install another bolt and nut.




5. Tighten the fasteners.



Use a 5mm hex wrench to hold the bolt and a 13mm wrench to tighten the nylon lock nut.

6. Put the shelf board on top of the 2 brackets, and drive wood screws into the board through the holes on brackets from the bottom.

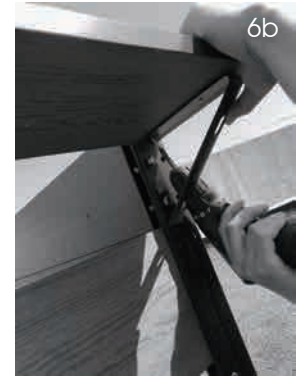

7. Install side board and cover corner posts with end caps.



8. Install another side platform follow the steps above.



Distributed by:
 Dynaforge Trading LLC St. Paul, MN55101
 Email: sales@everbloom-garden.com