



Cornerstone Raised Garden Bed 24" L x 21" W x 21" H

Installation Guide

BEFORE YOU START

Please Read the instructions carefully to familiarize yourself with every detail and step involved. Keep this manual for future reference. Find a suitable space to assemble the Everbloom Garden Bed.

You need at least $25'' \times 22''$ (63 x 56cm) for the finished product. A flat and firm area (like a garage floor or flat yard space) is perfect! The only tool you may need is a rubber mallet.

MPORTANT NOTES


Small parts are included; we advise you to keep them away from children and pets.

We also suggest having another person help you assemble. Load capacity: approximately 5 cu. ft. of soil



PARTS LIST


Cornerstone Raised Garden Bed 24" x 21" x 21"

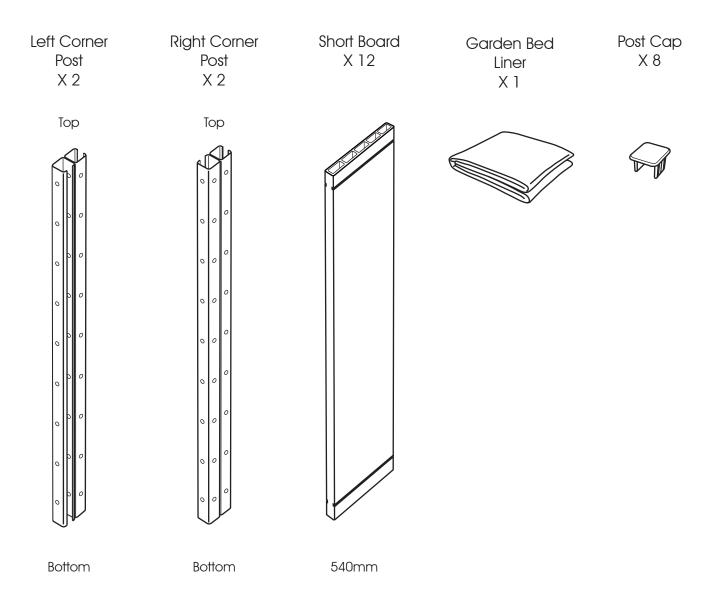

Cornerstone Raised Garden Bed 24" x 21" x 21"


Start by making sure each corner post is oriented correctly. Reference image 1. Slide one short board into the corner posts from above.

Note: The boards need to be placed in the inward "U" shape of the brackets. (Image 2).

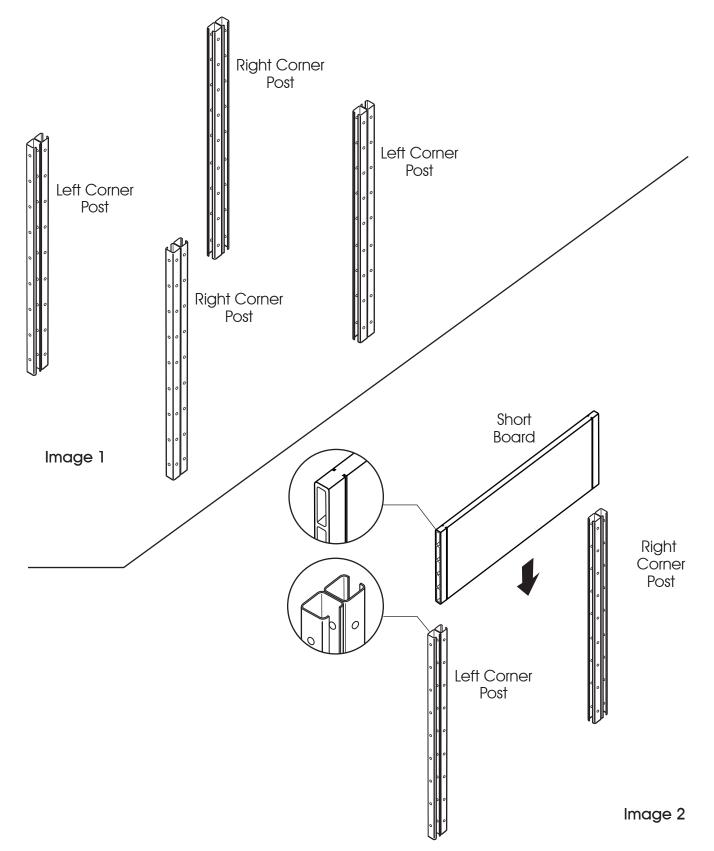


Cornerstone Raised Garden Bed 24" x 21" x 21"

Slide three short boards into the corner posts from above, as shown in Image 3.

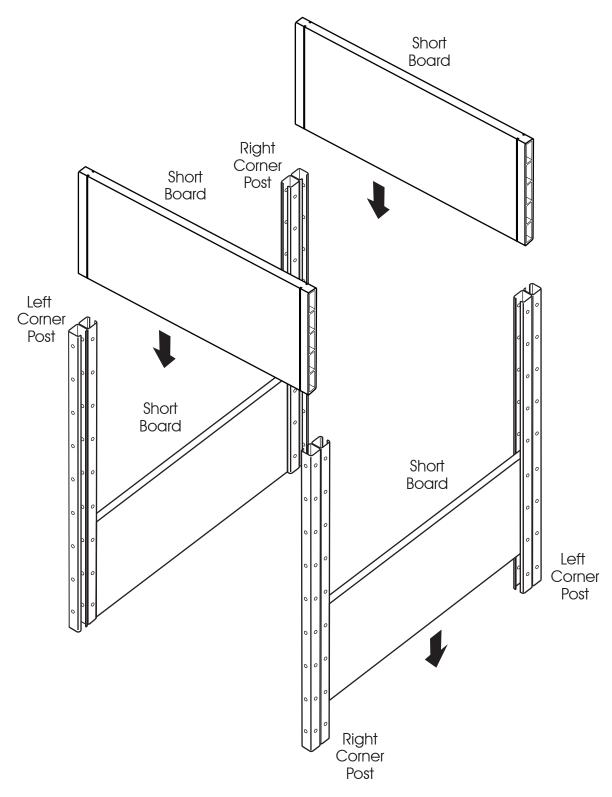


Cornerstone Raised Garden Bed 24" x 21" x 21"

Slide the rest eight boards to form the second and third layers, as shown in Image 4.

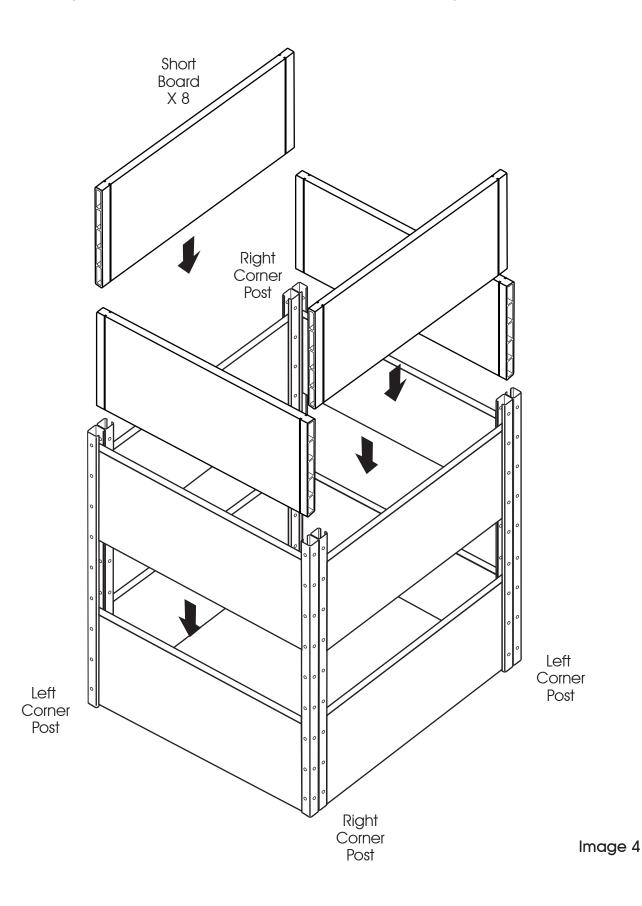


Cornerstone Raised Garden Bed 24" x 21" x 21"

If necessary, use your rubber mallet to ensure the boards are tightly in place. Cover the brackets with the 8 end caps, as shown in Image 5.

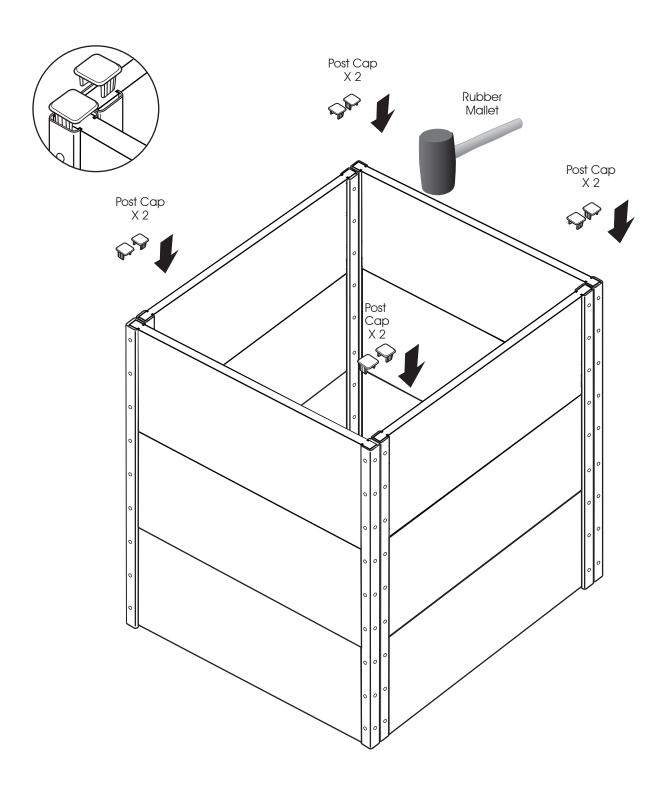

Cornerstone Raised Garden Bed 24" x 21" x 21"

Unfold the liner and cover the bottom of the garden bed, as shown in Image 6 and Image 7.

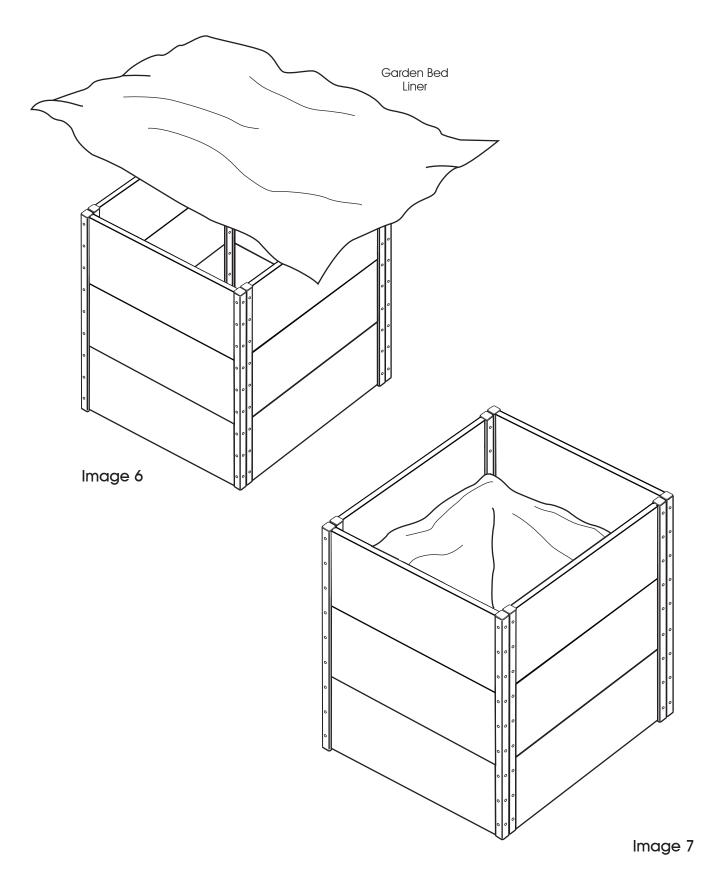

Everbloom

Questions or Comments? Email us at service@everbloom-garden.com Welcome to our website: www.everbloom-garden.com



Distributed by: Dynaforge Trading LLC St. Paul, MN55101 Email: service@everbloom-garden.com