


OUTLAND MODELS

Assembly instructions for:


Model Train Engine House (3 Stall) HO Scale 1:87 Outland Models Railway Layout

8 pieces

Note: you will need to apply medium pressure to get each piece to snap into place but do not press to hard or you risk breaking the panels.

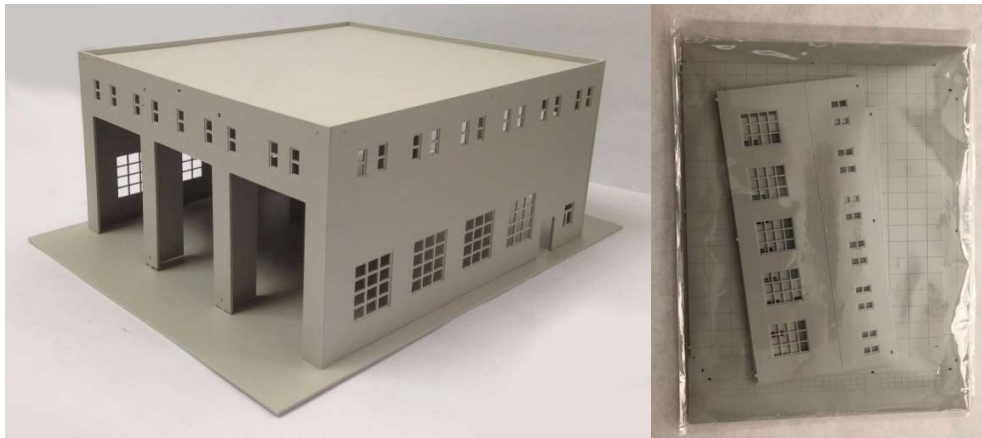


- 1. For all exterior panels ensure side with detailing around windows and on walls is facing outward.**
- 2. Start by placing the first bay door wall flat on a table. One at a time, insert center support wall into the bay door wall. Do this by starting at the top then click in the bottom. Repeat for the second interior support wall.**

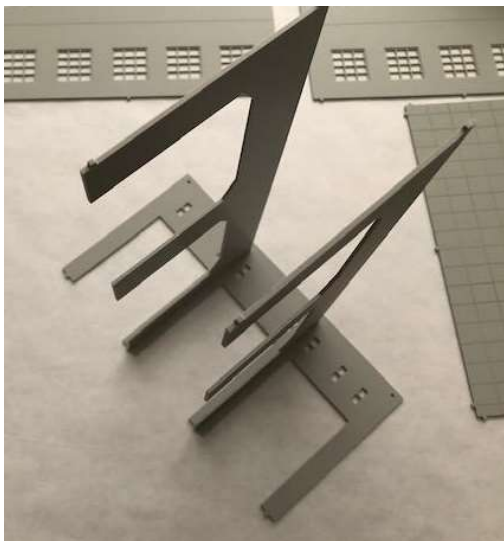


OUTLAND MODELS

- 3. Next, place the second bay door wall flat on the table, snap the center support walls into the bay door wall. Again starting at the top, then click in the bottom.**

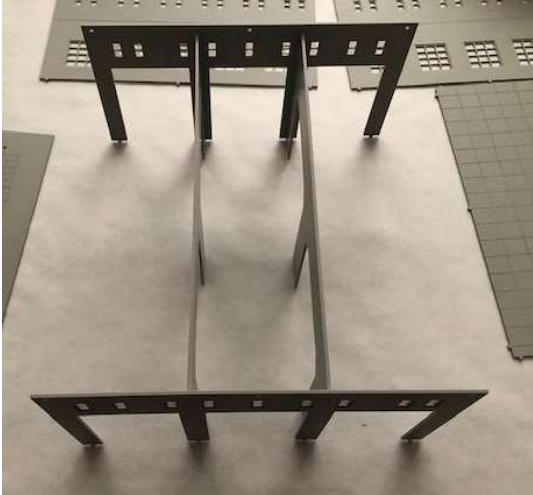


- 4. Now insert your wall sub assembly into the base. To snap the walls to the base, start with grasping one outer and one inner vertical support by the bottom. Apply firm, even, and gentle pressure until it clicks into the base. Repeat until all vertical supports for both outer walls are clicked into the base.**


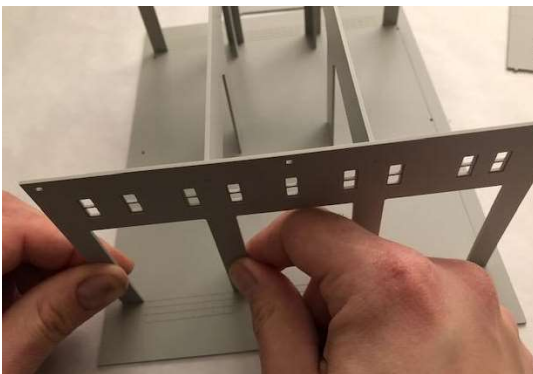


OUTLAND MODELS

5. Next one at a time, click the outer walls with windows into the base. Once outer walls are in place you will begin assembly on the roof. Before we get to that point, a side note on wall assembly. **Note: optional assembly the orientation of the side door will be the same because both side walls are identical if the wall is facing outward as intended. If your layout requires the side door be in a different location, you may flip one or both of the side walls to orient the door differently. If you do this however, your window frames and wall detaining will not be exposed.**

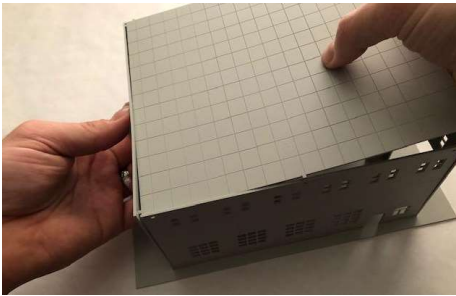

6. Now to install the roof, first ensure the roof tiles are face up. Start with the roof at a slight angle. Insert center snap into one of the bay door walls, work your way to each side of that same wall. To click the other bay door wall into the roof, pull gently and slightly at the top center to allow enough room for the roof to click into place. If the wall comes off the center supports, that's ok click the roof in on the middle and both sides then press on the wall to reattach the center supports.
- 6a. To secure the side walls to the roof, again start in the middle and then click in each side. Repeat for the opposite wall.

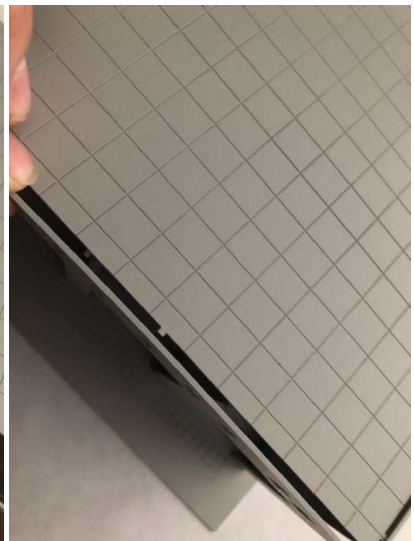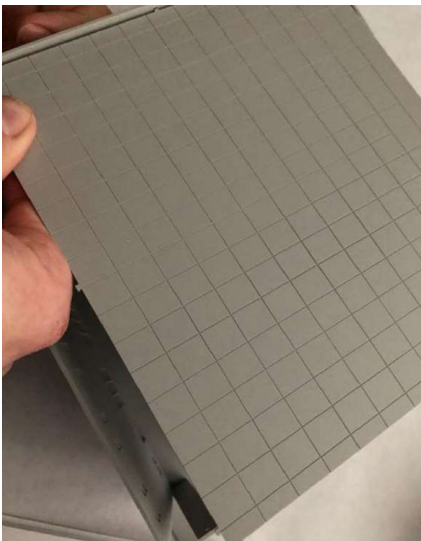

OUTLAND MODELS

- 7. Congratulations, your new model is complete! Please remember to check out all of our latest products on our website outlandmodels.com**

We sincerely thank you for your business and we hope this model is a great addition to your collection. As always we hope to assist you in the future with any other model needs you may have.