


OUTLAND MODELS

Assembly instructions for:

Large Metal Style Shed for Warehouse / Factory N Scale Outland Models Train

10 pieces

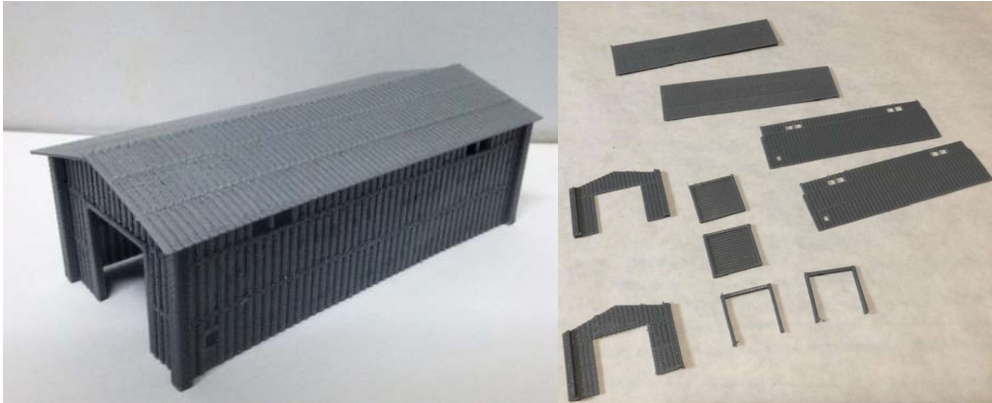

****THIS MODEL REQUIRES GLUE** Please note the use of plastic model cement will yield the best results. Super glue will discolor the plastic and thin cement will not provide a strong enough bond.**

- 1. Slide both of the long walls into the grooves on one of the short walls with opening.**




- 2. Now slide the opposite small wall with opening into both of the long walls on the other side one at a time.**



OUTLAND MODELS

3. Next to install the roof, line up the walls to the raised bumps on the roof. You may find it helpful to temporarily tape the panels together until the plastic cement dries completely, then remove the tape if desired. ****Note** Foil tape works very well for this as it has more rigidity than other types of tape, and it is easily removed once the model is complete.**

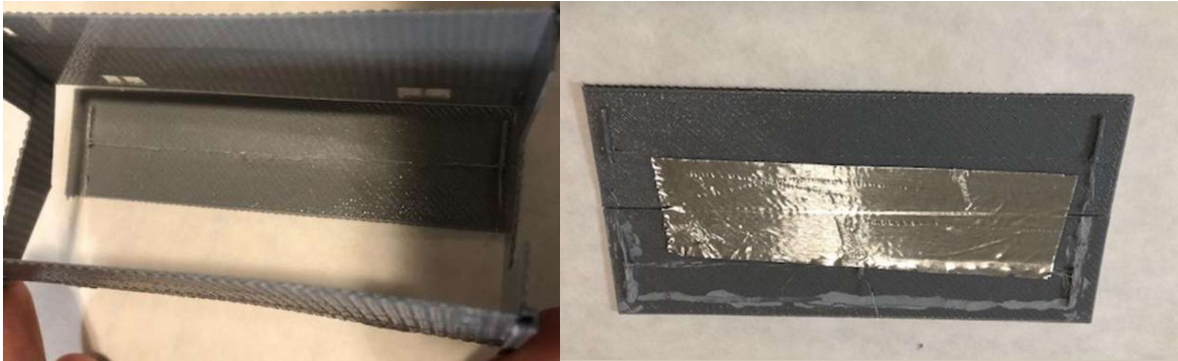

4. If desired at this point you may now glue on the doors and trim surrounding the doors (the remaining 4 pieces).



5. Depending on your particular use for this model, you may also find it beneficial to enlarge one or both of the door openings. This is easily done with a pair of scissors or a hobby knife. As always please take extreme care when modifying a model panel. ***die cast car not included and is for representation purposes only***



OUTLAND MODELS

6. Congratulations, your new model is complete! Please remember to check out all of our latest products on our website outlandmodels.com

We sincerely thank you for your business and we hope this model is a great addition to your collection. As always we hope to assist you in the future with any other model needs you may have.