


King Tour Pack Backrest Pad (1997-2013 Harley Touring Models)

Installation Instruction


NOTE

The backing plates (items 3 and 4, [Figure 2](#)) are required to install these backrests on a motorcycle not previously equipped with a Tour-Pak mounted backrest. If backing plates are not needed, they can be discarded.

1. See [Figure 1](#). Align six studs (1) on backrest (2) with drilled holes. Place plastic backing plate (3) over two center studs inside the cover. Next, place the steel backing plate (4) on the two center studs and fasten with 1/4-20 flanged locknuts (5).
2. Fasten the four remaining studs with 1/4-20 flanged locknuts. Torque locknuts to 7.9–9 N·m (70–80 in-lbs).
3. Use rubber plugs from the kit to fill two holes in the bottom half of the Tour Pack. If your Tour Pack is not equipped with the holes, discard plugs. To install, insert the plug through the hole from the outside of the Tour Pack. Use a pliers to pull the plug through the hole. Inspect to make sure that the flange is completely through the hole.
4. Insert one screw and washer through each of the holes in the backrest and then through the holes of the Tour Pack from the outside of the Tour Pack. Install the nuts from inside the Tour Pack.
5. Close Tour Pack cover and check for proper backrest alignment.

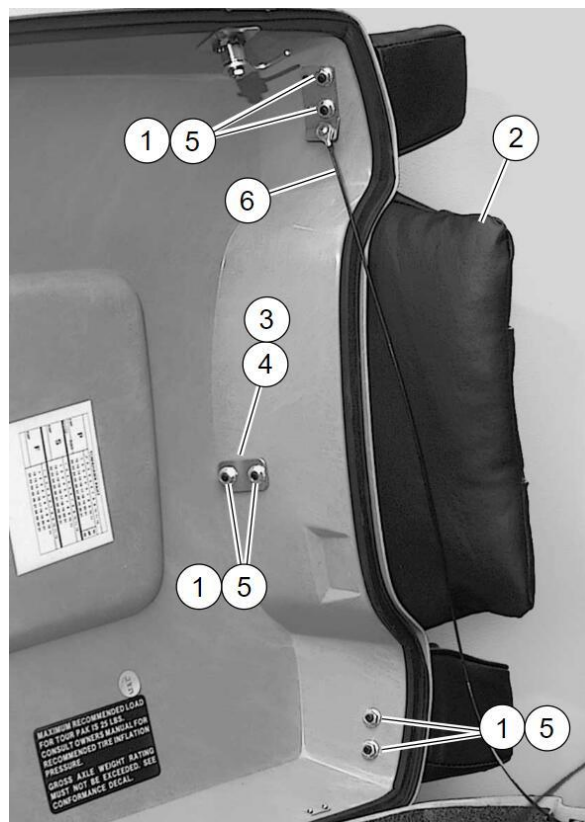

[Figure 1](#). Mounted Backrest on King Tour Pack

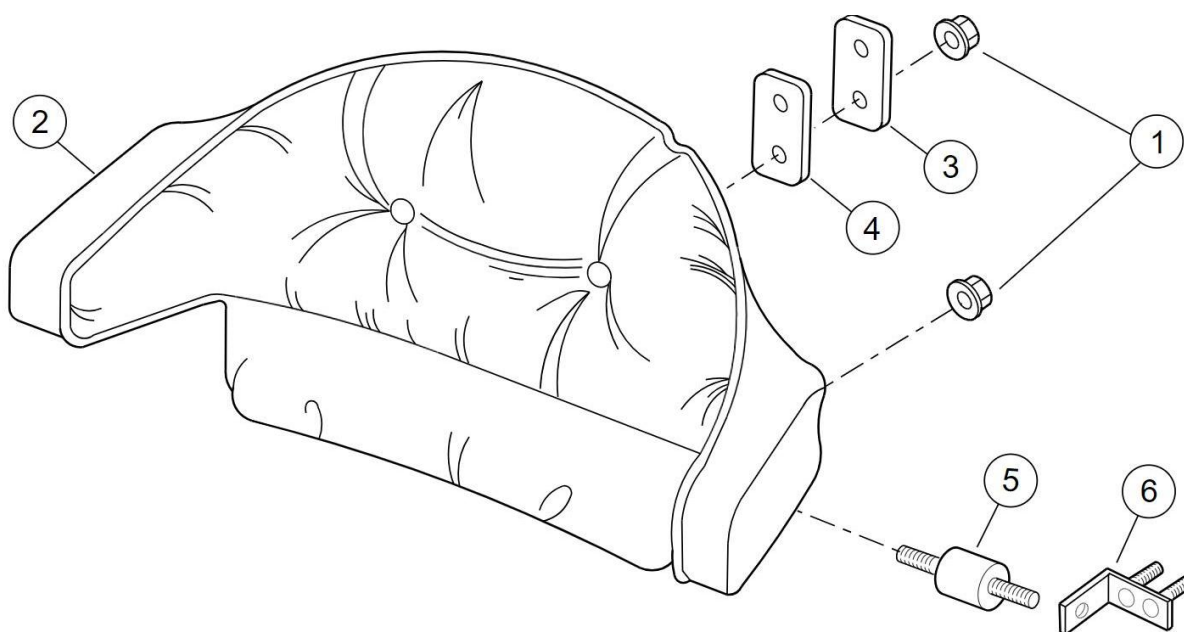

[Figure 2](#). Service Parts