


# **User's Manual**



www.rbrohant.com

# **INSTALLATION INSTRUCTIONS**

# **Installation Manual**

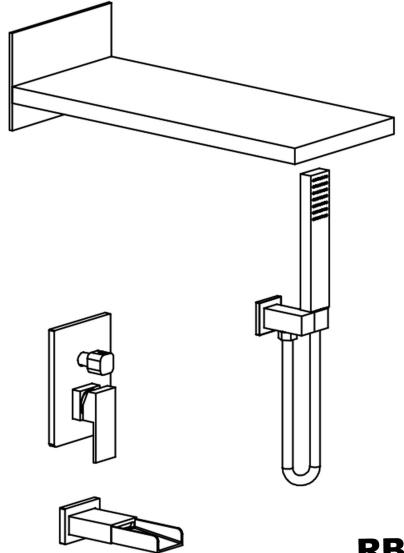

# **RB0945**

#### IAPMO RESEARCH AND TESTING, INC.













#### IAPMO RESEARCH AND TESTING, INC.













#### IAPMO RESEARCH AND TESTING, INC.













# **BEFORE INSTALLATION**

NO.	Item	Qty	
1	Mixer Body	1	
2	Plate	2	
3	Hand Held Shower	1	
4	Shower Hose	1	
5	Shower Seat	1	000
6	Diverter Cap	1	
7	Grub Screw	2	
8	Screw Cap	2	
9	Switch Handle	1	
10	Waterfall Preburied Box	1	3-\
11	Water Inlet	3	
12	Waterfall Top Shower	1	
13	Connector	1	
14	Decorative Seat	1	
15	Spout	1	
16	Accessory bag	1	0
17	Accessories	1	
			(4) (5) (4) (4) (5) (4) (4) (5) (4) (4) (5) (4) (4) (5) (4) (4) (5) (4) (4) (4) (5) (4) (4) (4) (5) (4) (4) (4) (4) (4) (4) (5) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4
16-	00		

# Check accessories

Standard List of Accessories:

When you open the product packaging, please check whether the objects in it are consistent with the main body and accessories you purchased. If there is any inconsistency, please contact our company or our distributor.


Note: 1.Accessories are subject to change without prior notice if the change does

not affect usage;

2. The appearance of the product is subject to the physical objects you receive, and the schematic diagram is only for reference.


## **INSTALLATION STEPS**

This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.





1.1 Open [(6.49"-6.69") x (4.53"-4.72") × (2.56"min) inch (L×W×D)], Bury water mains as required; Fix the embedded box in the embedded hole (keep it horizontal and vertical) and connect the pipe.

Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.




1.2 Open [open size (5.12"-5.31") × (6.49"-6.69") × (2.24"min) inch (L×W×D)], entombed pipe as required; Fix the balance valve body in the embedded hole (keep it horizontal and vertical) and connect the pipe.

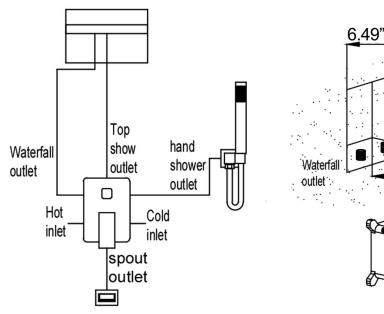


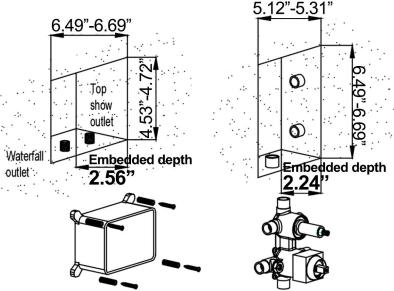

2. Fill in the embedded hole after no water leaks. Screw the water intake on the embedded box after removing the shield and press the panel to the wall. Install the waterfall top spray on the inlet part and lock with a hex key.


3. After no water leaks fill in the embedded holes and press the panel to the wall. Use the hex spoon to mount the switch handle and the water release handle, and mount the color on.

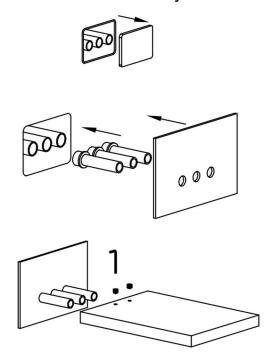

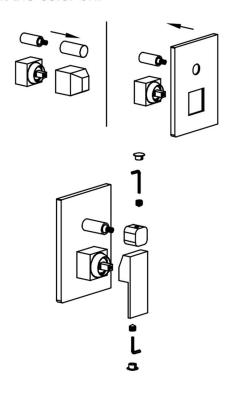


## INSTALLATION STEPS


Insert the decorative seat cover into the shower seat and screw into the mounting hole of the main body (pay attention to keeping level); Use a hose to screw the showerhead seat and handheld together.

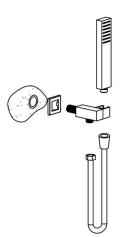

5. Twist the outlet nozzle tooth tube to the mounting hole of the main body, and then insert the decorative seat cover into the outlet inlet main body. Then press into the nozzle tube (pay attention to keep level) to the wall and lock with a hex spoon.



### INSTALLATION DIMENSION

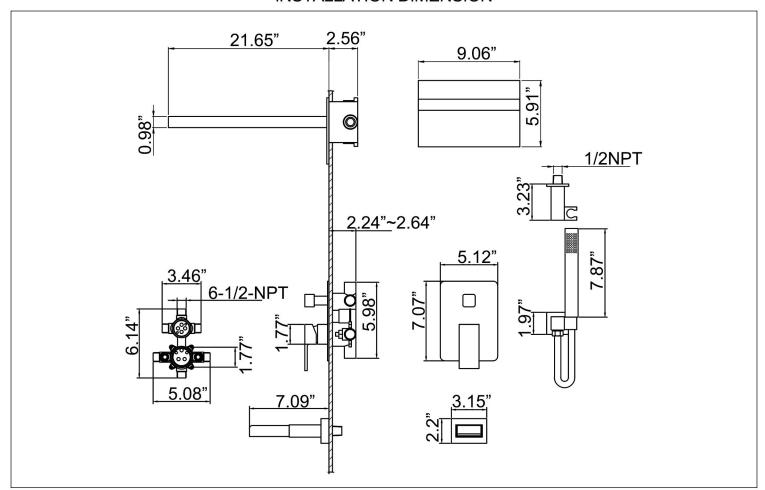

#### **CLEANING CARE**

In order to keep the appearance of product clean, bright and good performance, please take care of the product as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.



Please feel free to contact us if you have any questions. We will help to solve the issue together with you. OUR EMAIL: services@rbrohant.com





Service Contact:

+1(801) 800-9309 services@rbrohant.com

Made in China