


1. The sundries at the connection must be removed before installation to avoid blockage or water leakage.

2. Correctly connect the tap water inlet (hot on the left and cold on the right)

3. The maximum temperature of hot water shall not

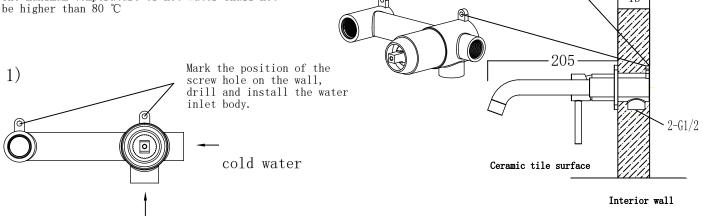

The interior wall is flush with the main plane

PS:In the process of embedding the wall, please do not remove the protective sleeve to avoid damaging the copper sleeve.

2) After the main body is embedded in the wall, install it in the following order:

1. Remove the protective sleeve;

hot water

- 2. Cover the panel;
- 3. Install the handle and water outlet connector.

