


# Storage Cabinet Assembly Instructions

Product Accessories and Quantity ●

Eccentric Cam Screw Installation ●

Drawer Installation ●

Main Body Installation ●

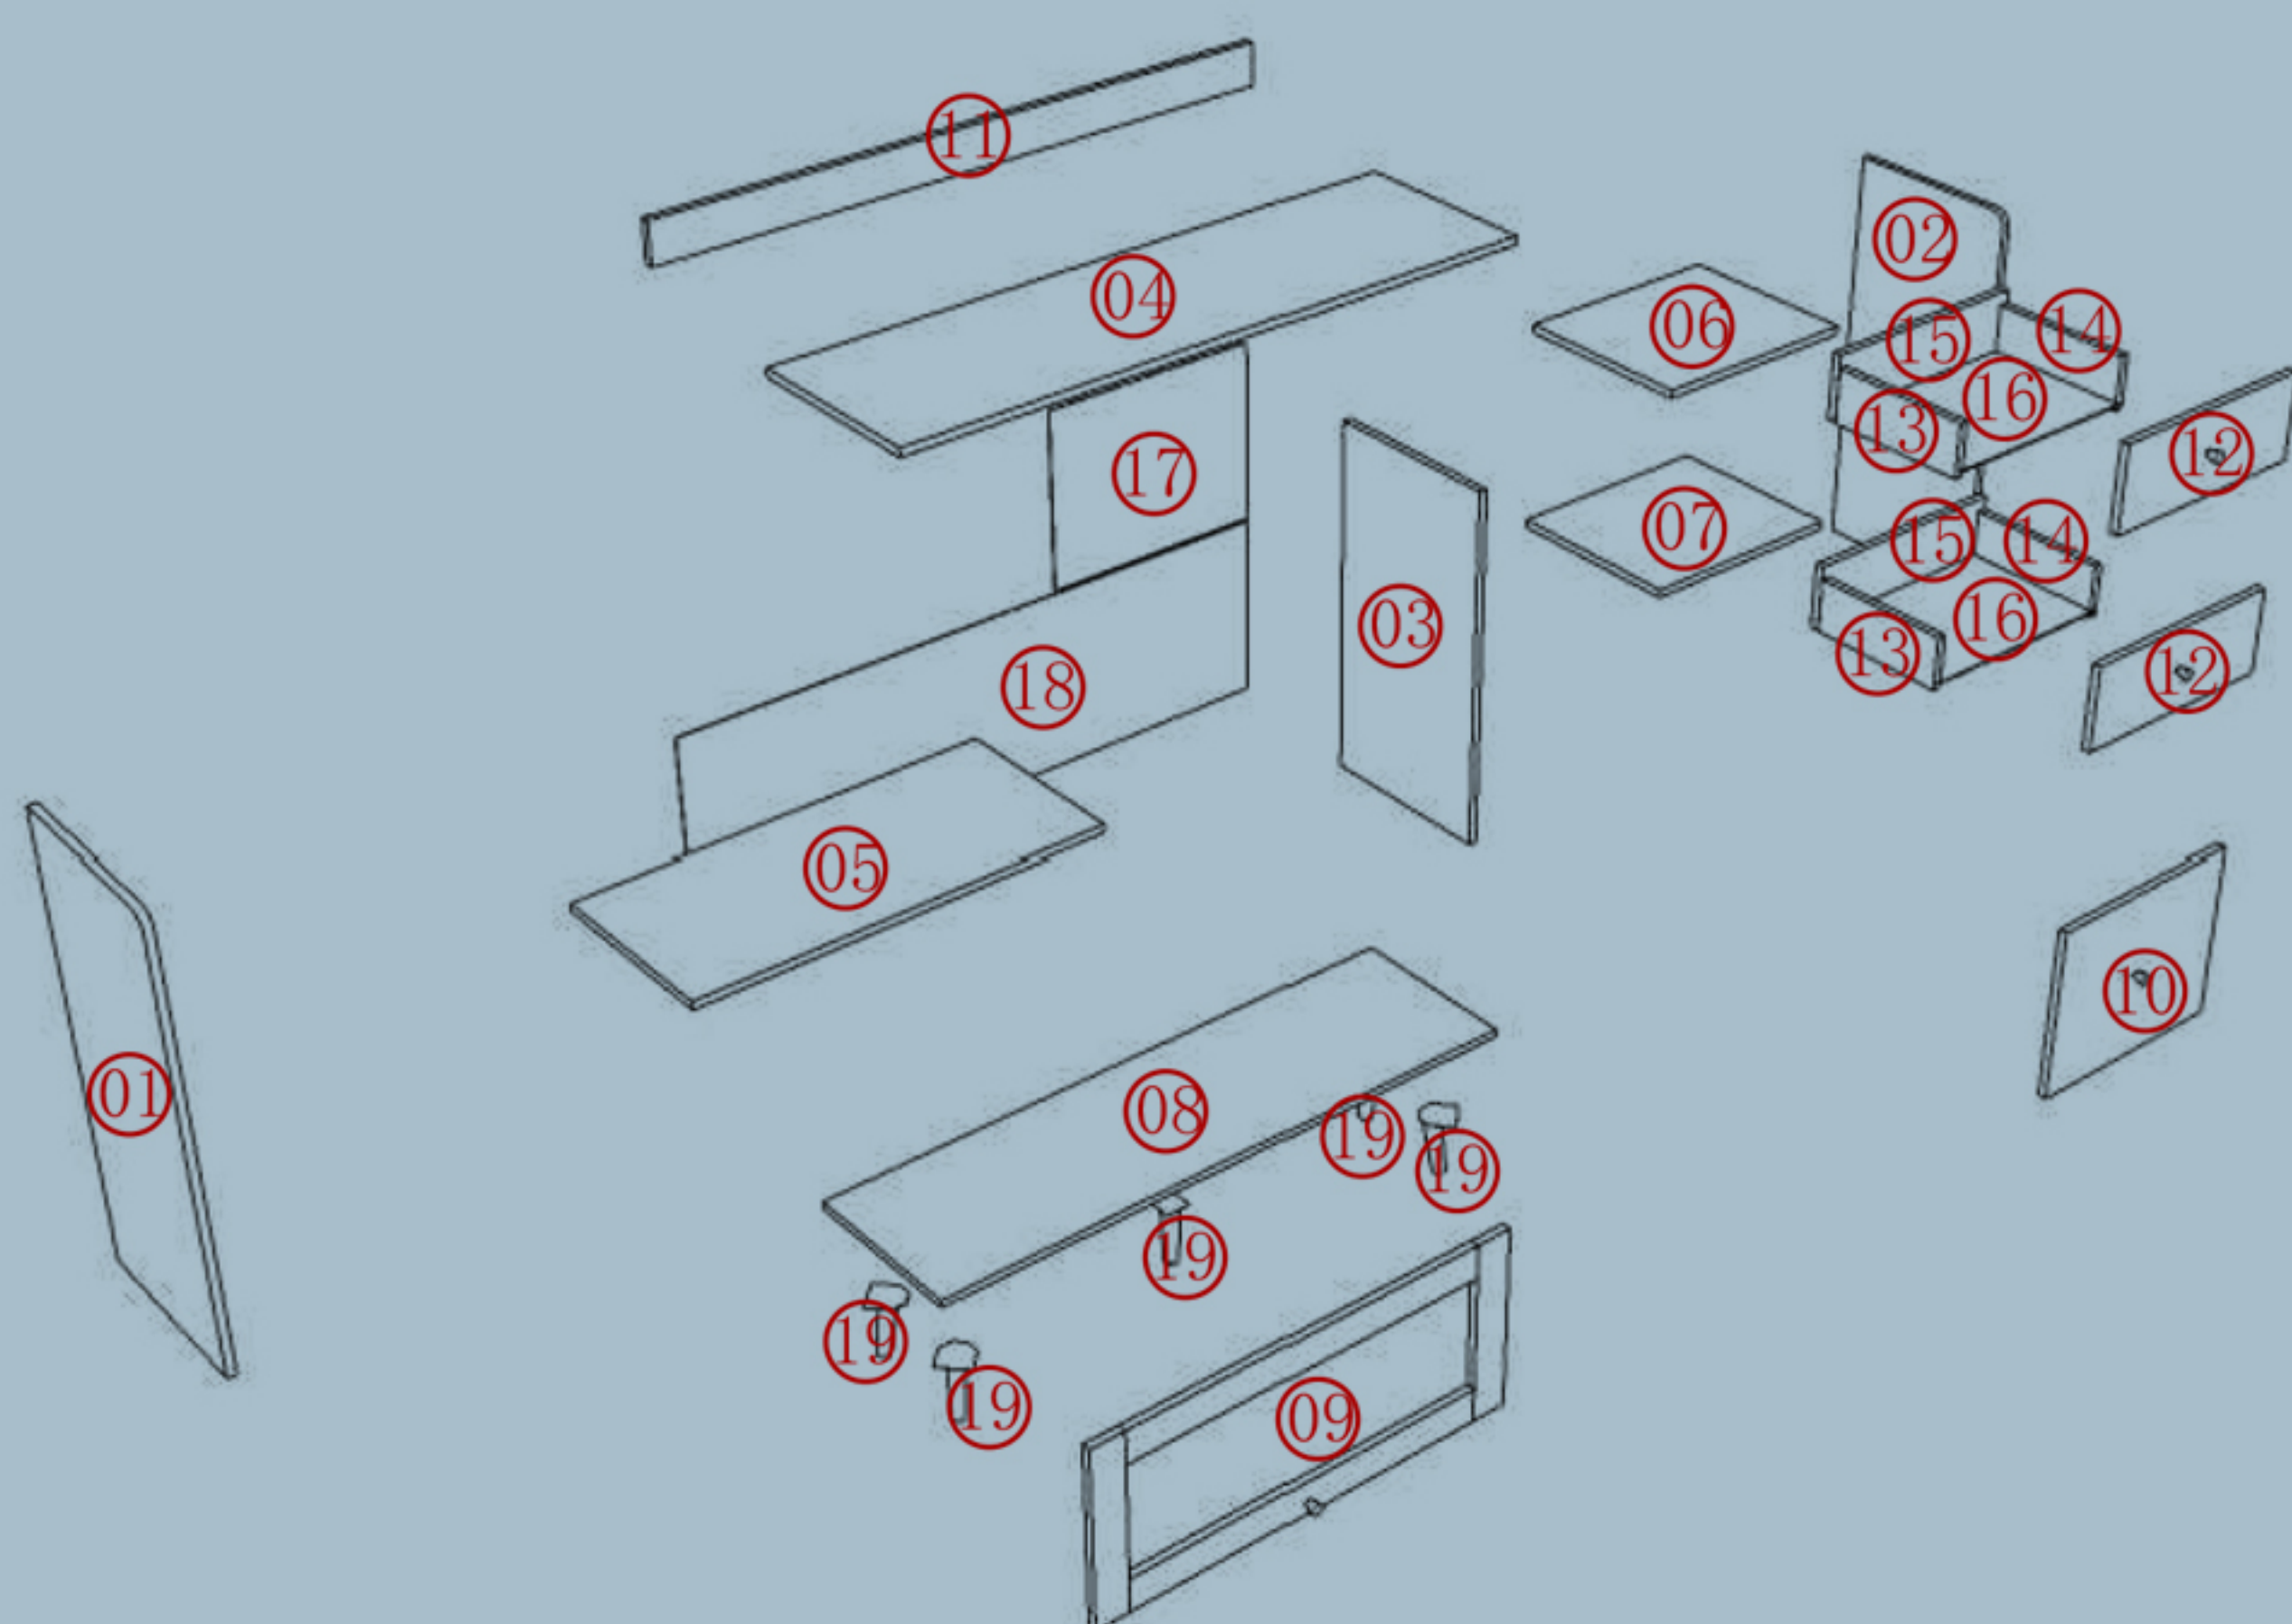

First. Number of products and accessories


			
Tapping Screw 4*40	Small Iron Nails	Eccentric Screw Cross Lock & Bar	Tapping Screw 3.5*12
B4*35	K20*22	D14*14	A1*6
			
Handle	handle screw 4*18	Shelf Pins	Flip up Guide Rail
J15*4	B0*5	K0*8	G8*2
			
Embedded Door Stopper	Single Hole Door Magnet	Bulkhead Spring Pin	Screwdriver
L18*1	L19*1	L8*1	1
			
Tapping Screw 3.5*18			
A17*7			



Kind tips:

1. Please distinguish the plates according to the drawings during installation. The instructions are for reference only;
2. Tighten the screws to 70% tightness. Tighten them after they are all finished!
3. Some sheets have a red face. The red face is facing down or inward.
4. Please read all the drawings before installation
5. If there are extra screw accessories, it is the spare screws given by the manufacturer!

## Second. Eccentric Cam Screw Installation

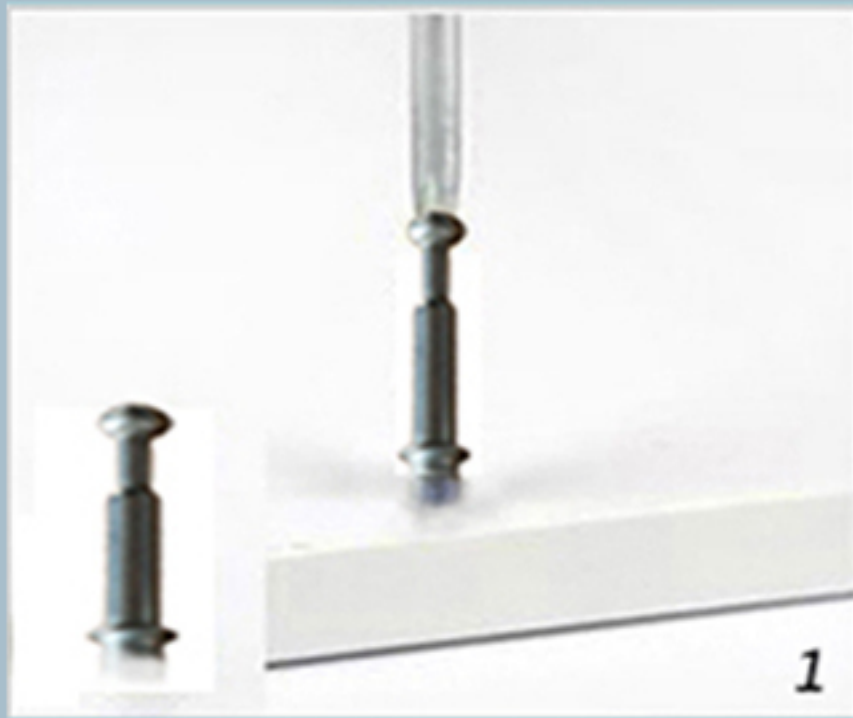


Screw all the eccentric screw bars to the board




Find the corresponding board to insert



Find the round hole

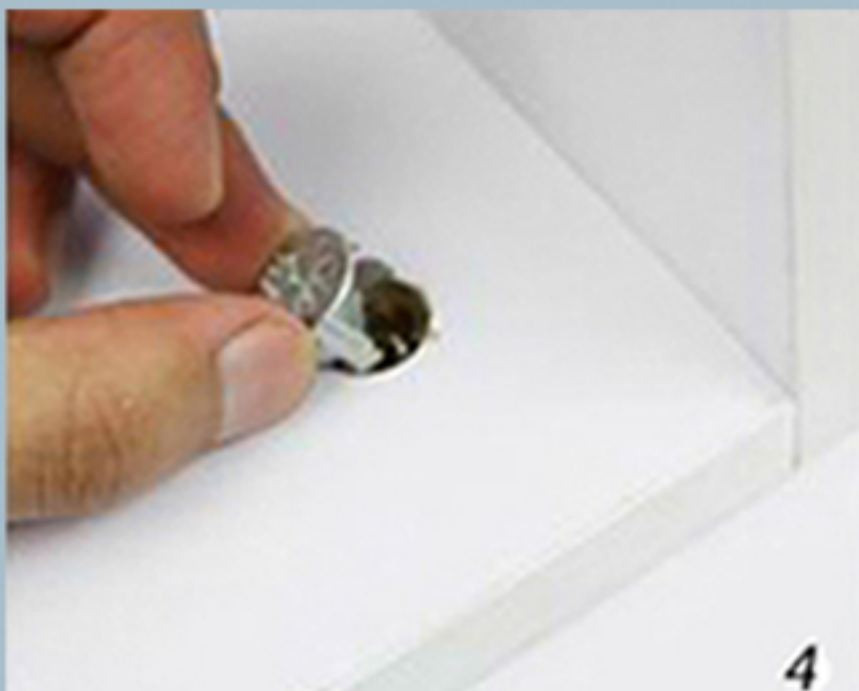

Insert the eccentric cam cross screw into the round hole

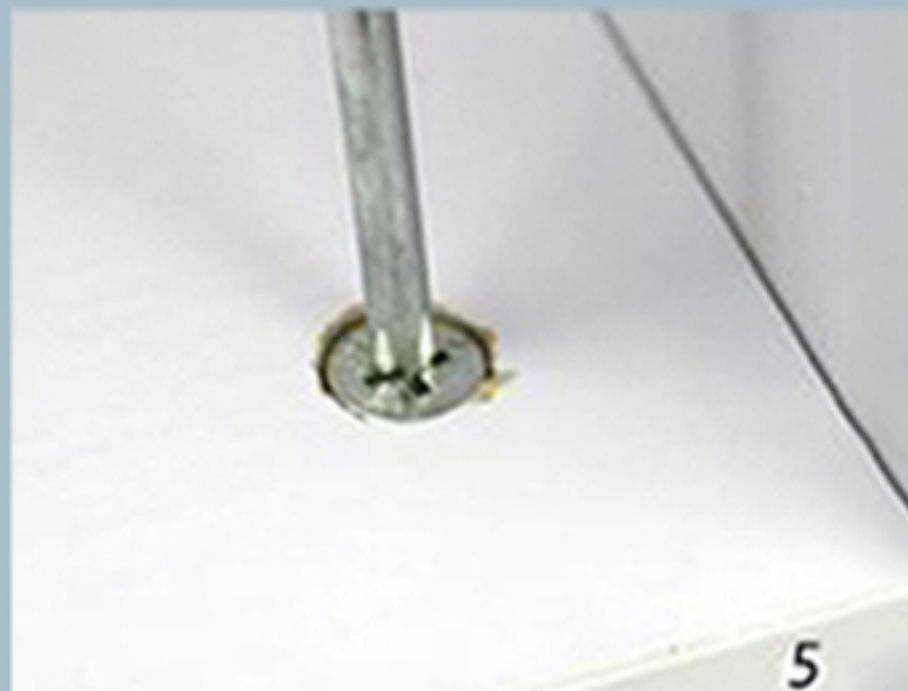

Turn clockwise 180° to lock the screw bar




Screw direction



# Third. Begin installation: drawer part installation

<1>

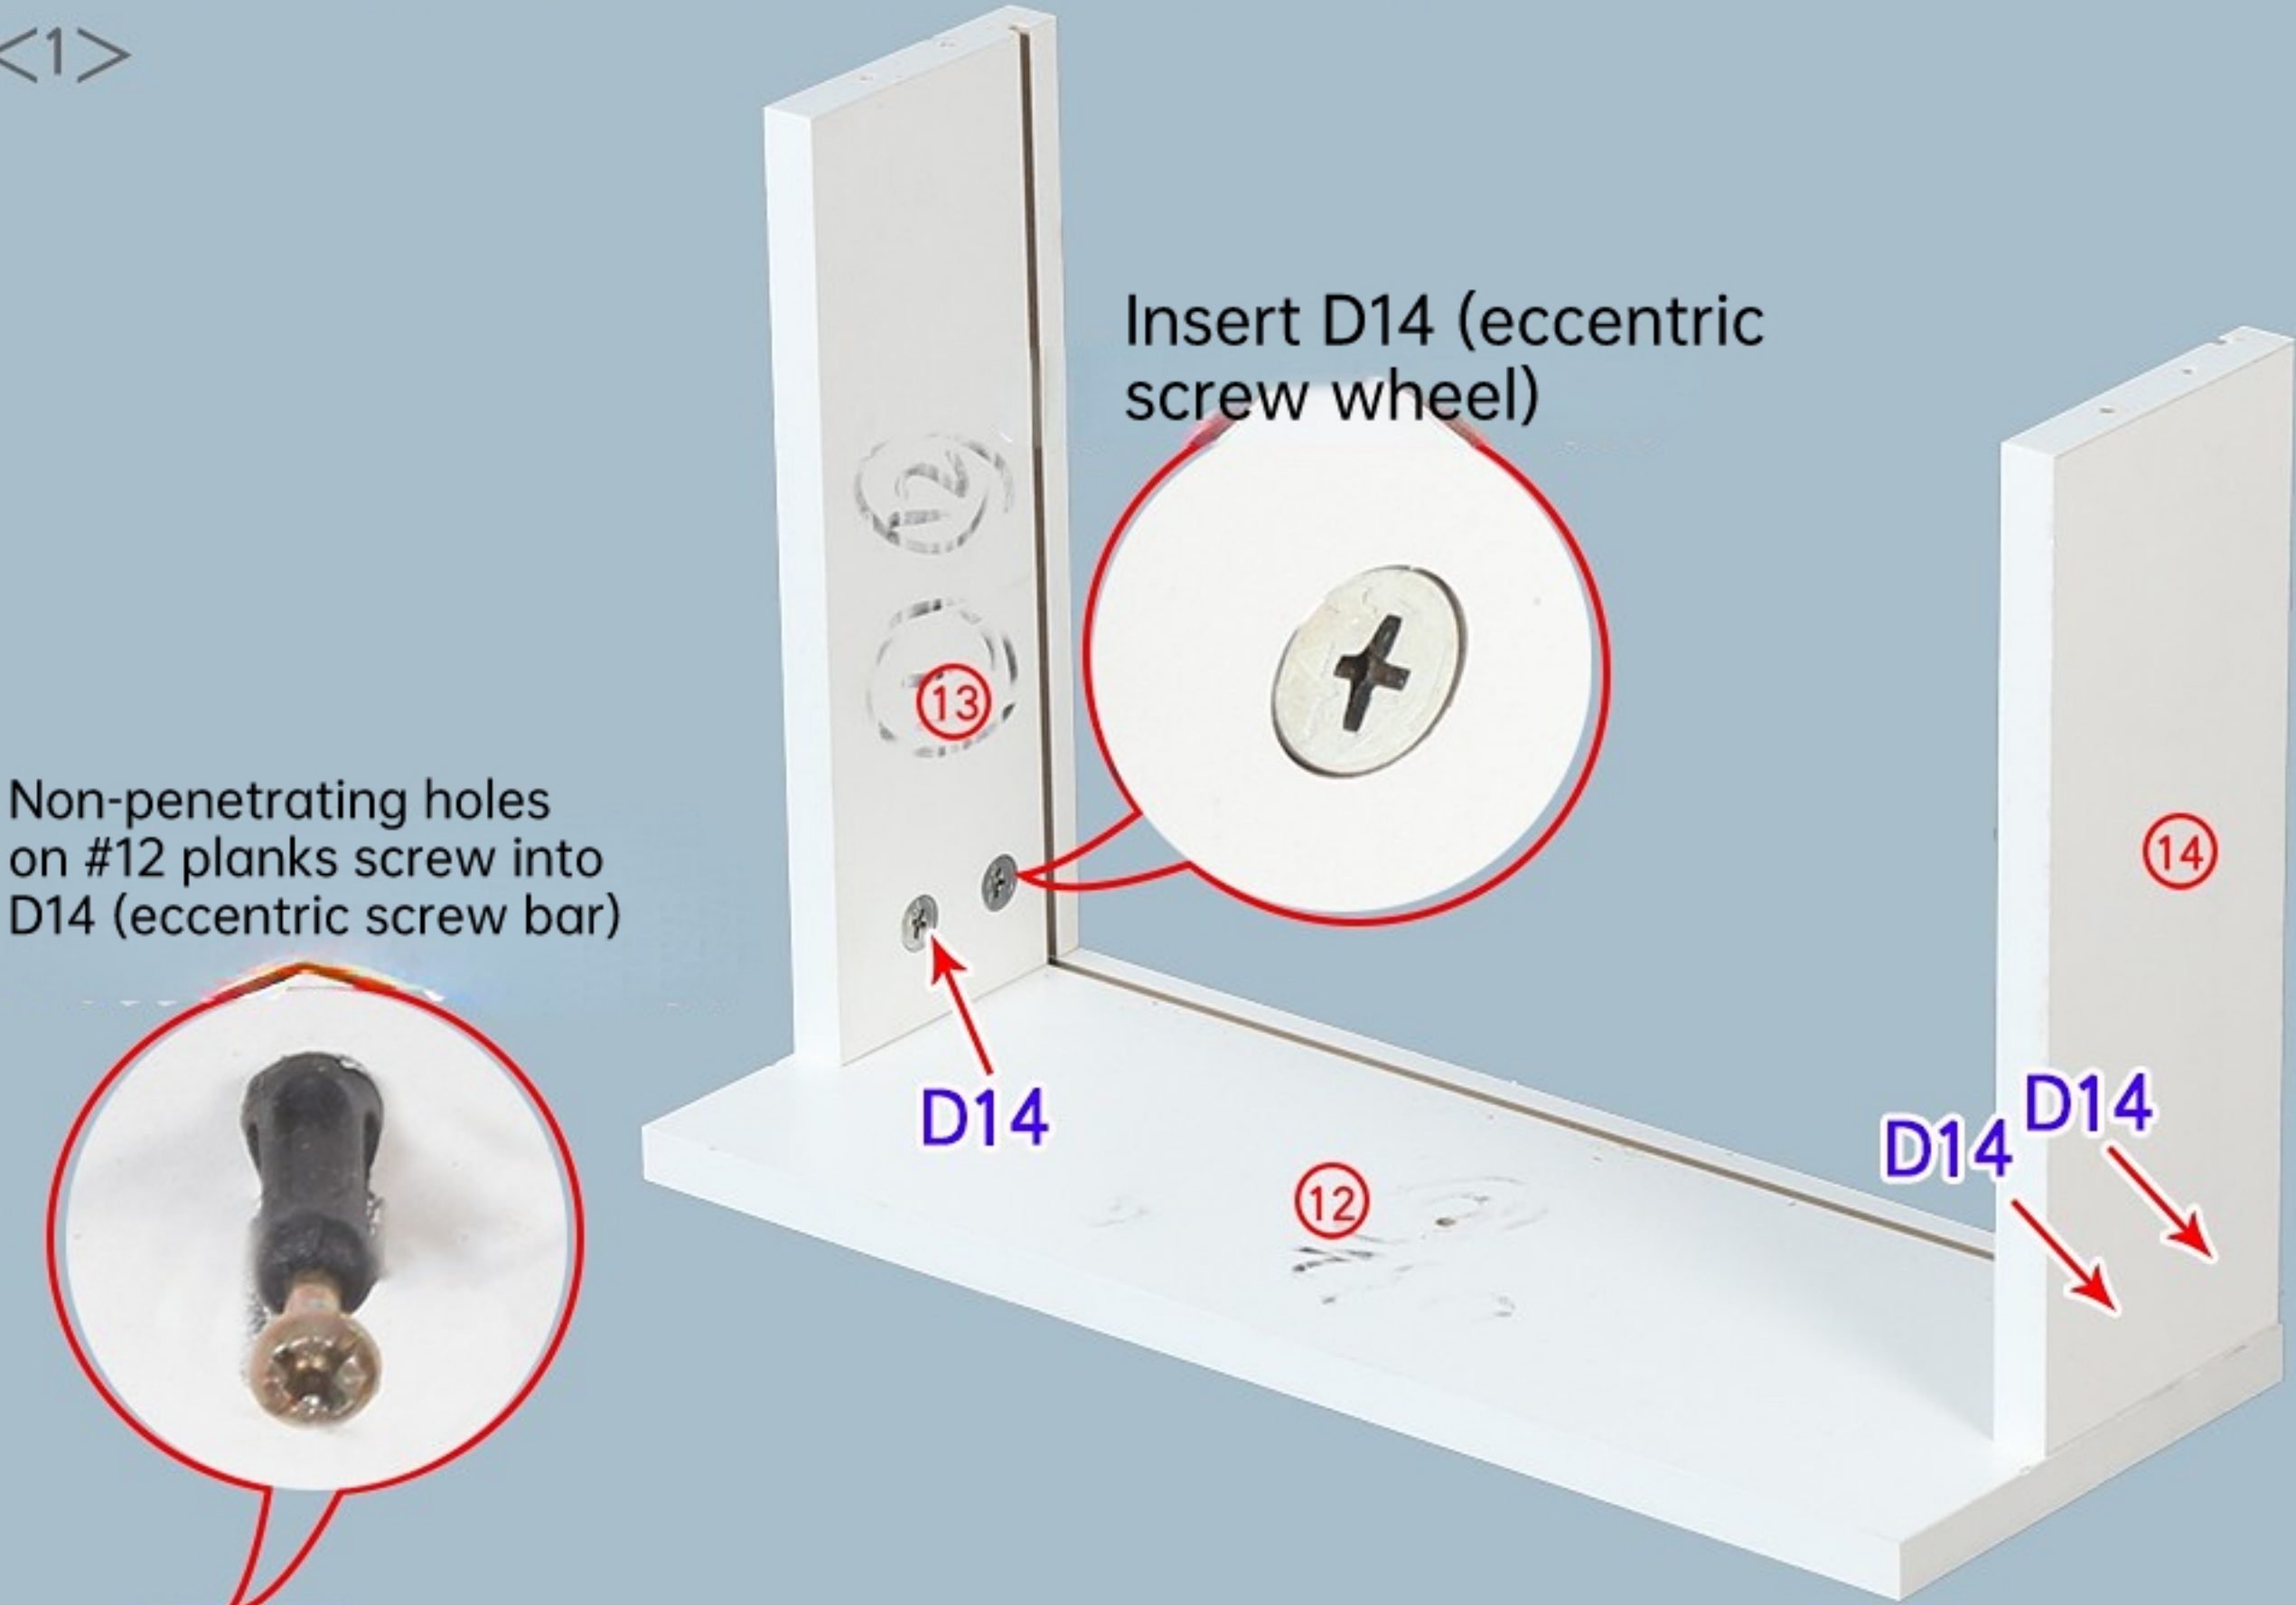

12


Drawer Outer Panel

13

Left Drawer Panel



Right Drawer Panel

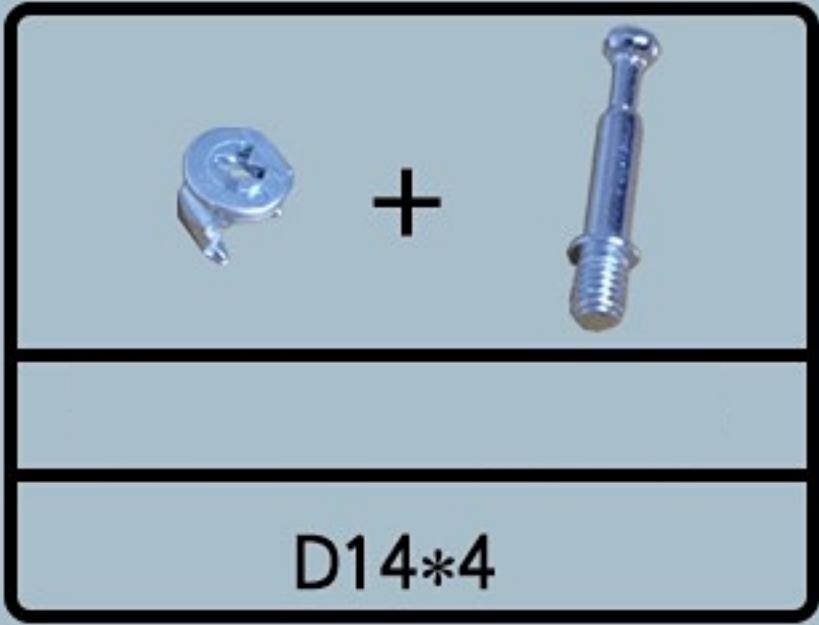

<2>




16


Drawer bottom panel



<3>

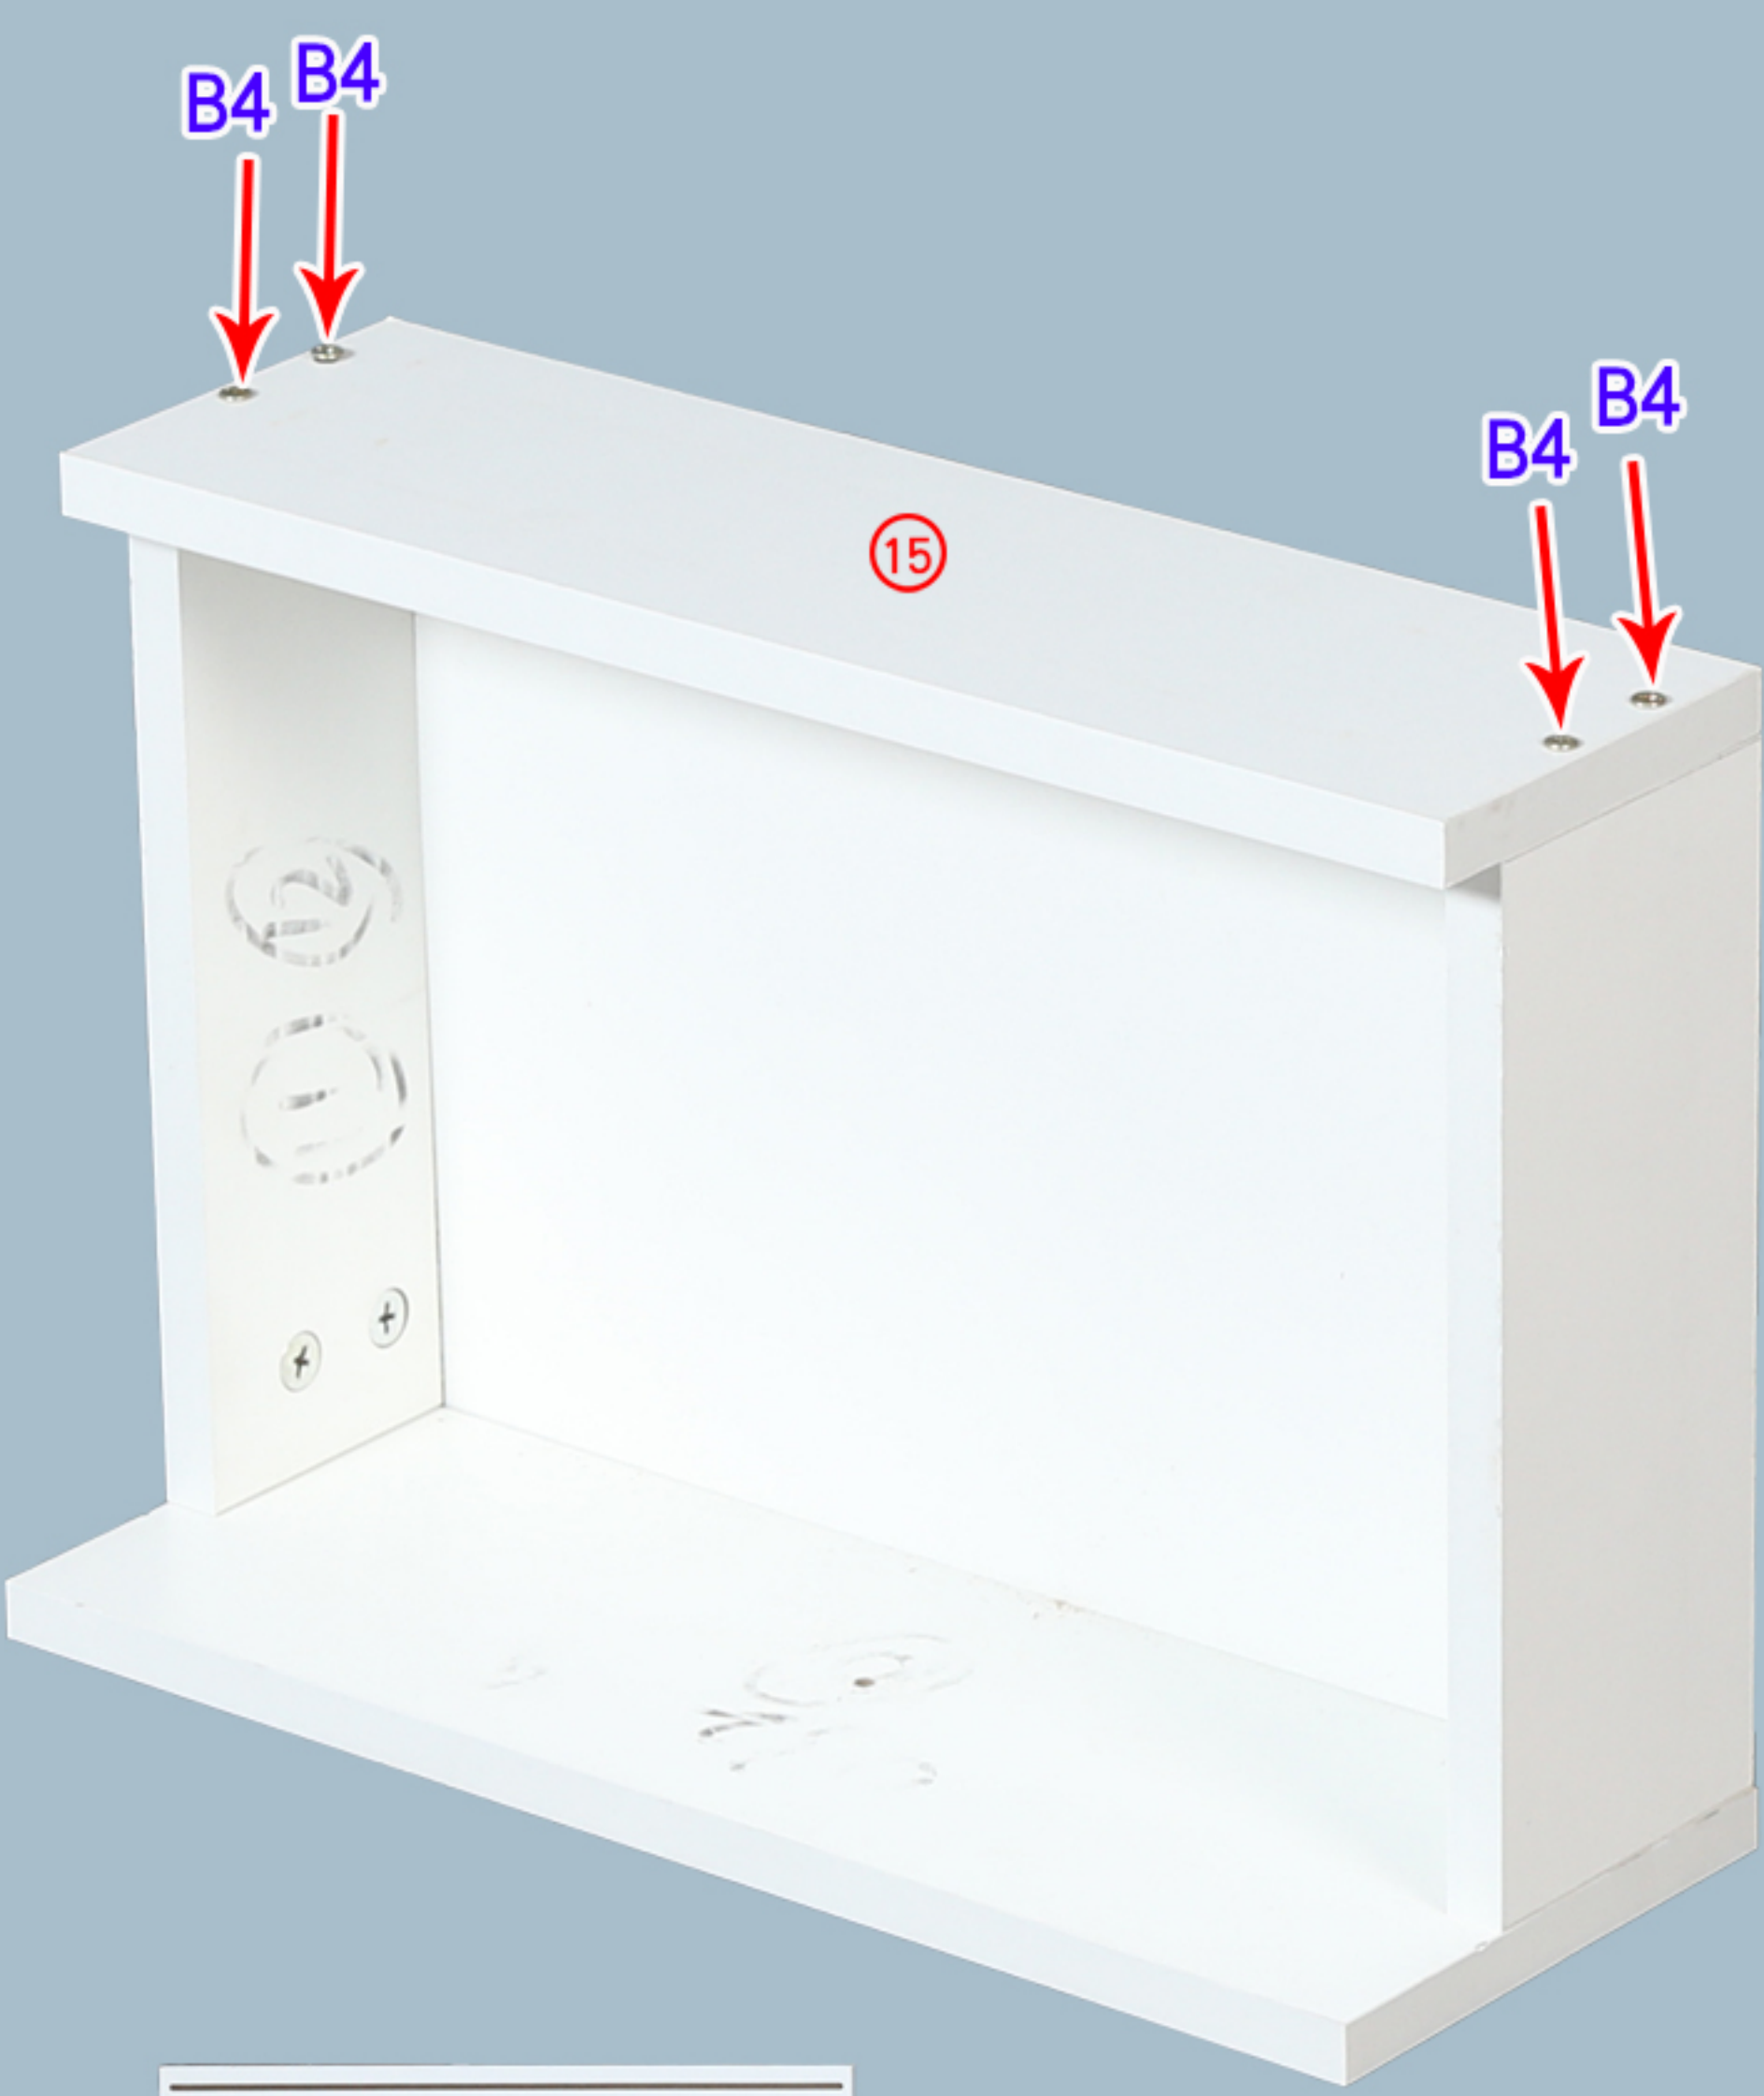


15 Drawer Backplank

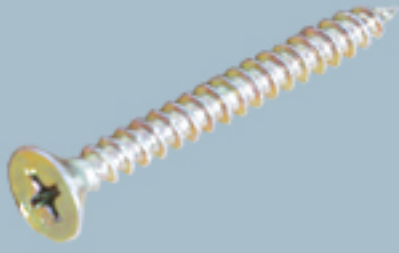

Tapping Screw  
4\*40

B4\*4

<4>

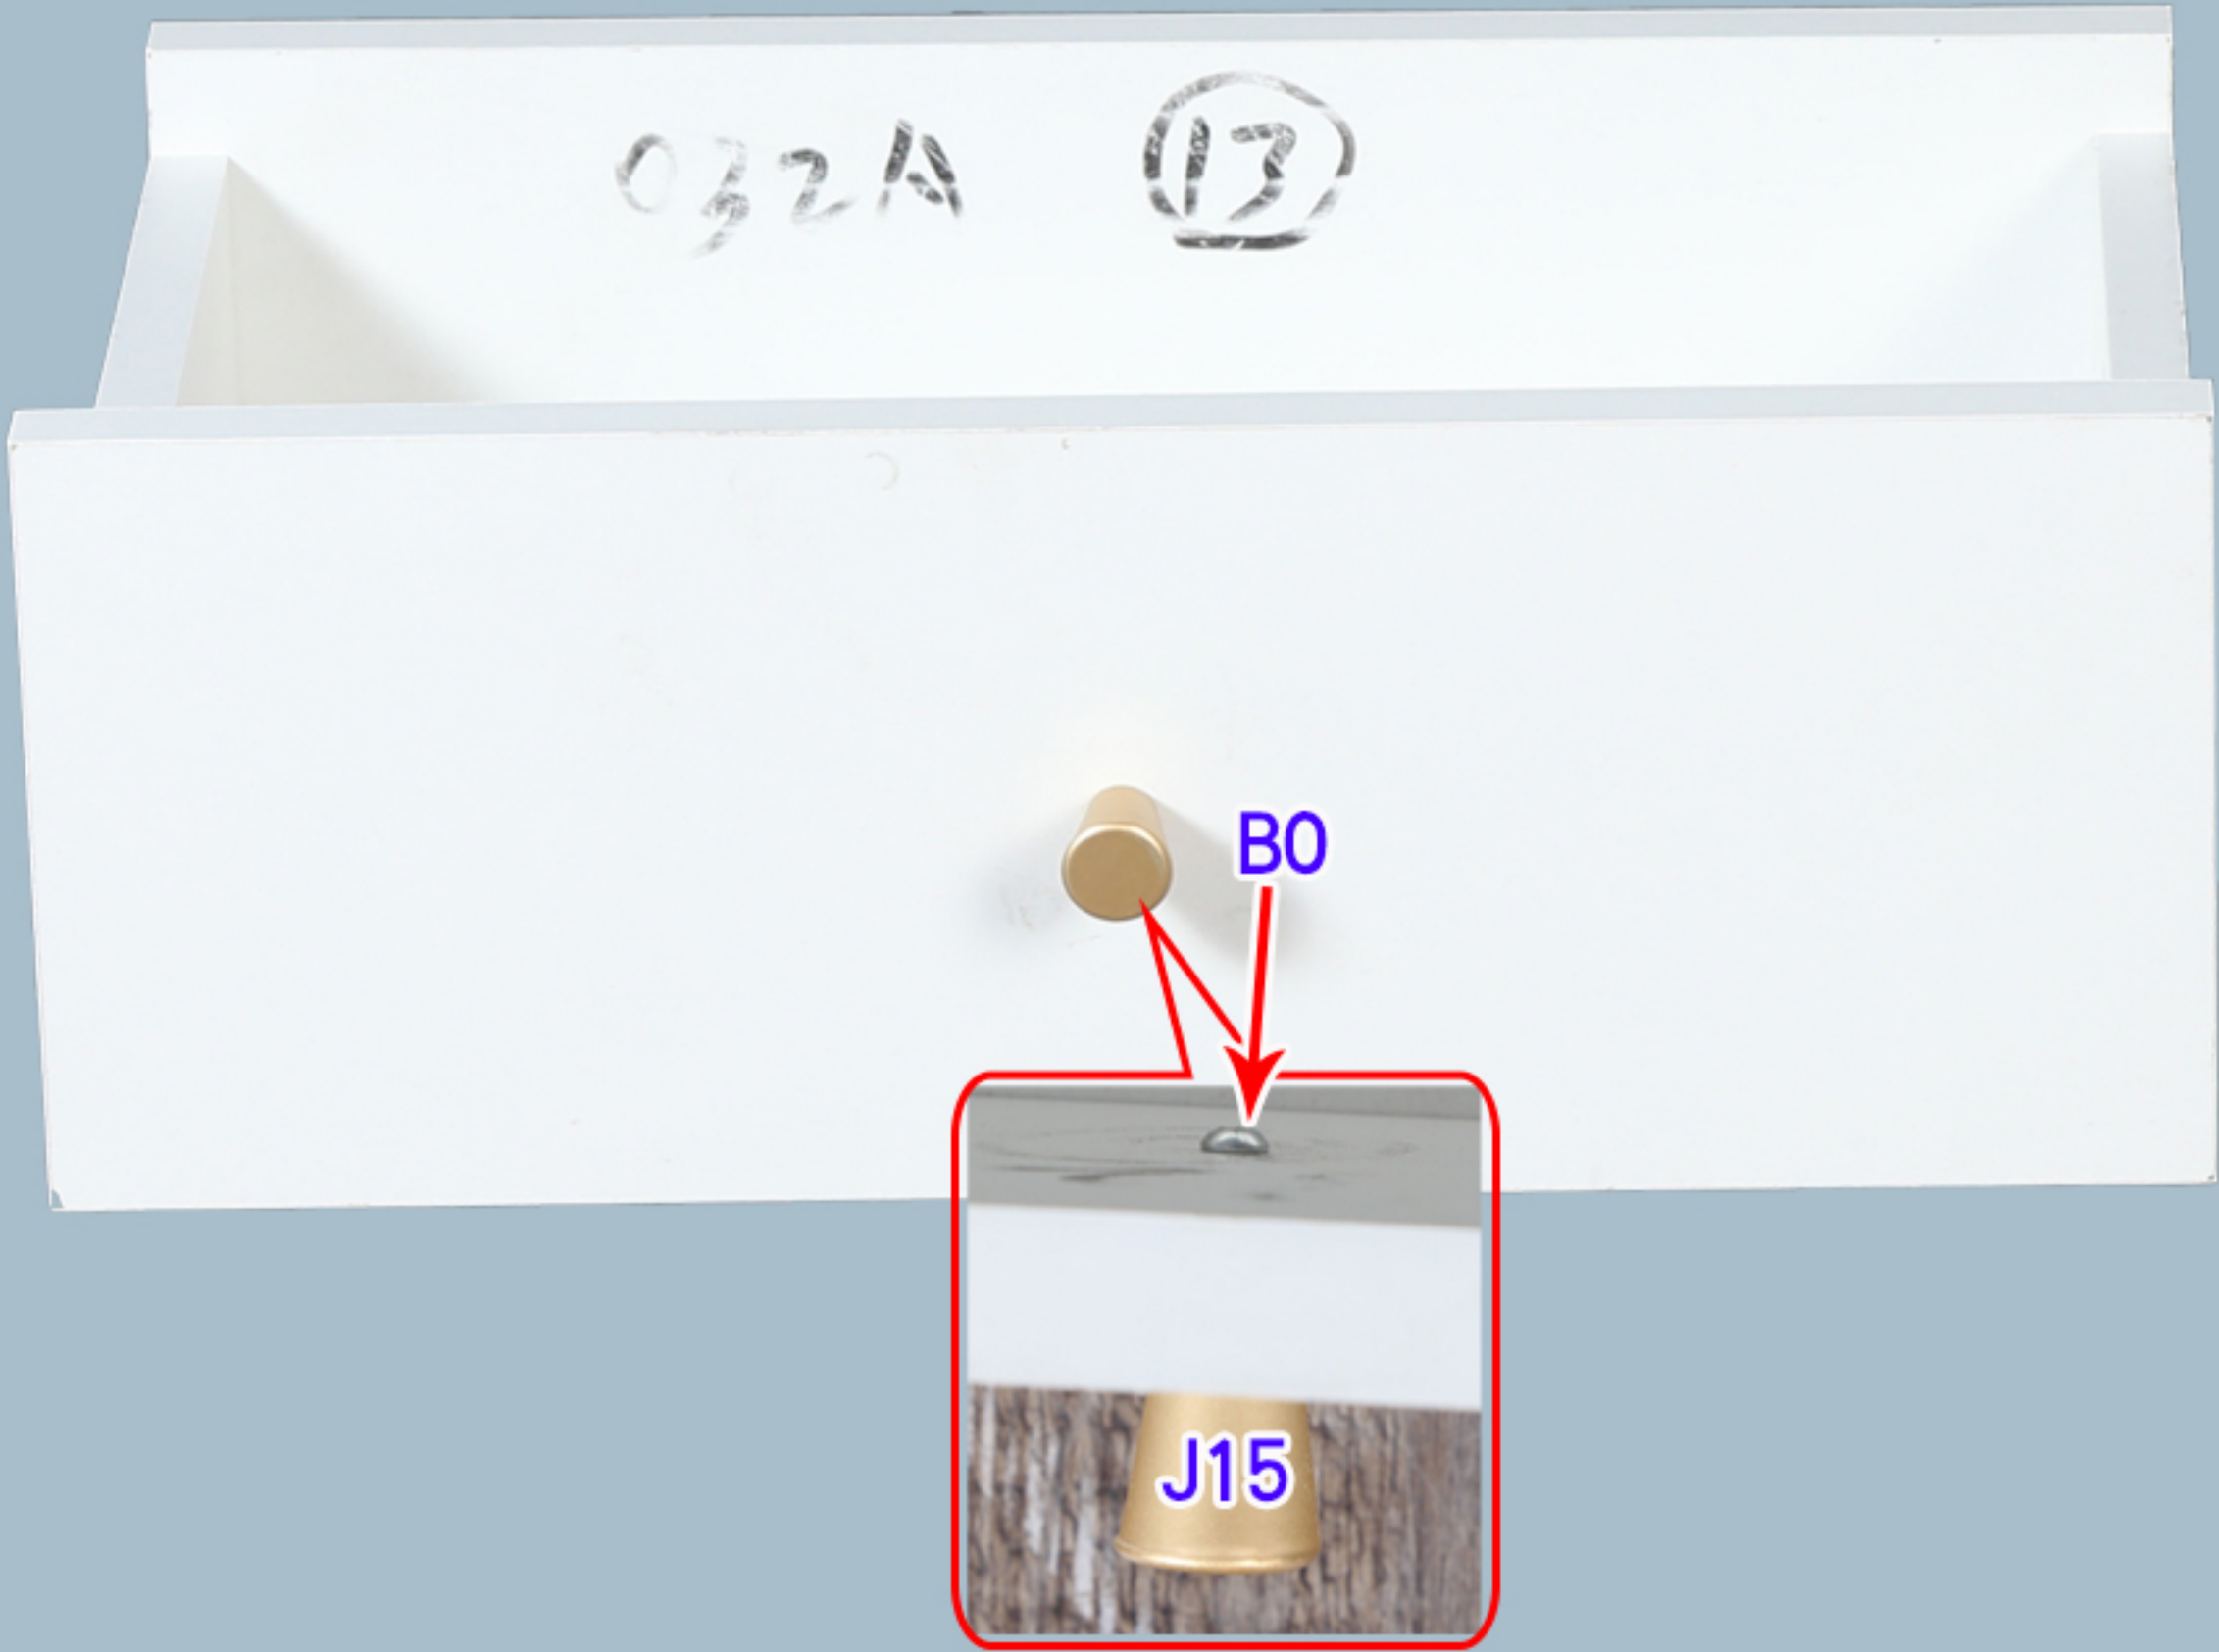

Handle

J15\*1




Handle Screw  
4\*18

B0\*2




<5> Refer to the above tutorial to install other drawer

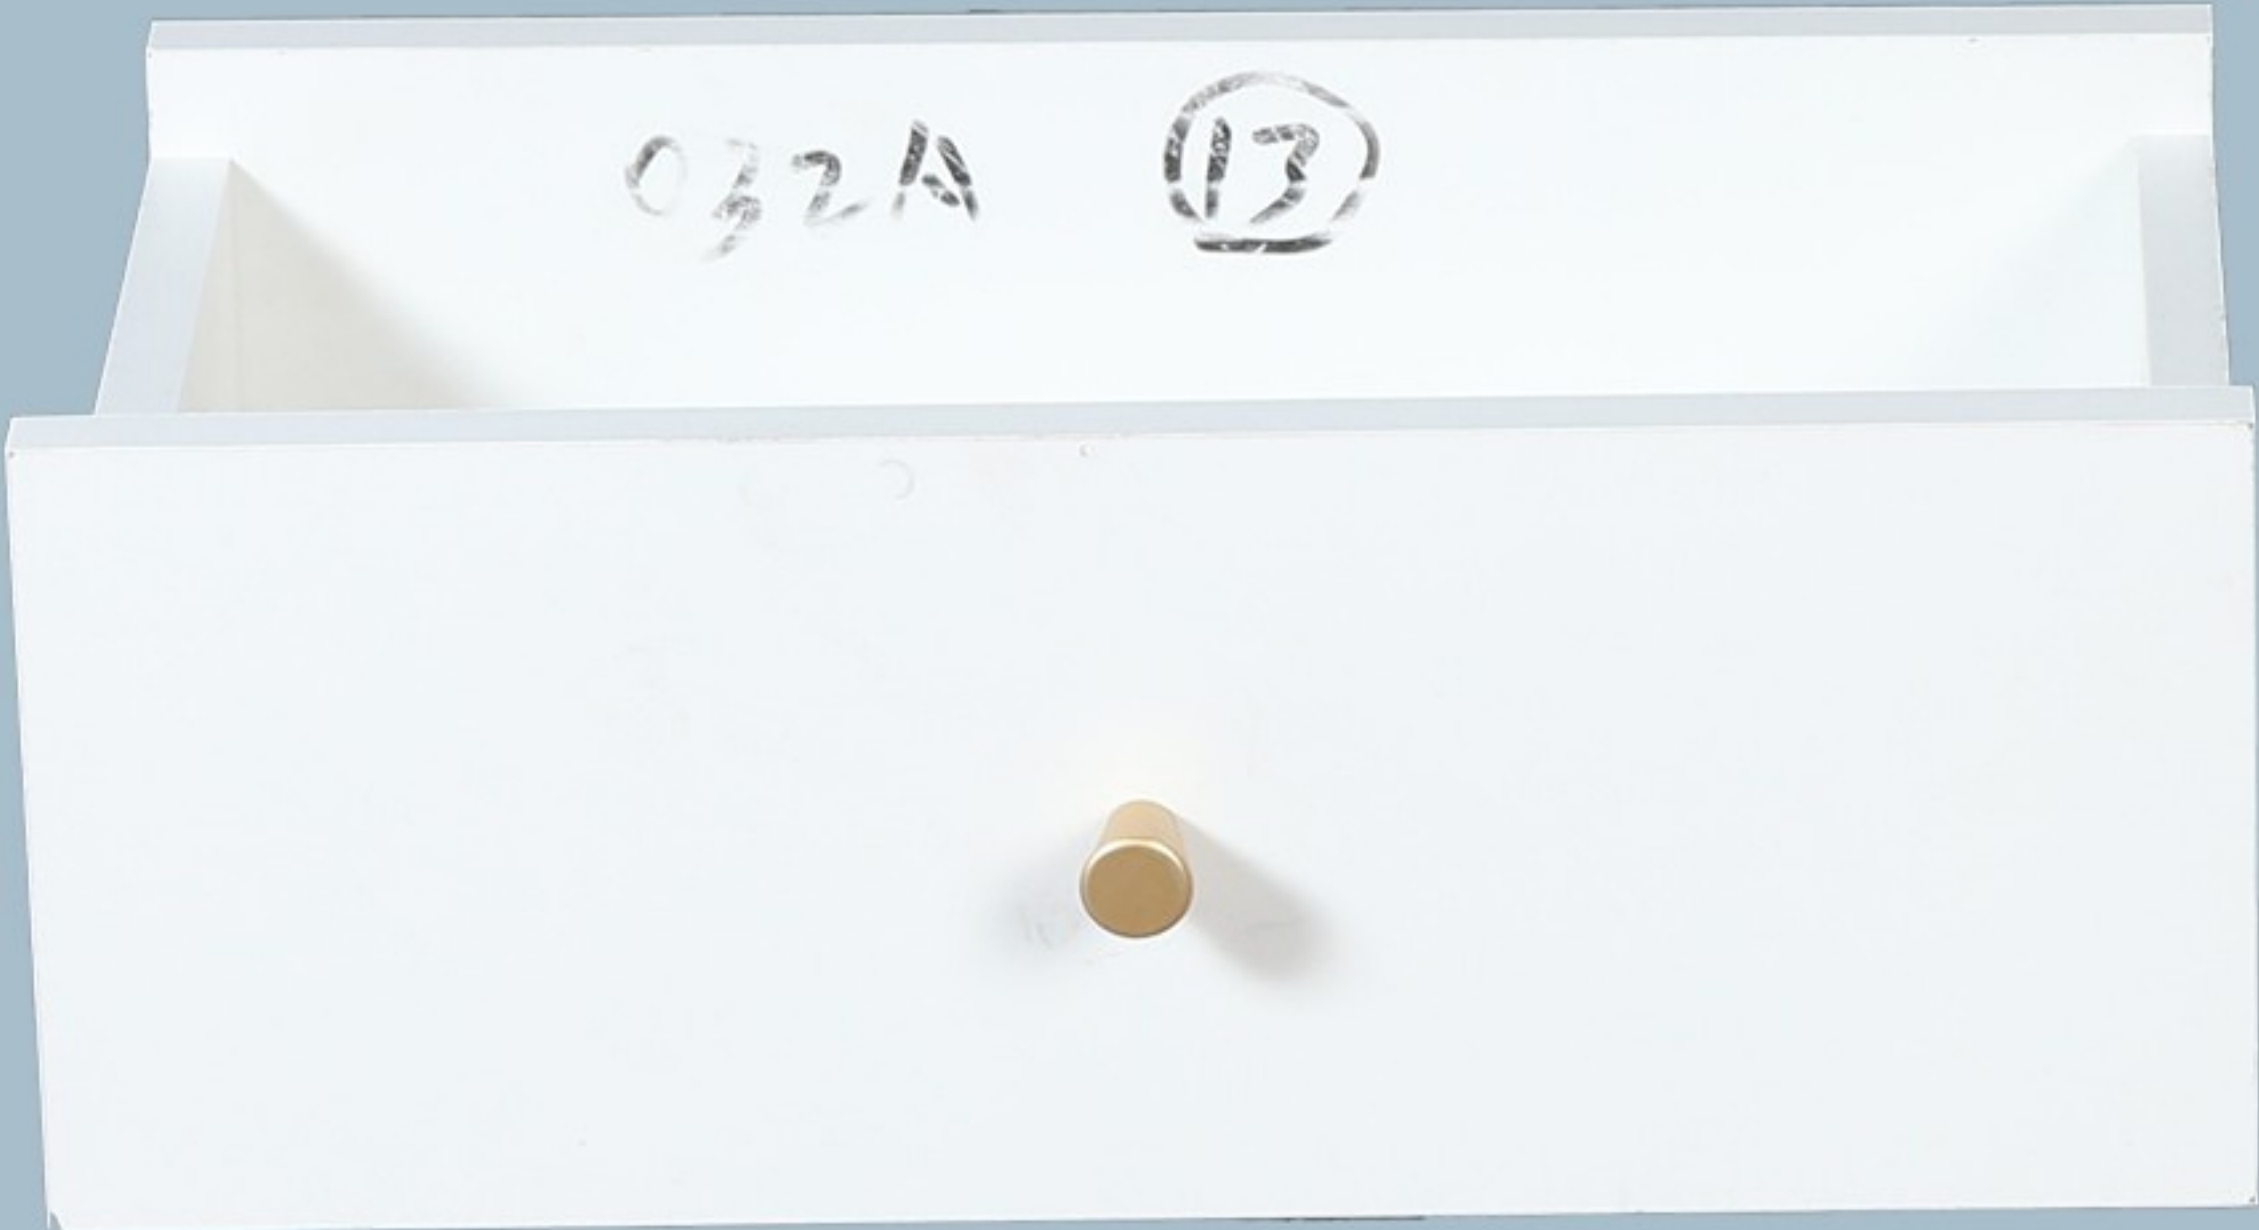


All drawers installed

Fourth. Whole Part Installation

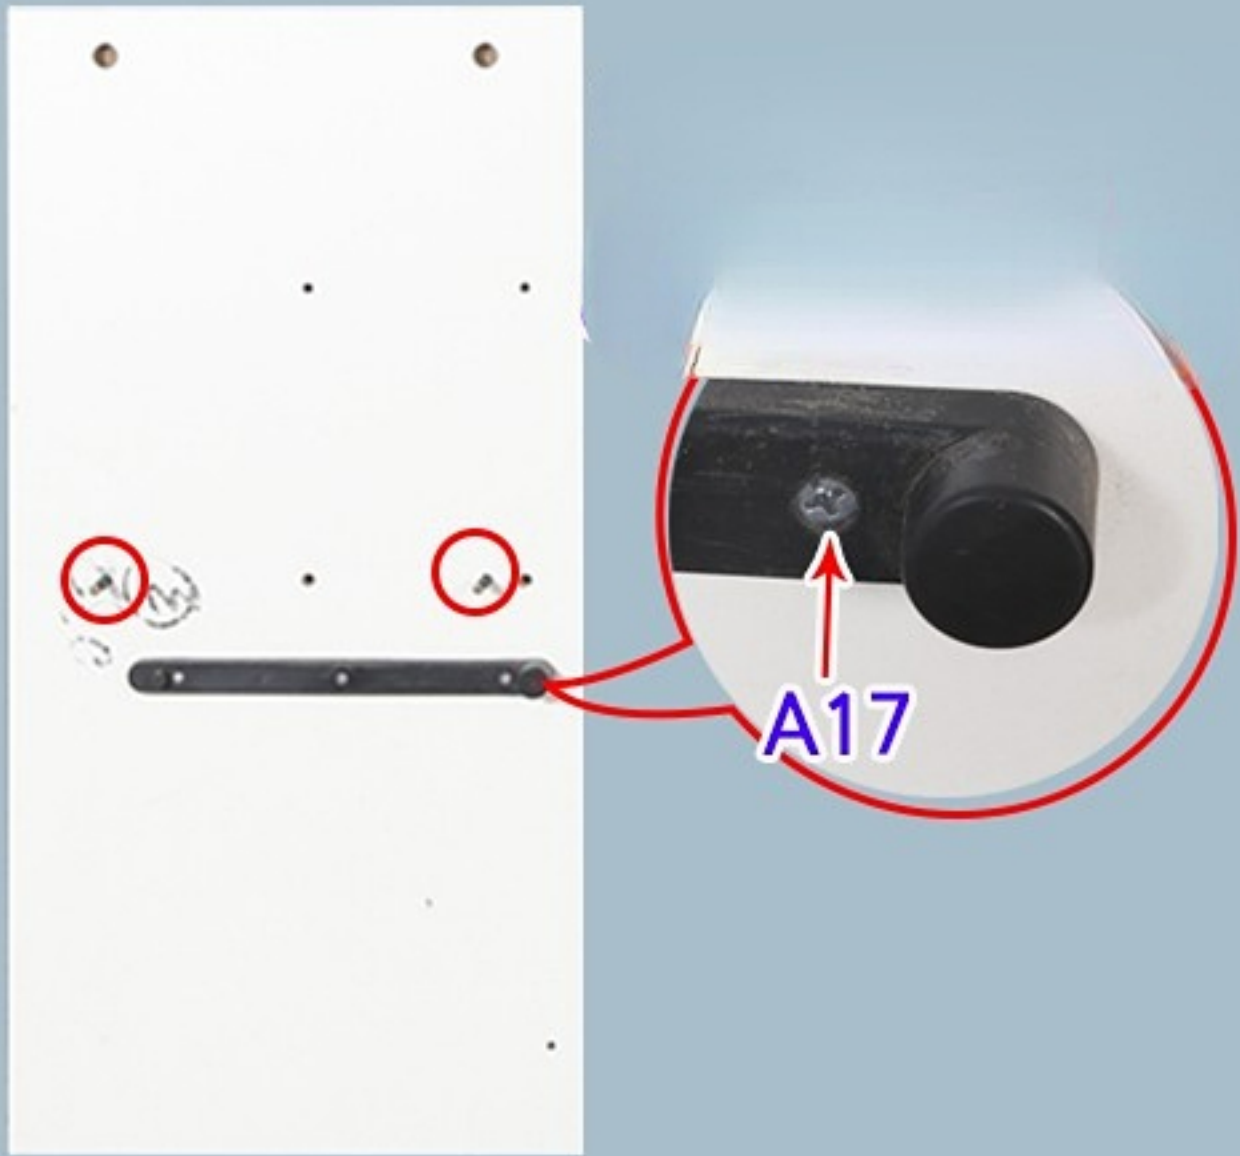


<1>

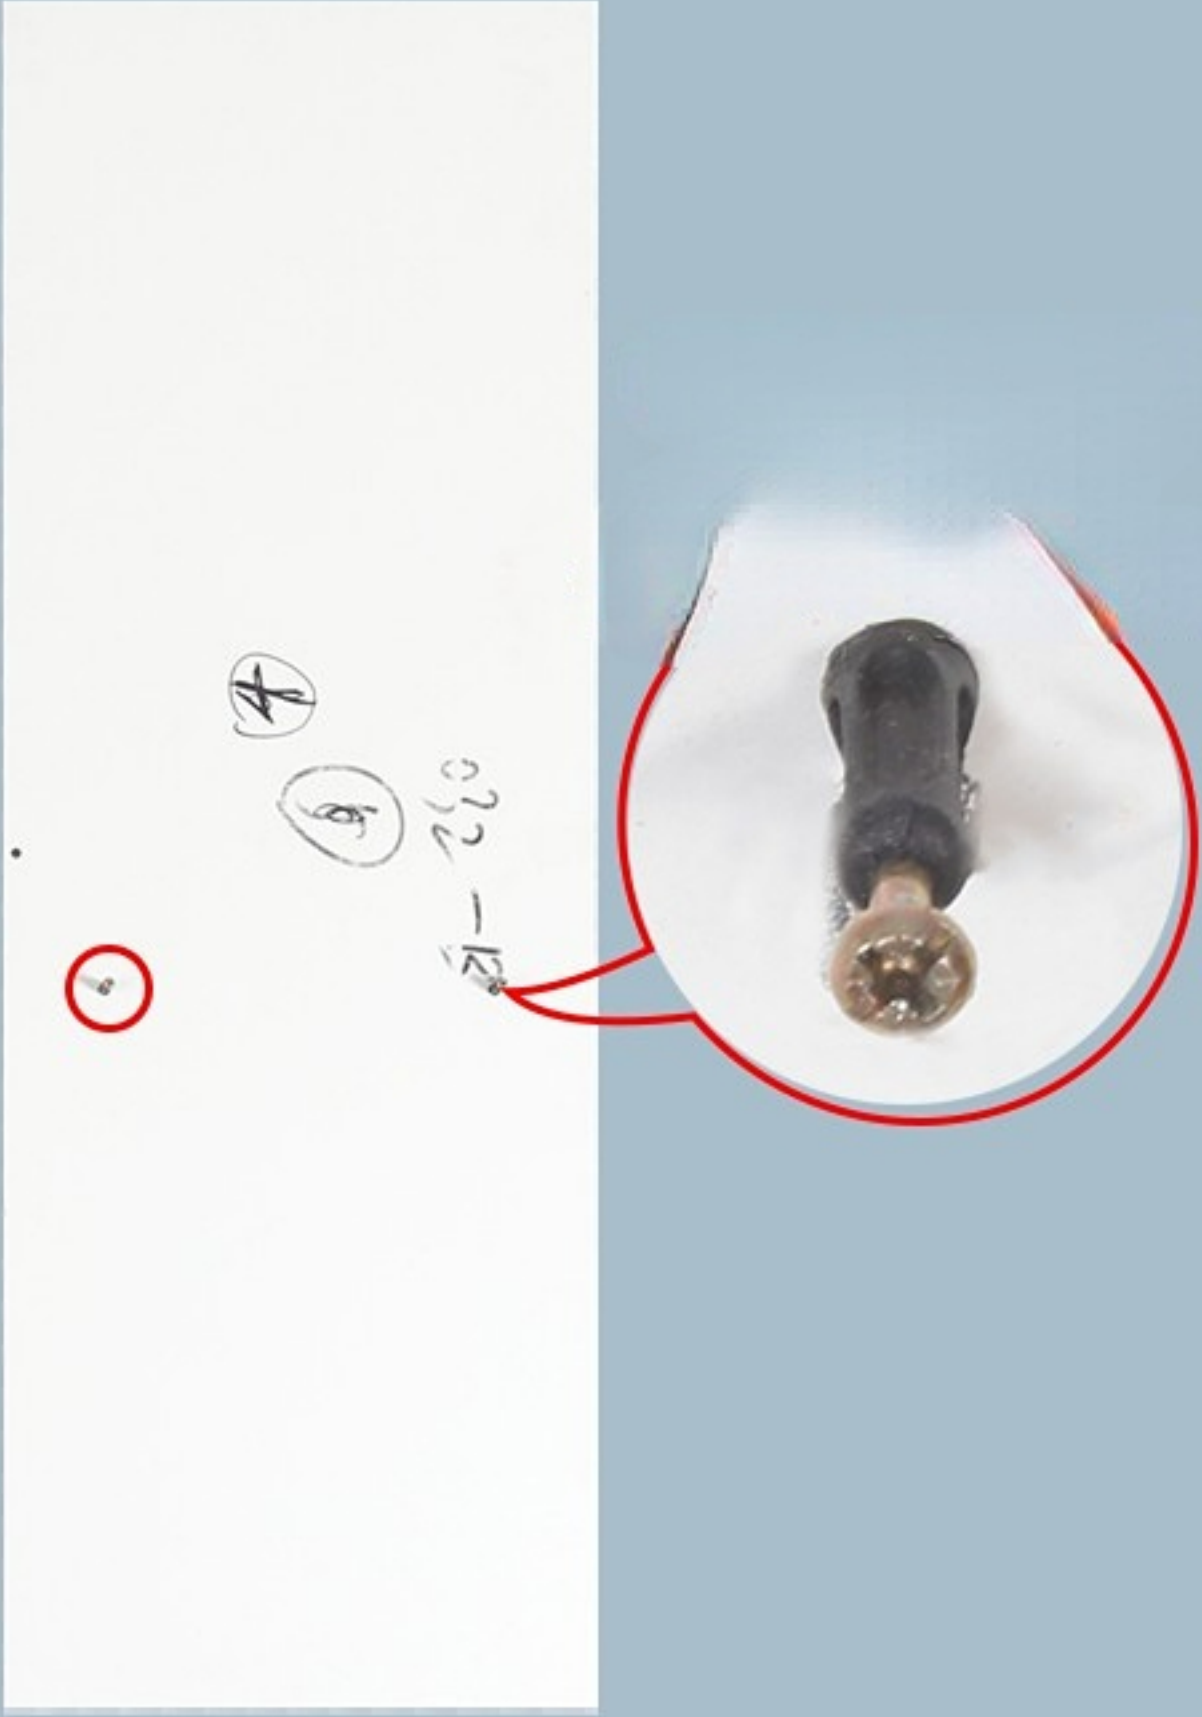

③ Middle Riser Plank




④ Top Storage Shelf

		
3.5*18 Tapping Screw	Flip up Guide Rail	Eccentric Screw Bar
A17*3	G8*1	D14*4



#2 plank non-piercing on top and left

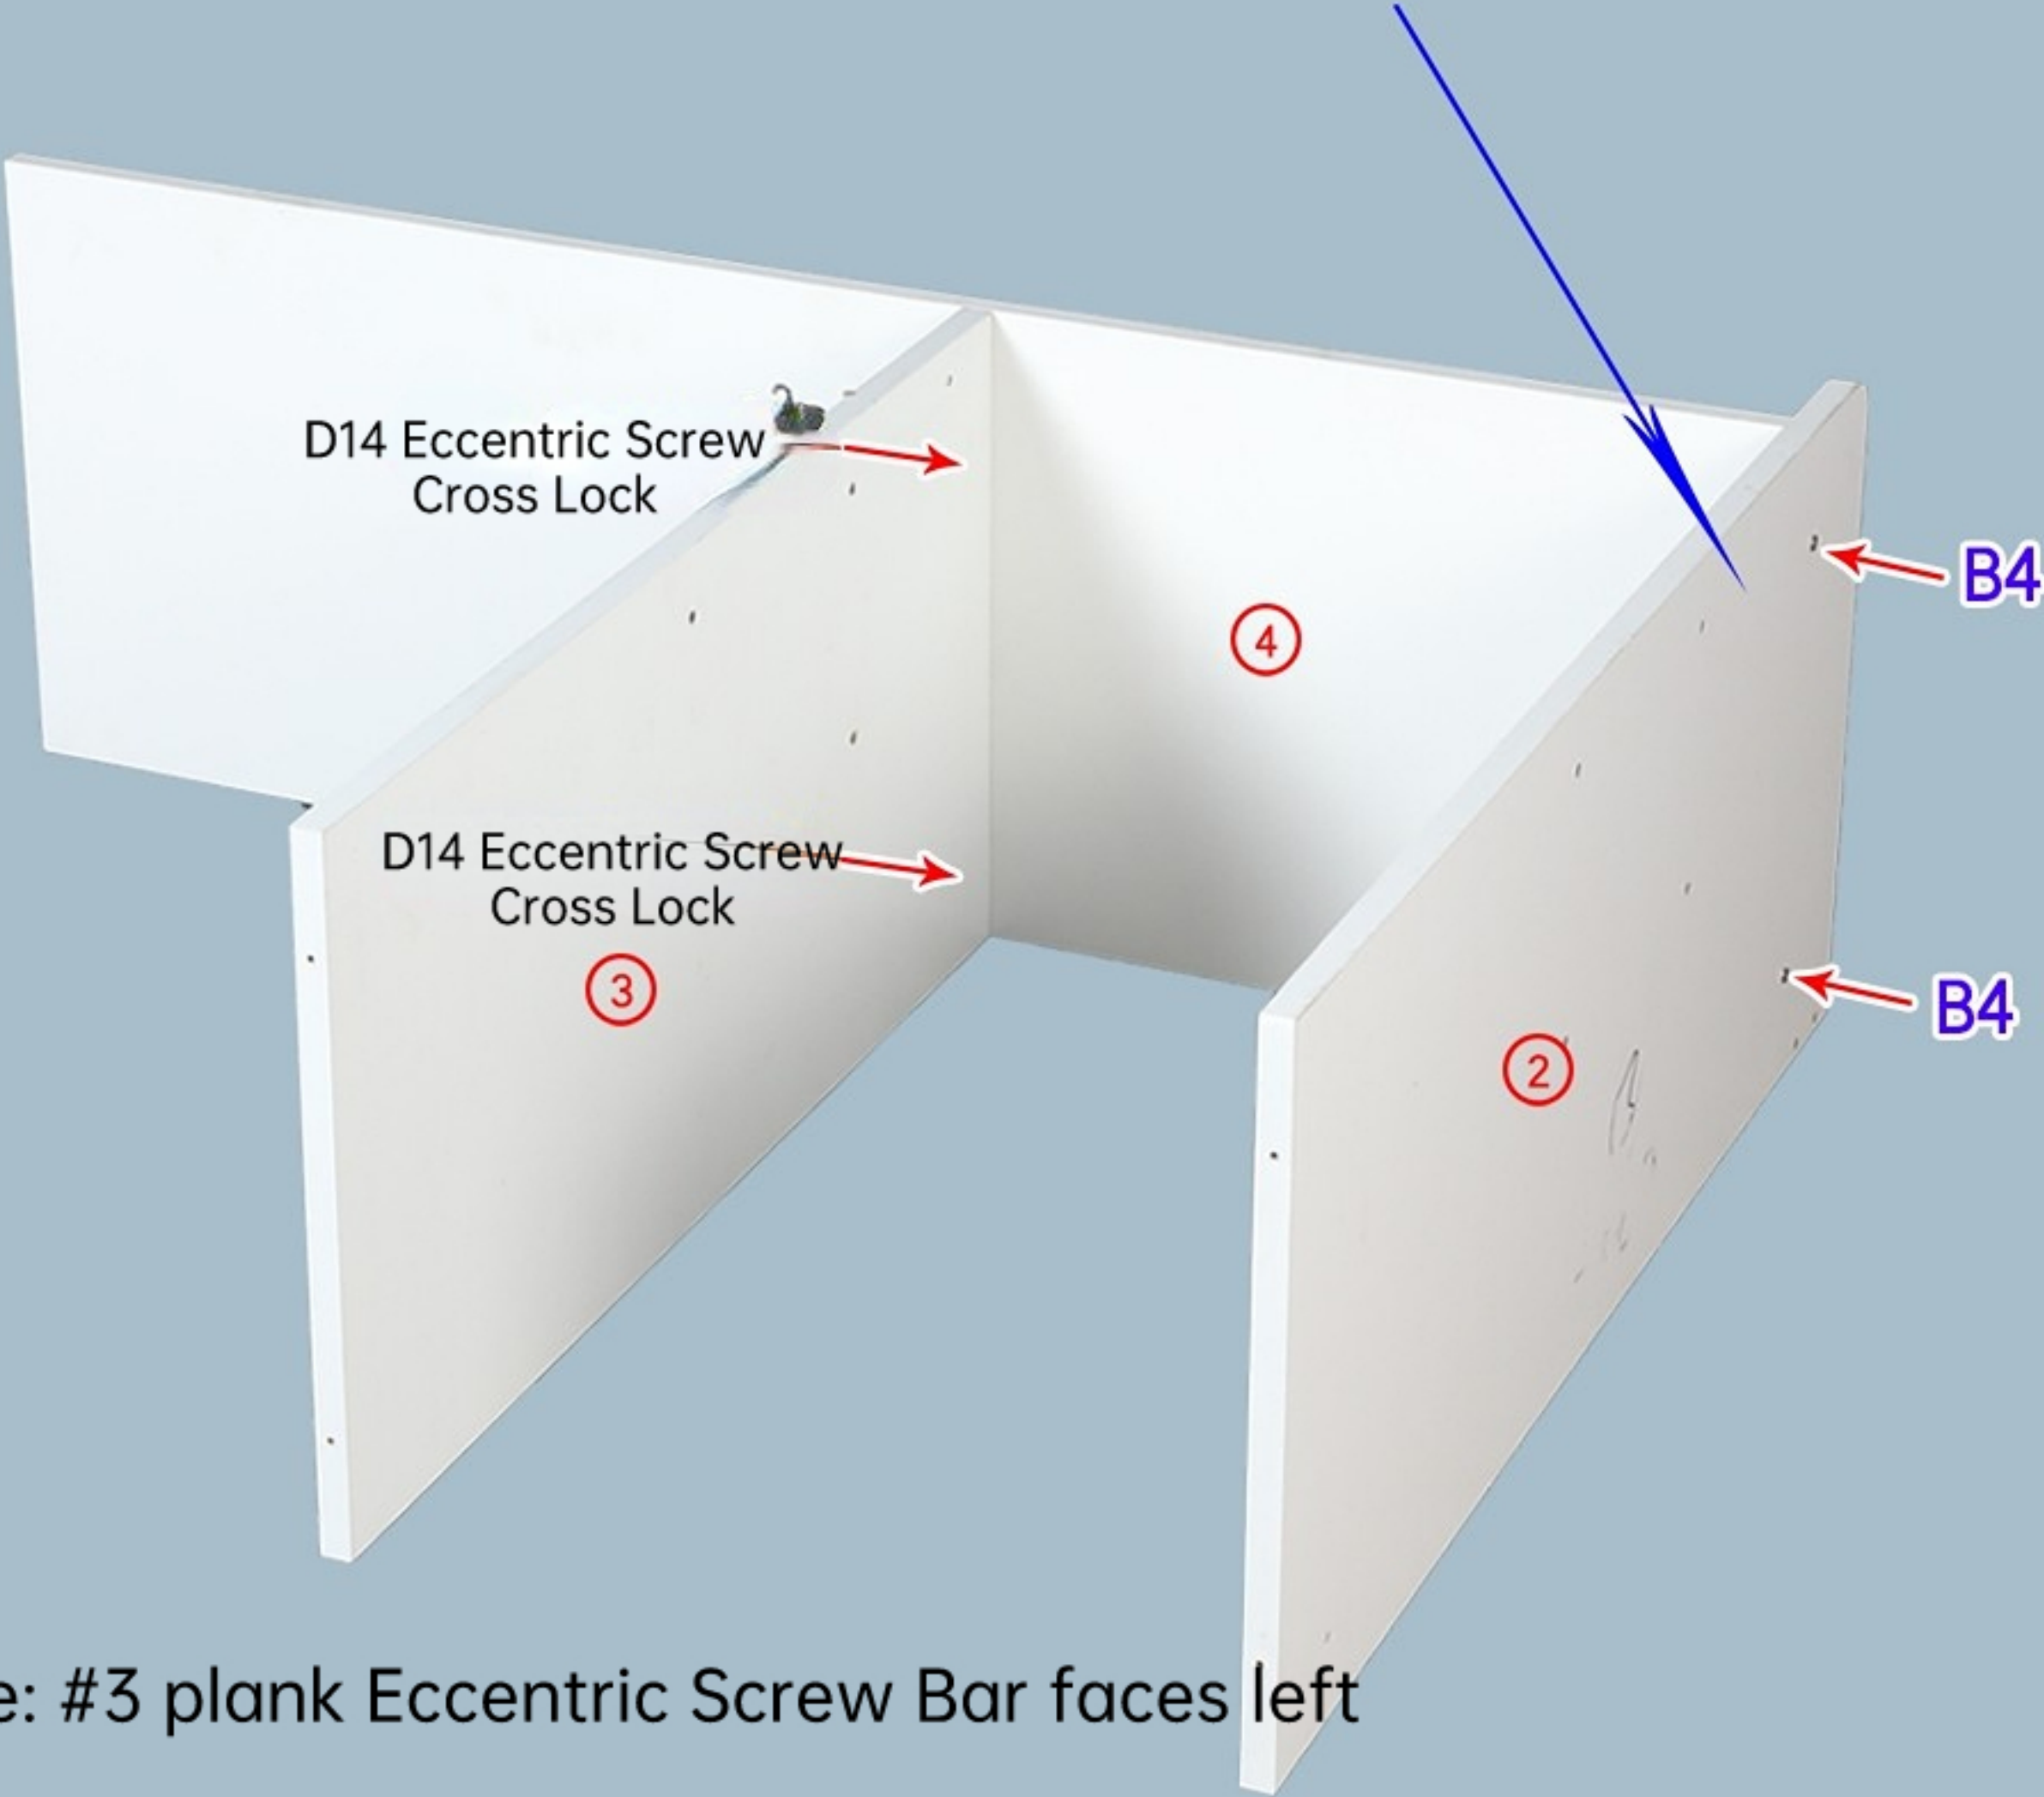

Note: #3 plank Eccentric Screw Bar faces left

②

Right Plank

③

Middle Riser Plank



④

Top Storage Shelf


Eccentric Screw Cross Lock
D14*2
Tapping Screw 4*40
B4*2



<3>

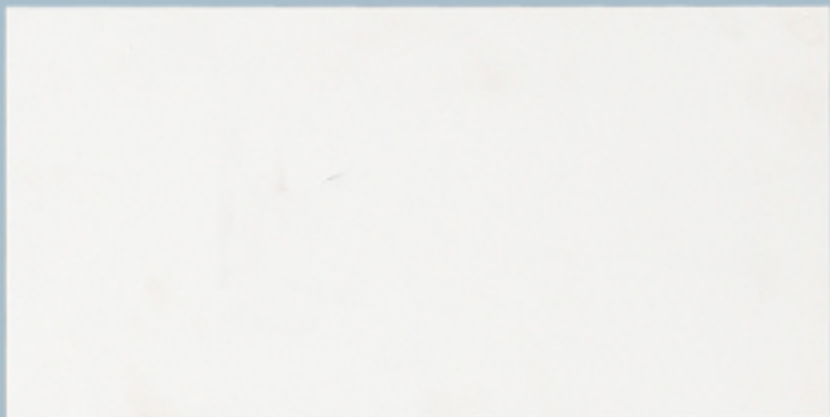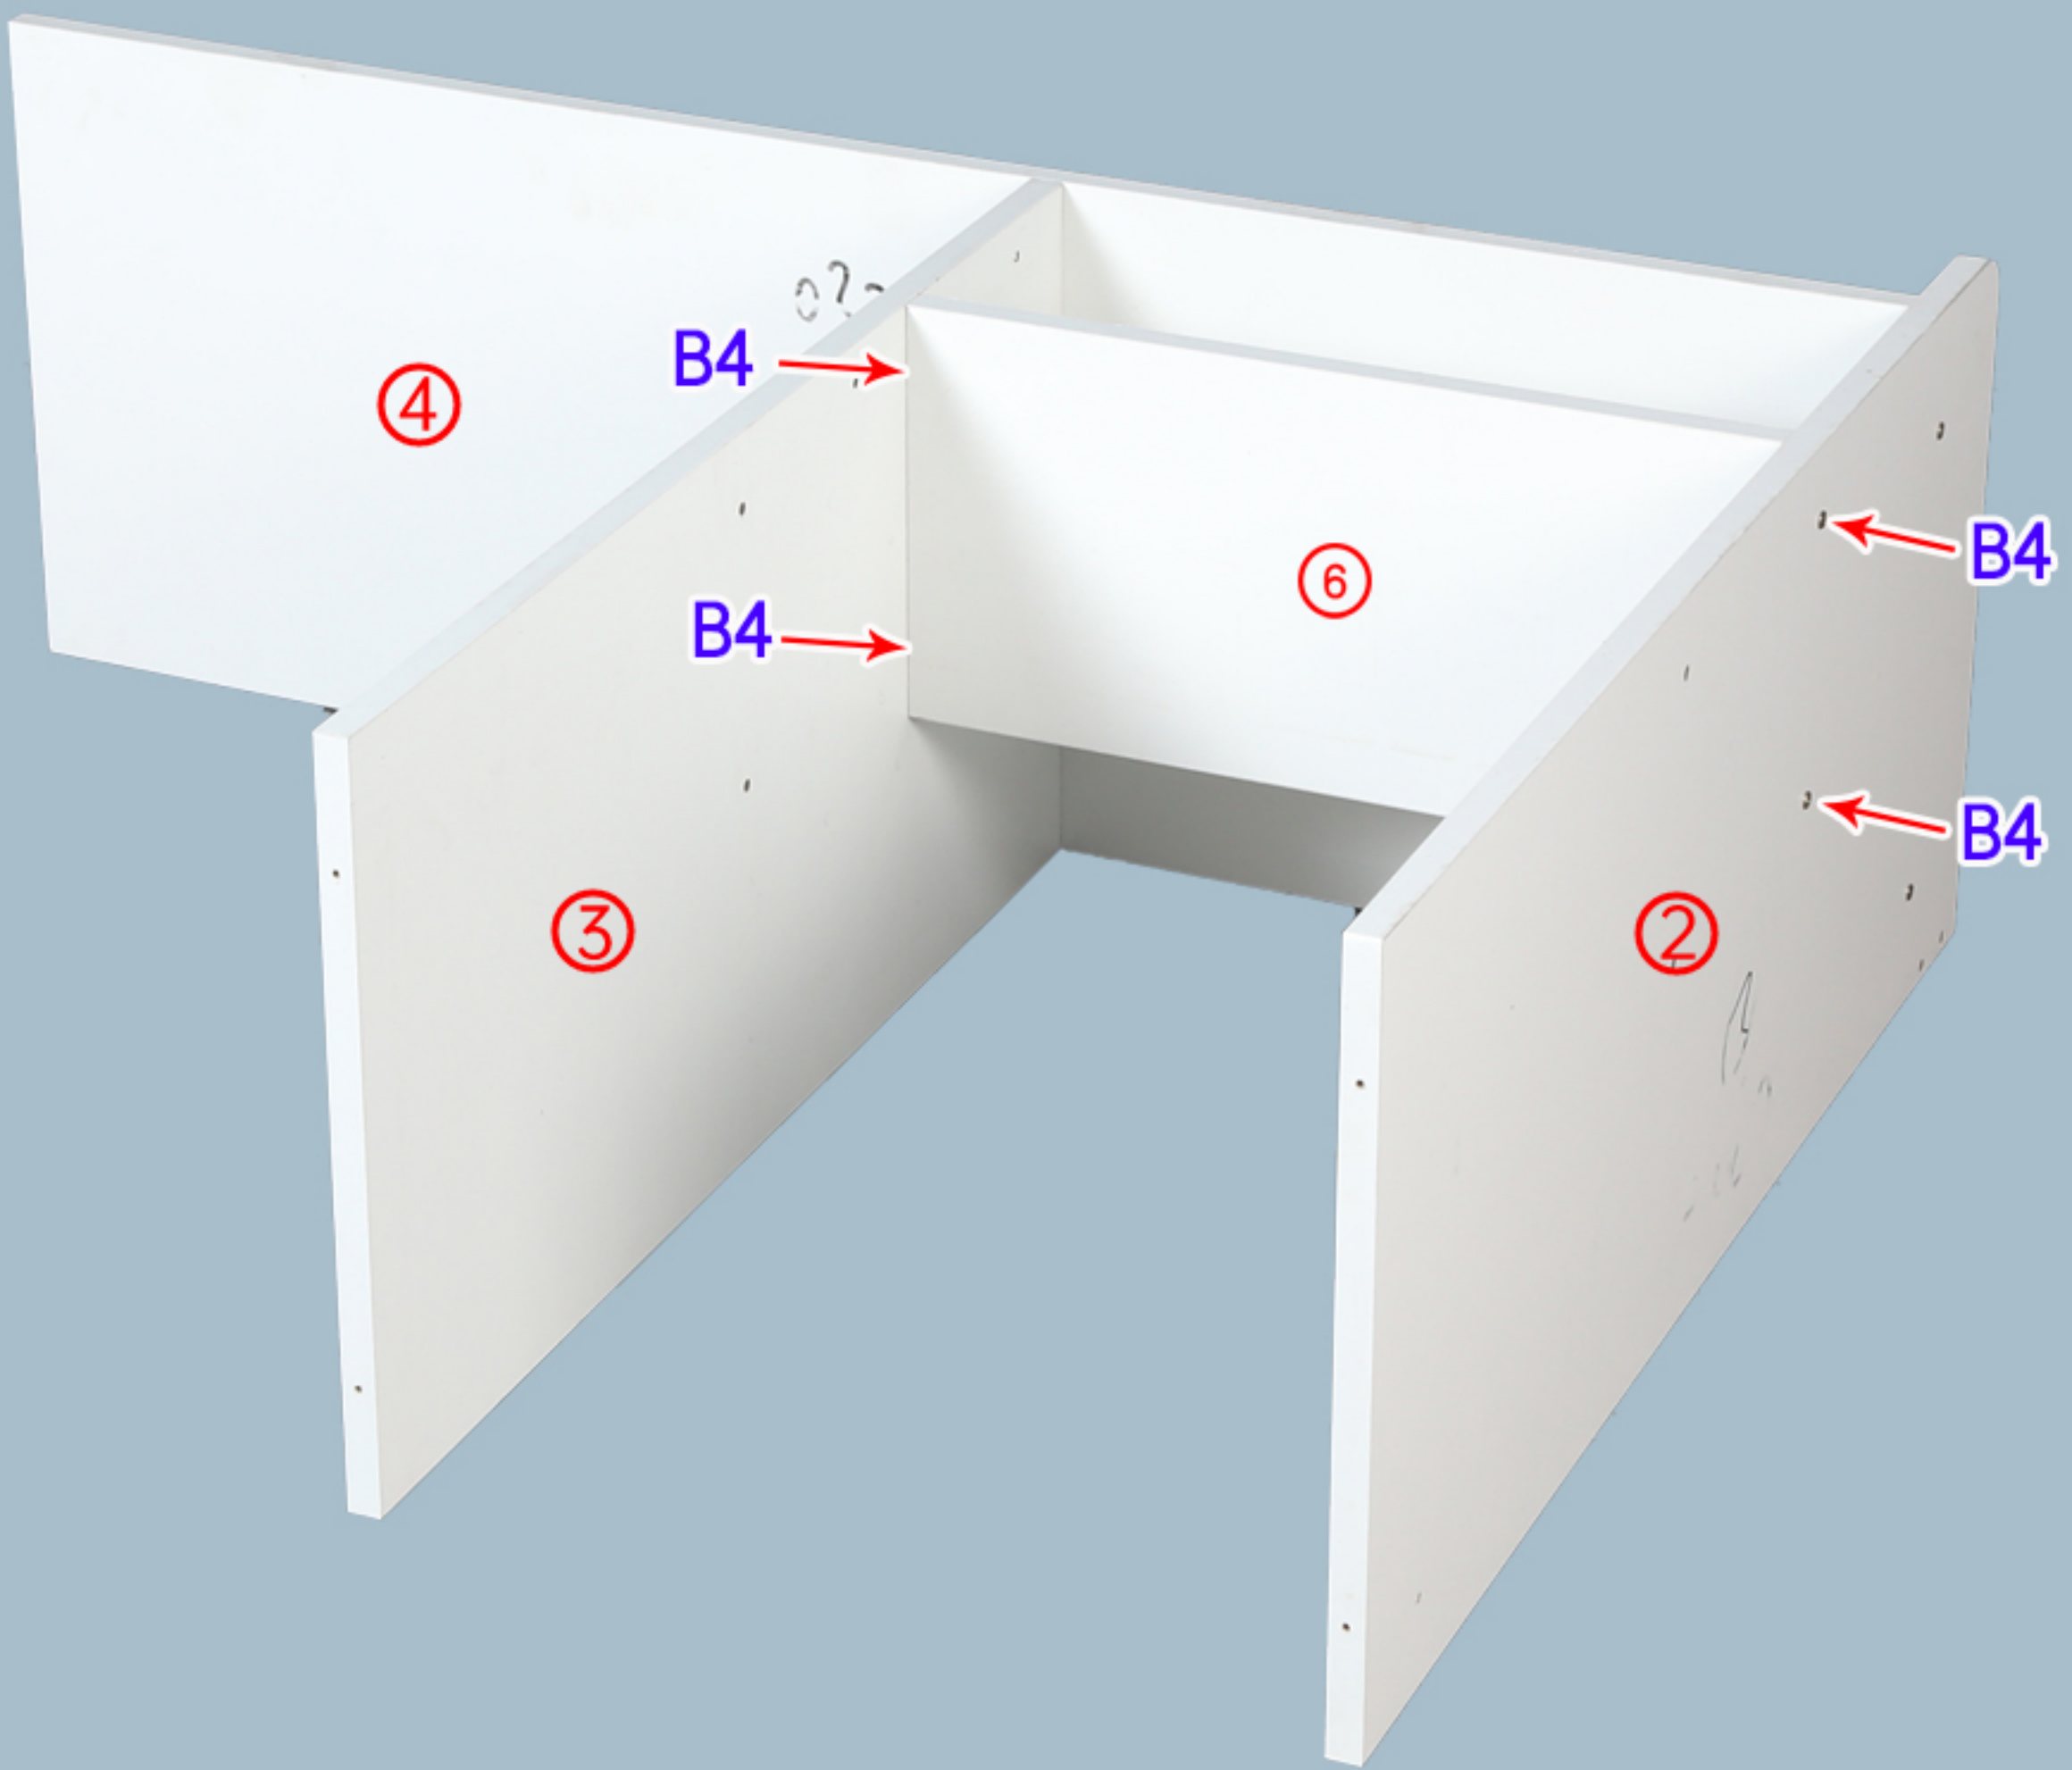

⑥ Upper drawer bottom support plate

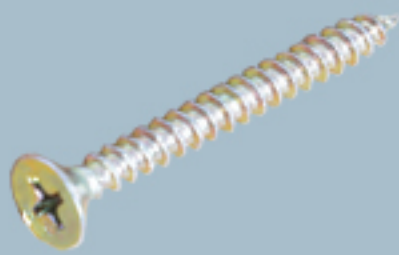


4\*40 Tapping Screw


B4\*4

<4>

L18 is on the upper left and facing forward on #7 plank

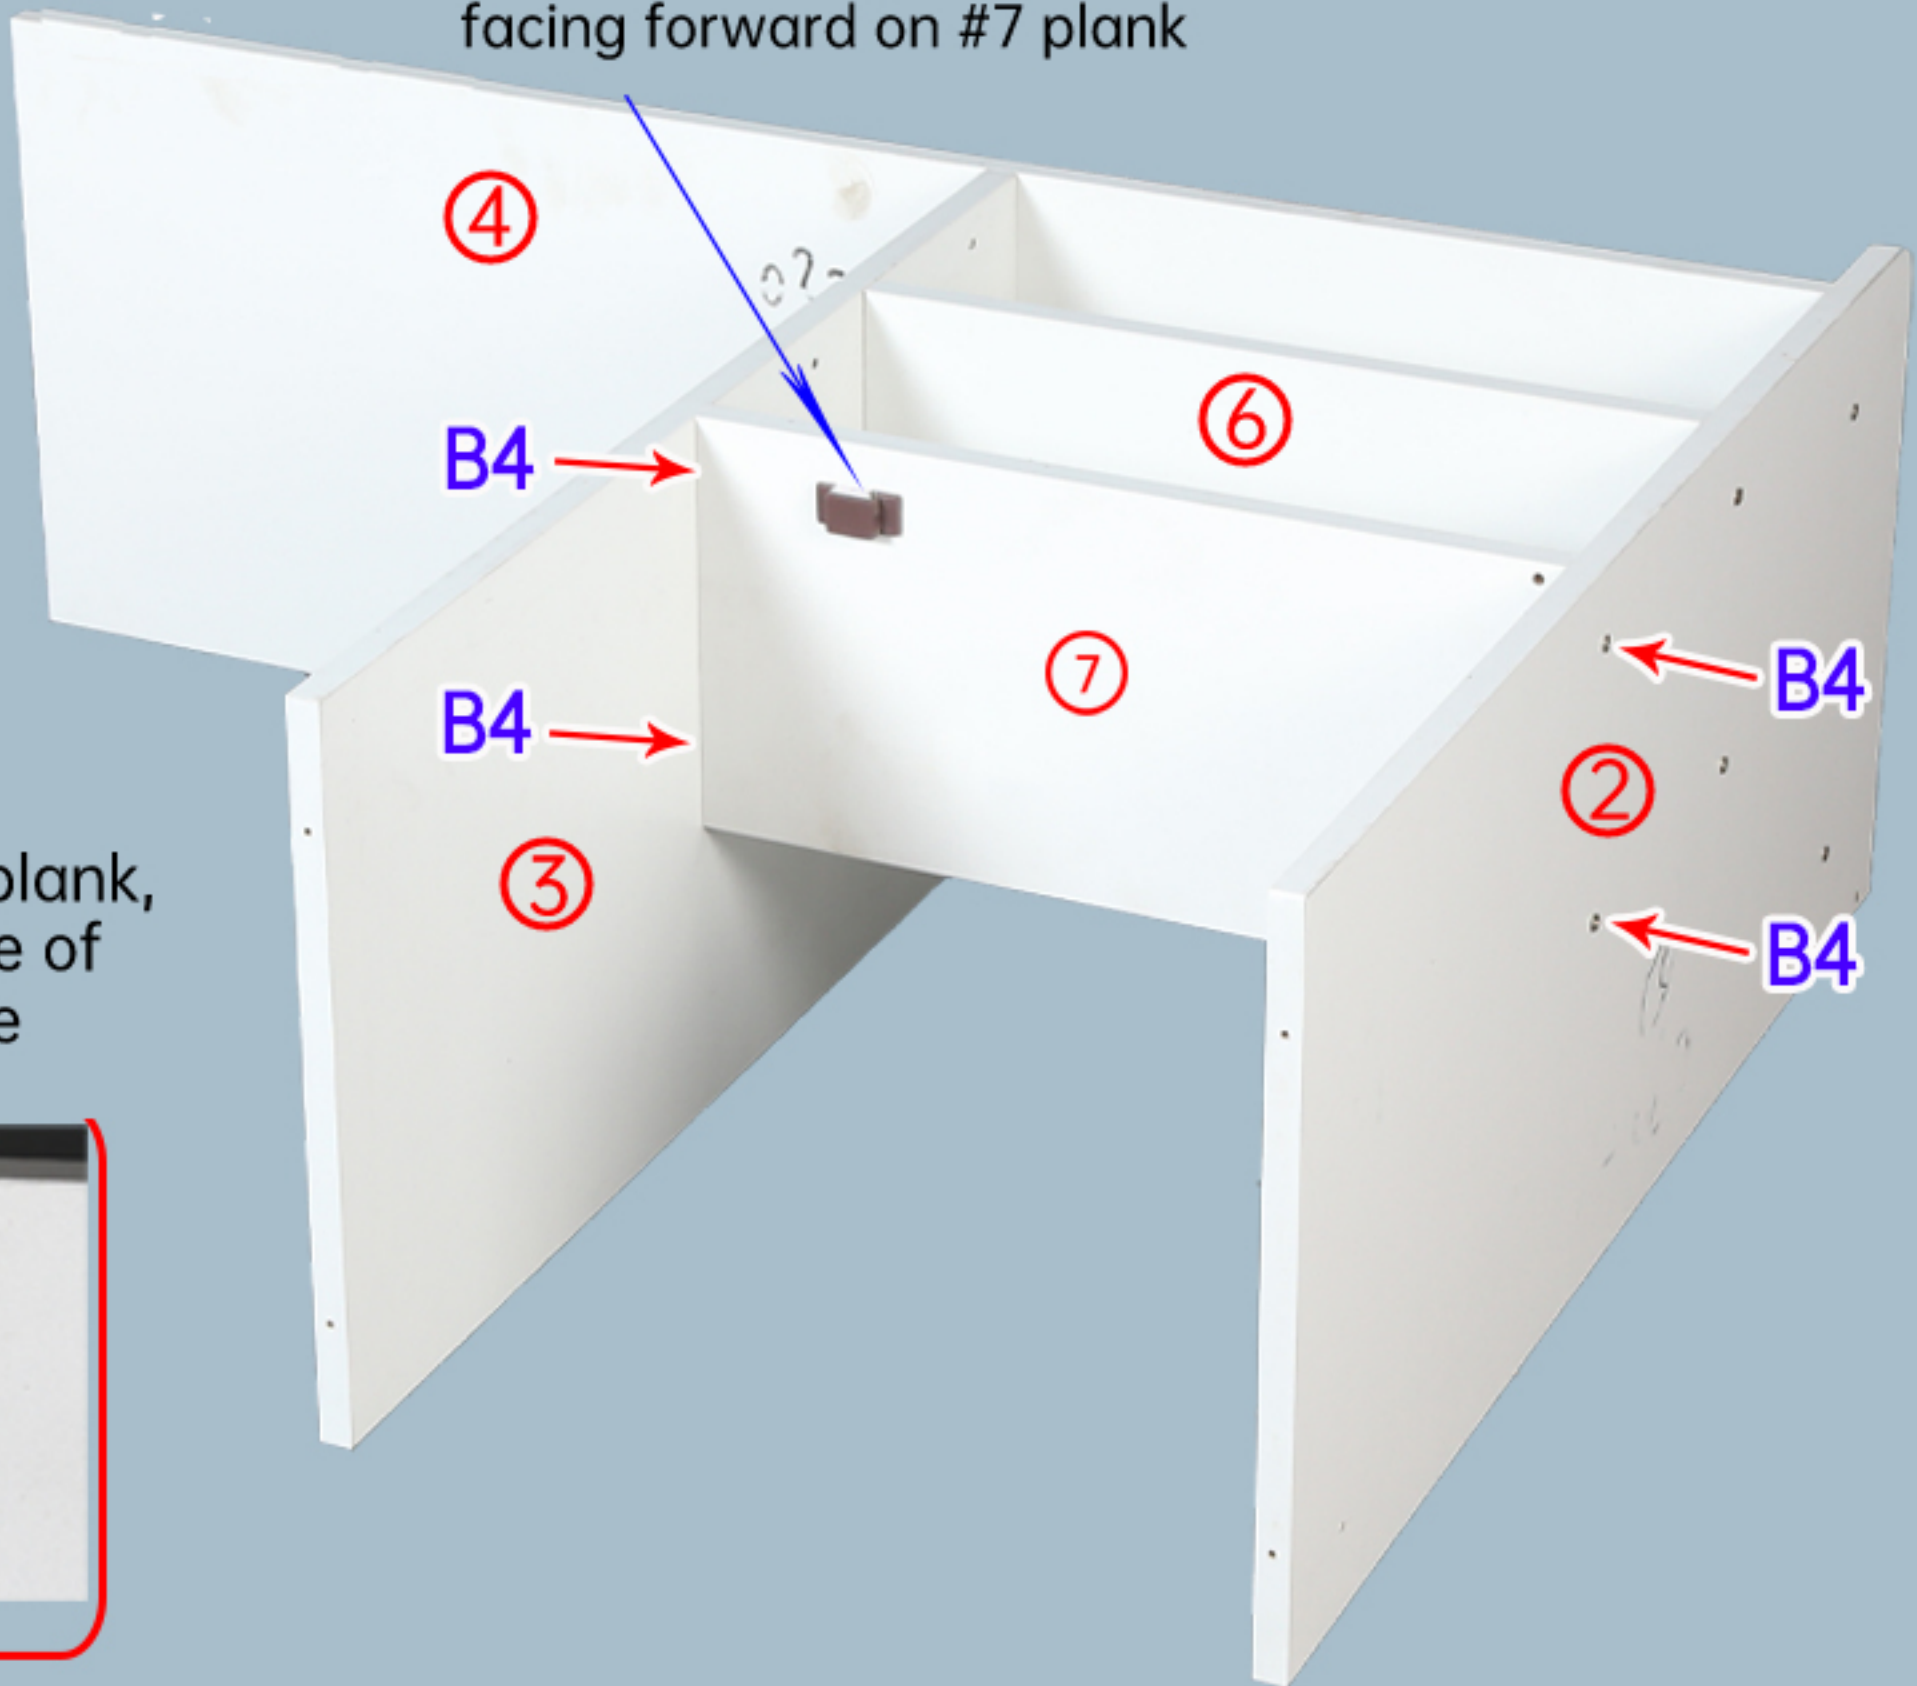

Insert L18 on #7 plank, the magnetic side of L18 faces the side

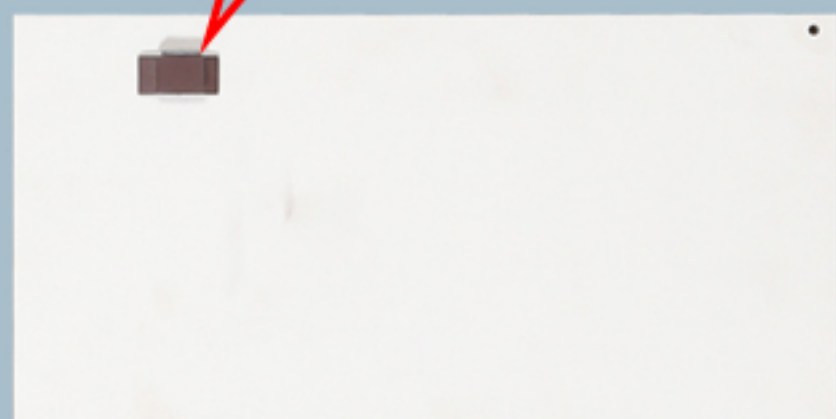


⑦ Bottom support plate for lower drawer



Embedded Door Stopper

L18\*1


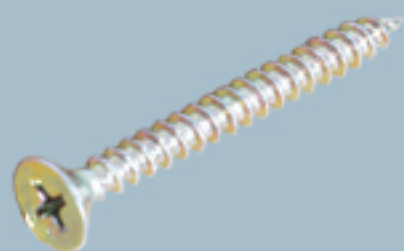


4\*40 Tapping Screw

B4\*4




<5>

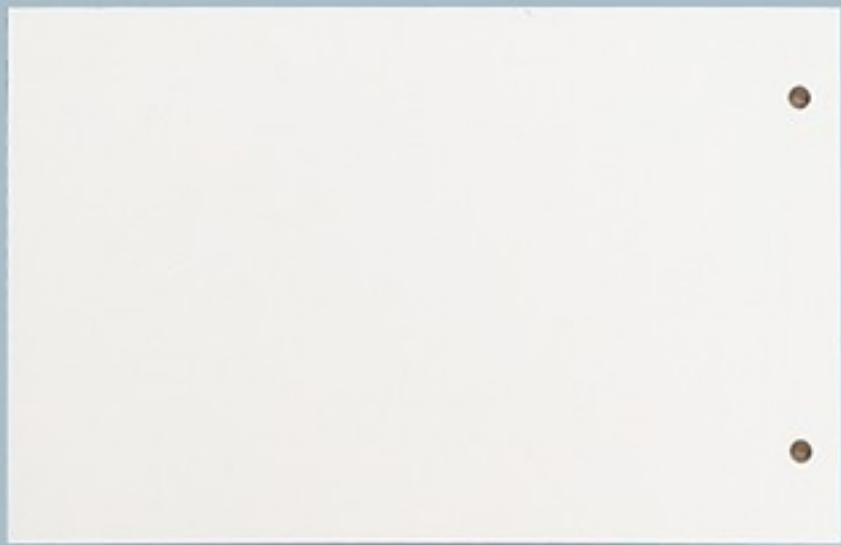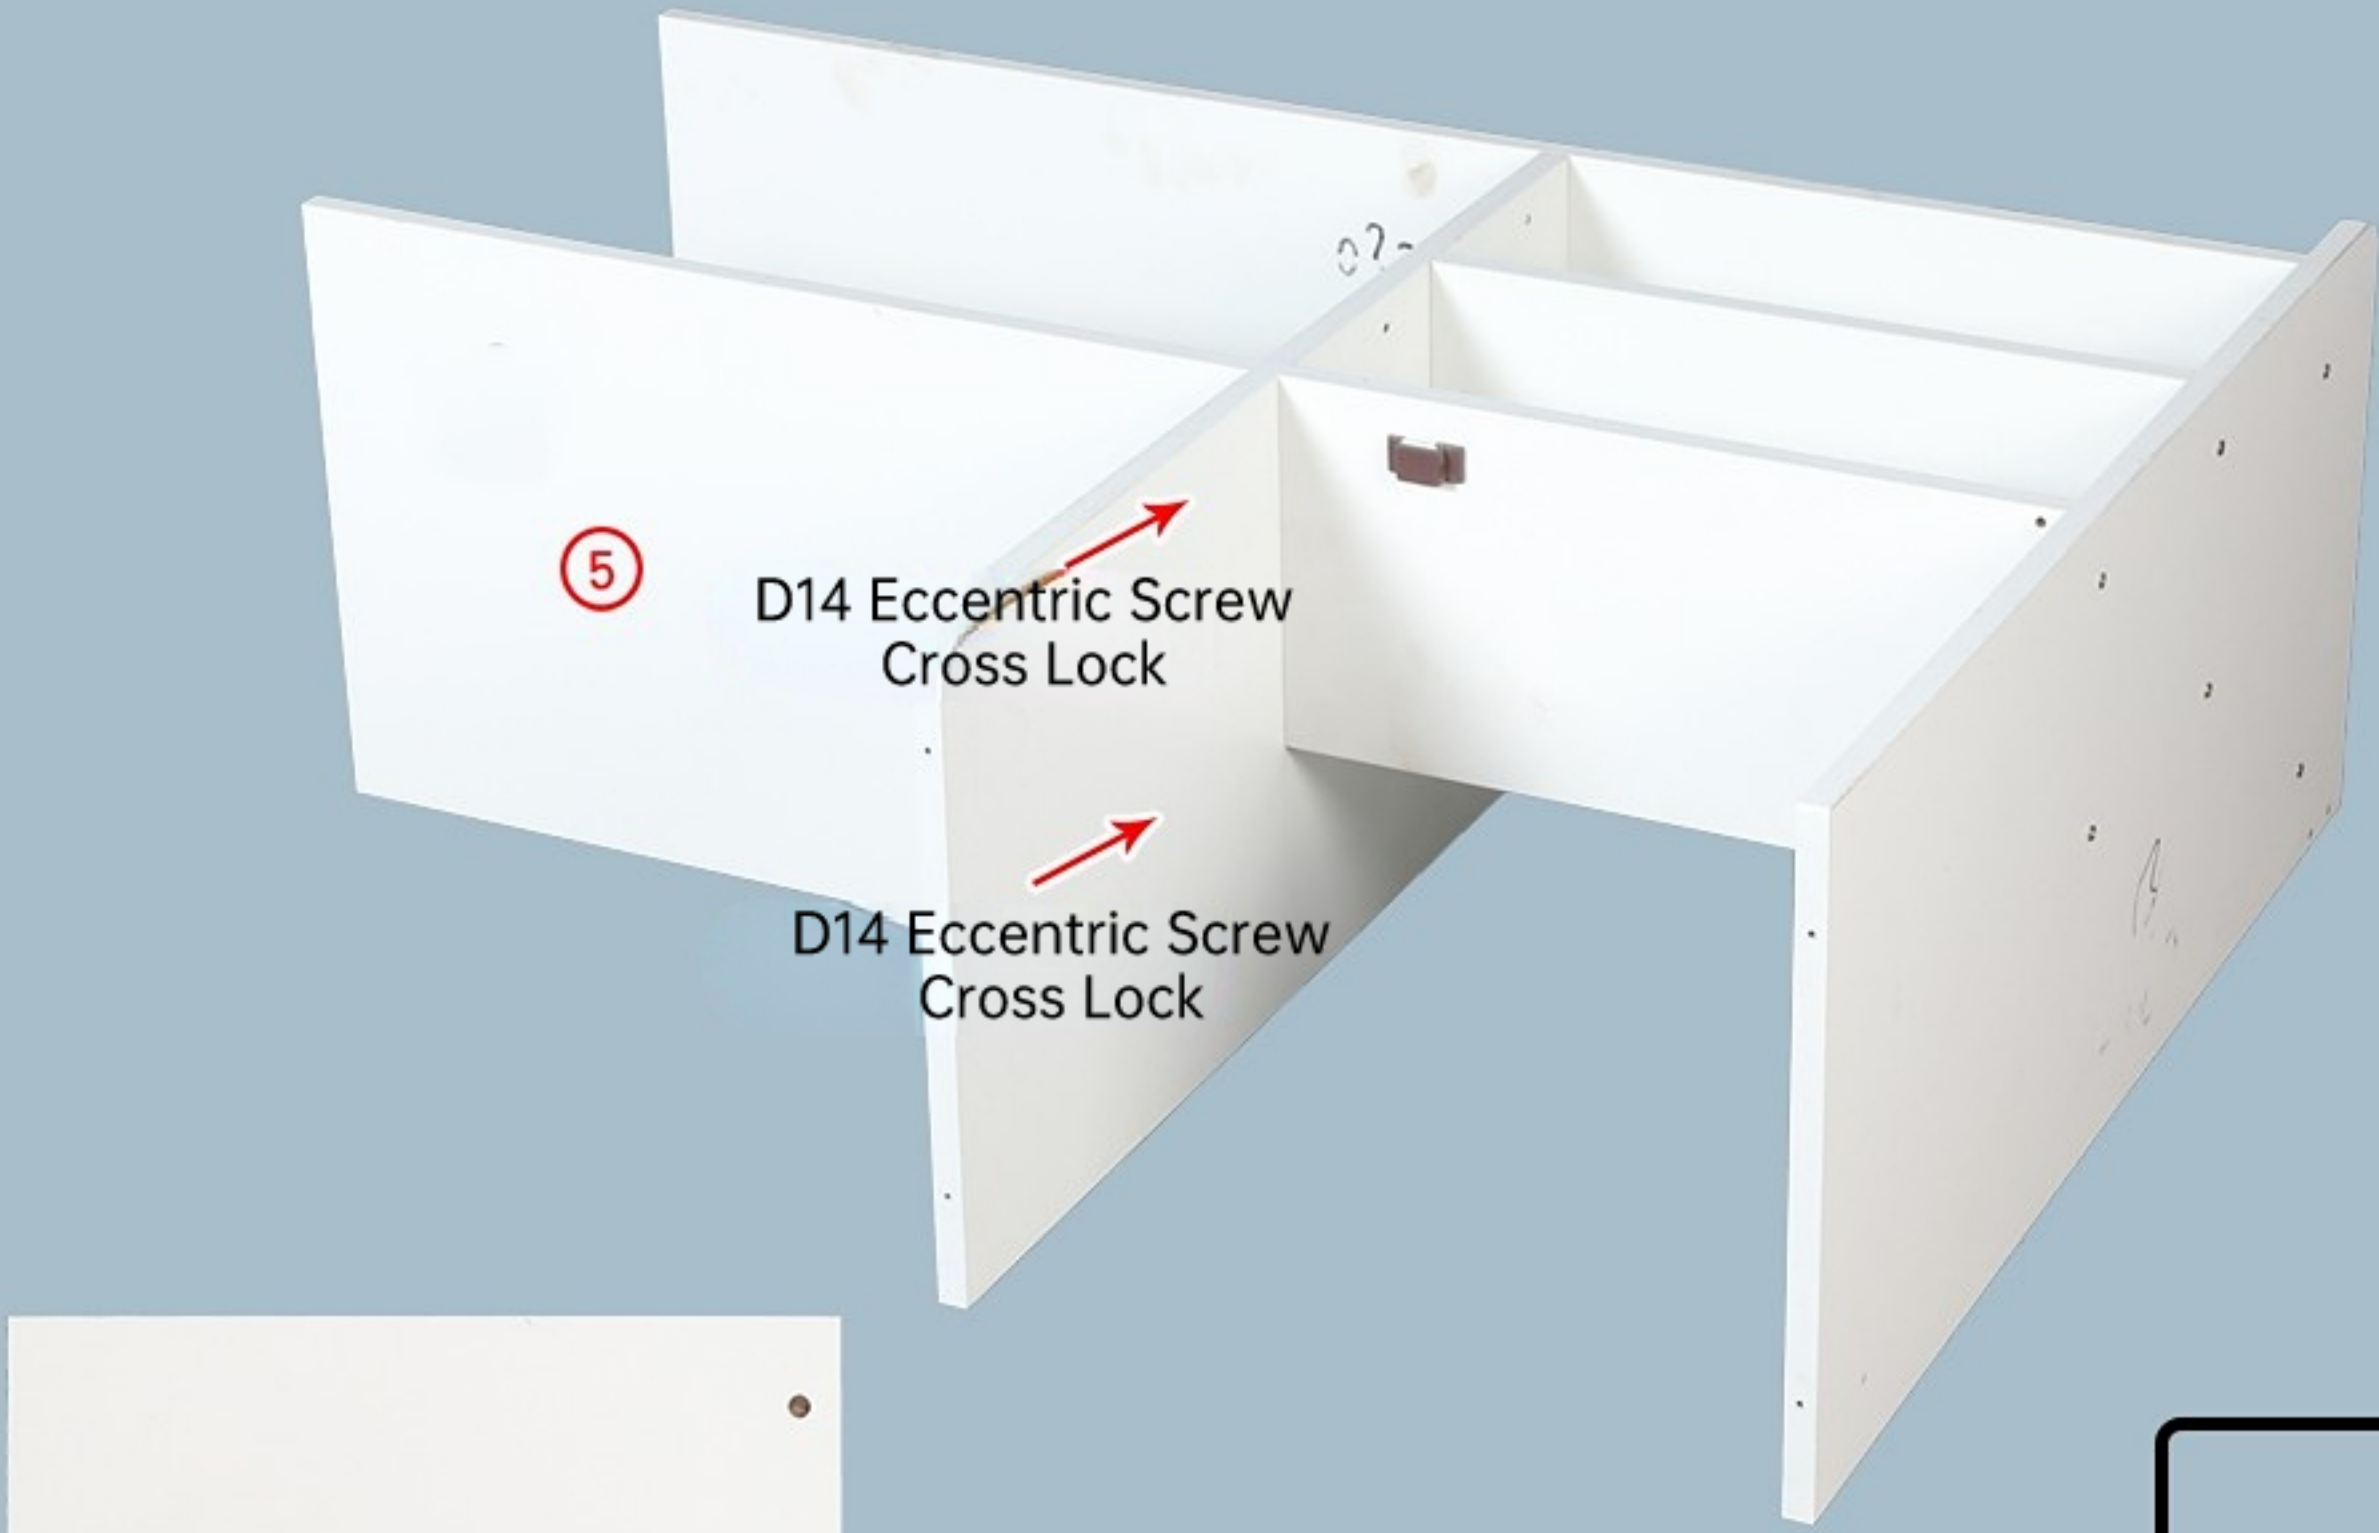

⑤ open storage shelf

Eccentric Screw Cross Lock
D14*2

<6>

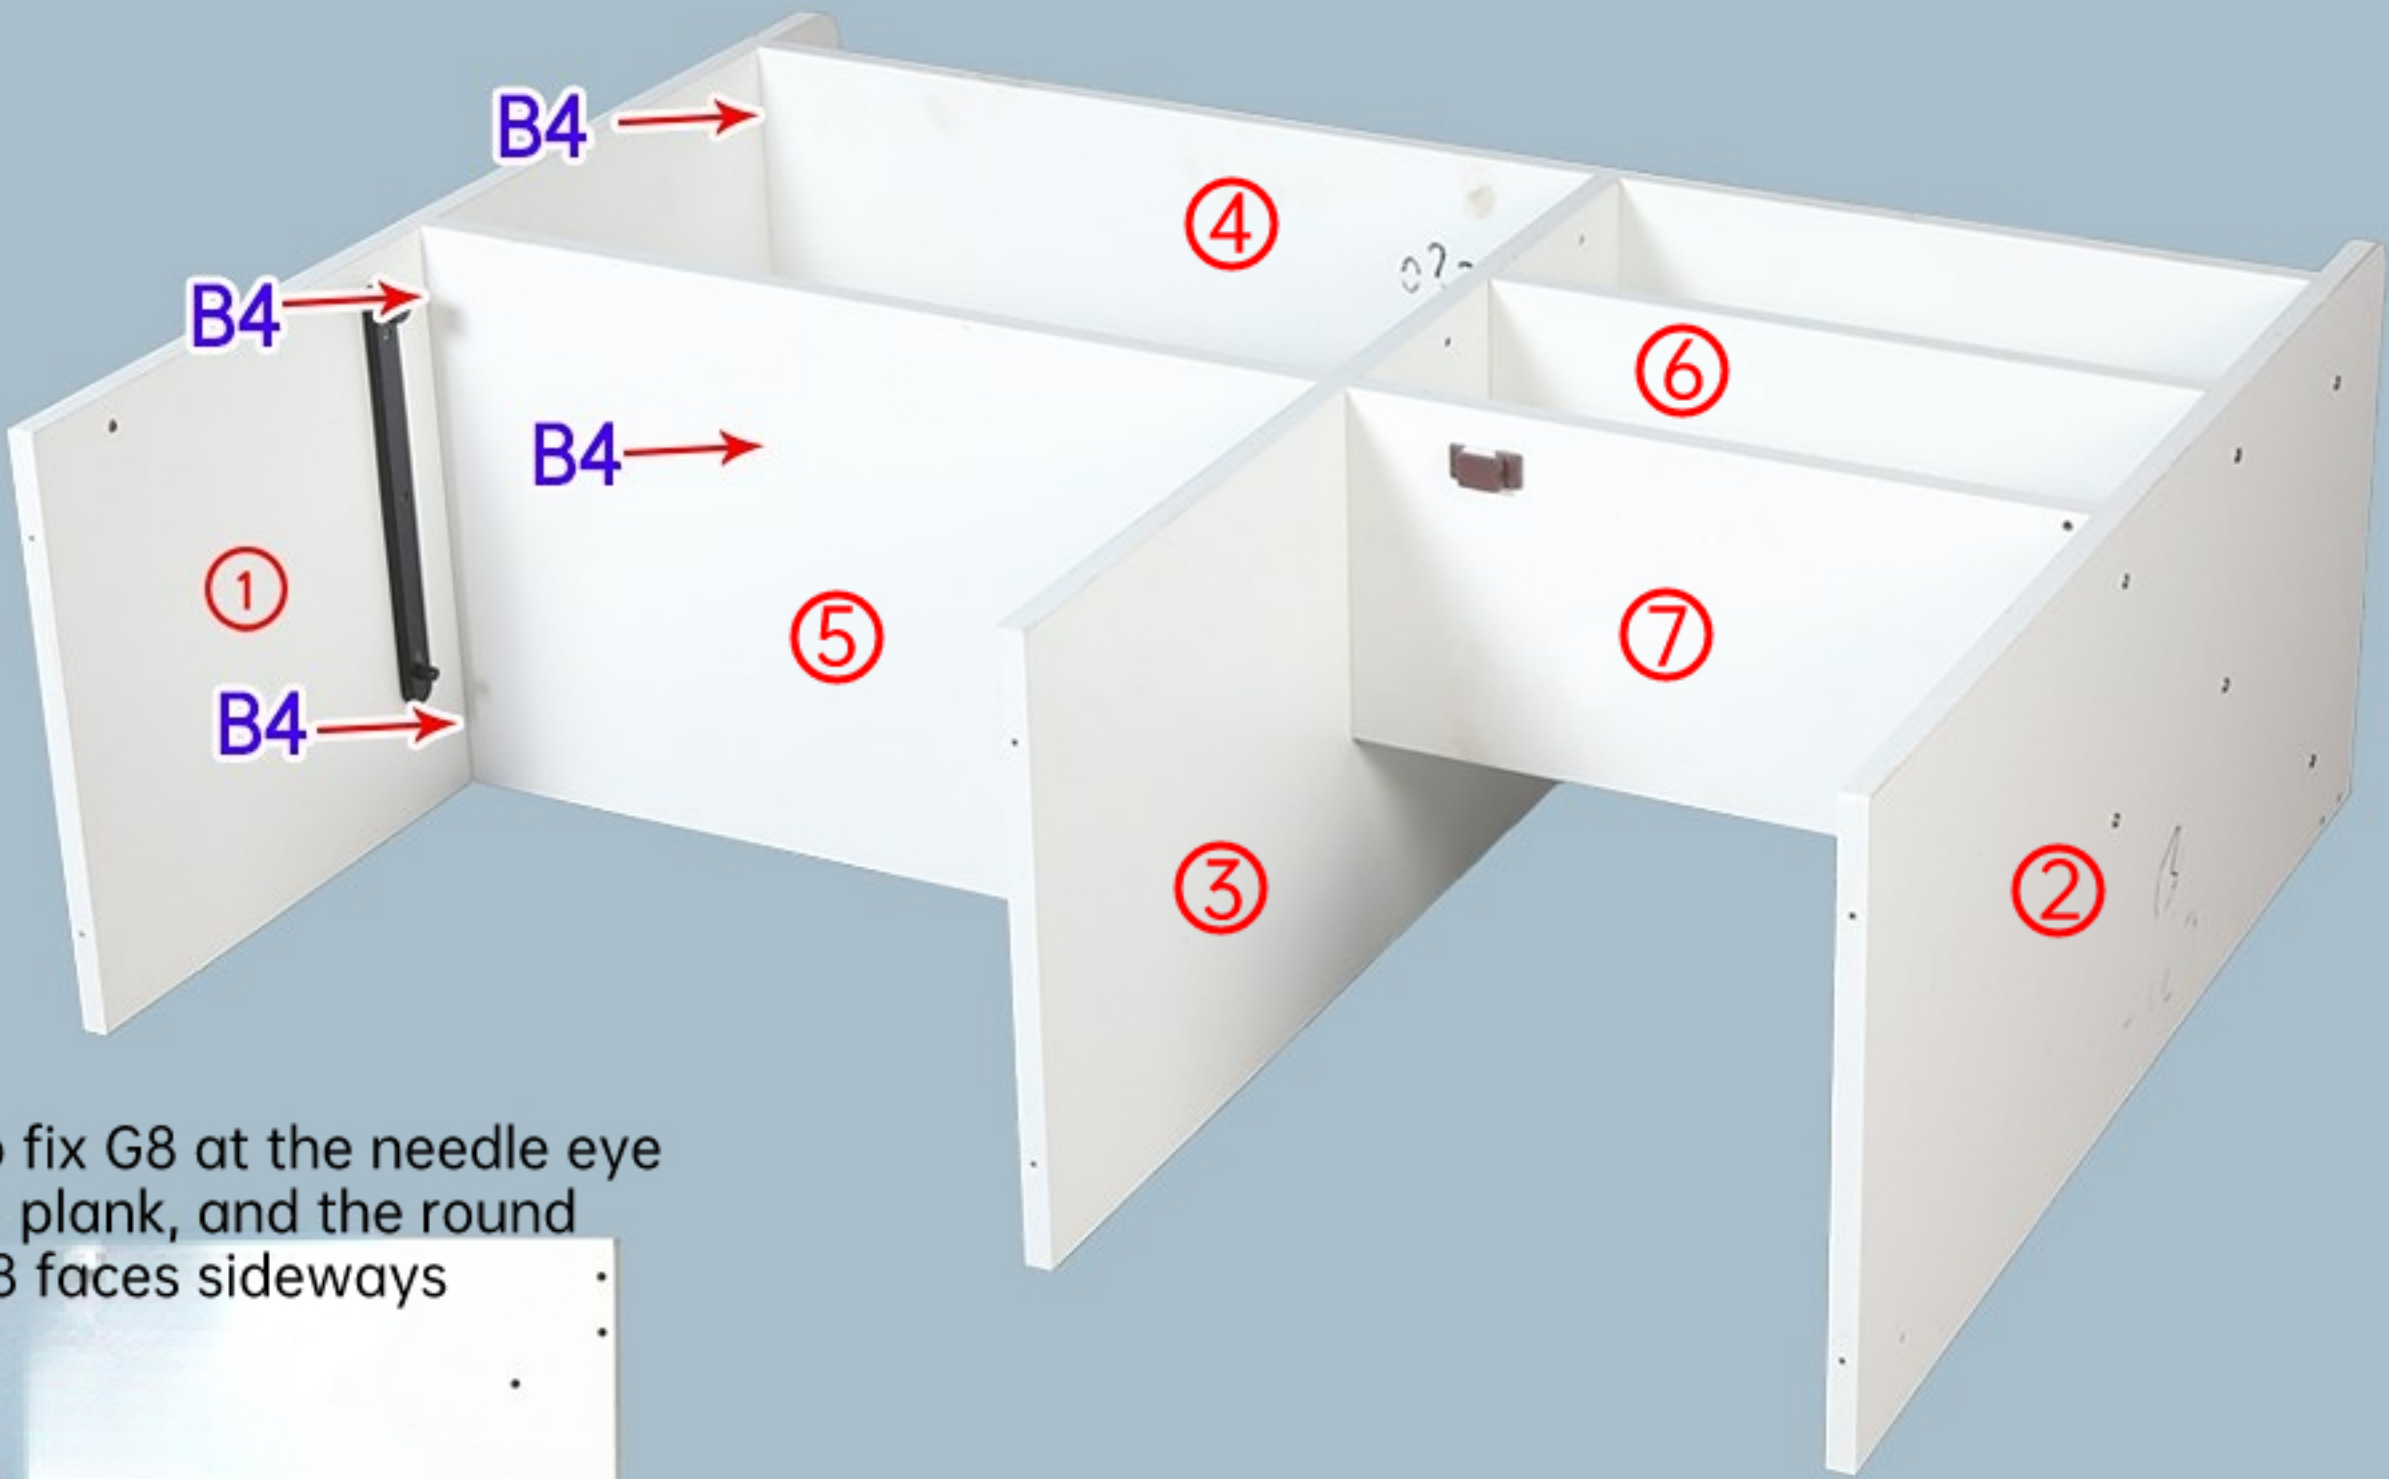

Use A17 to fix G8 at the needle eye mark of #1 plank, and the round head of G8 faces sideways




① Left Plank

3.5*18 Tapping Screw	Flip up Guide Rail	4*40 Tapping Screw
A17*3	G8*1	B4*4




<7>

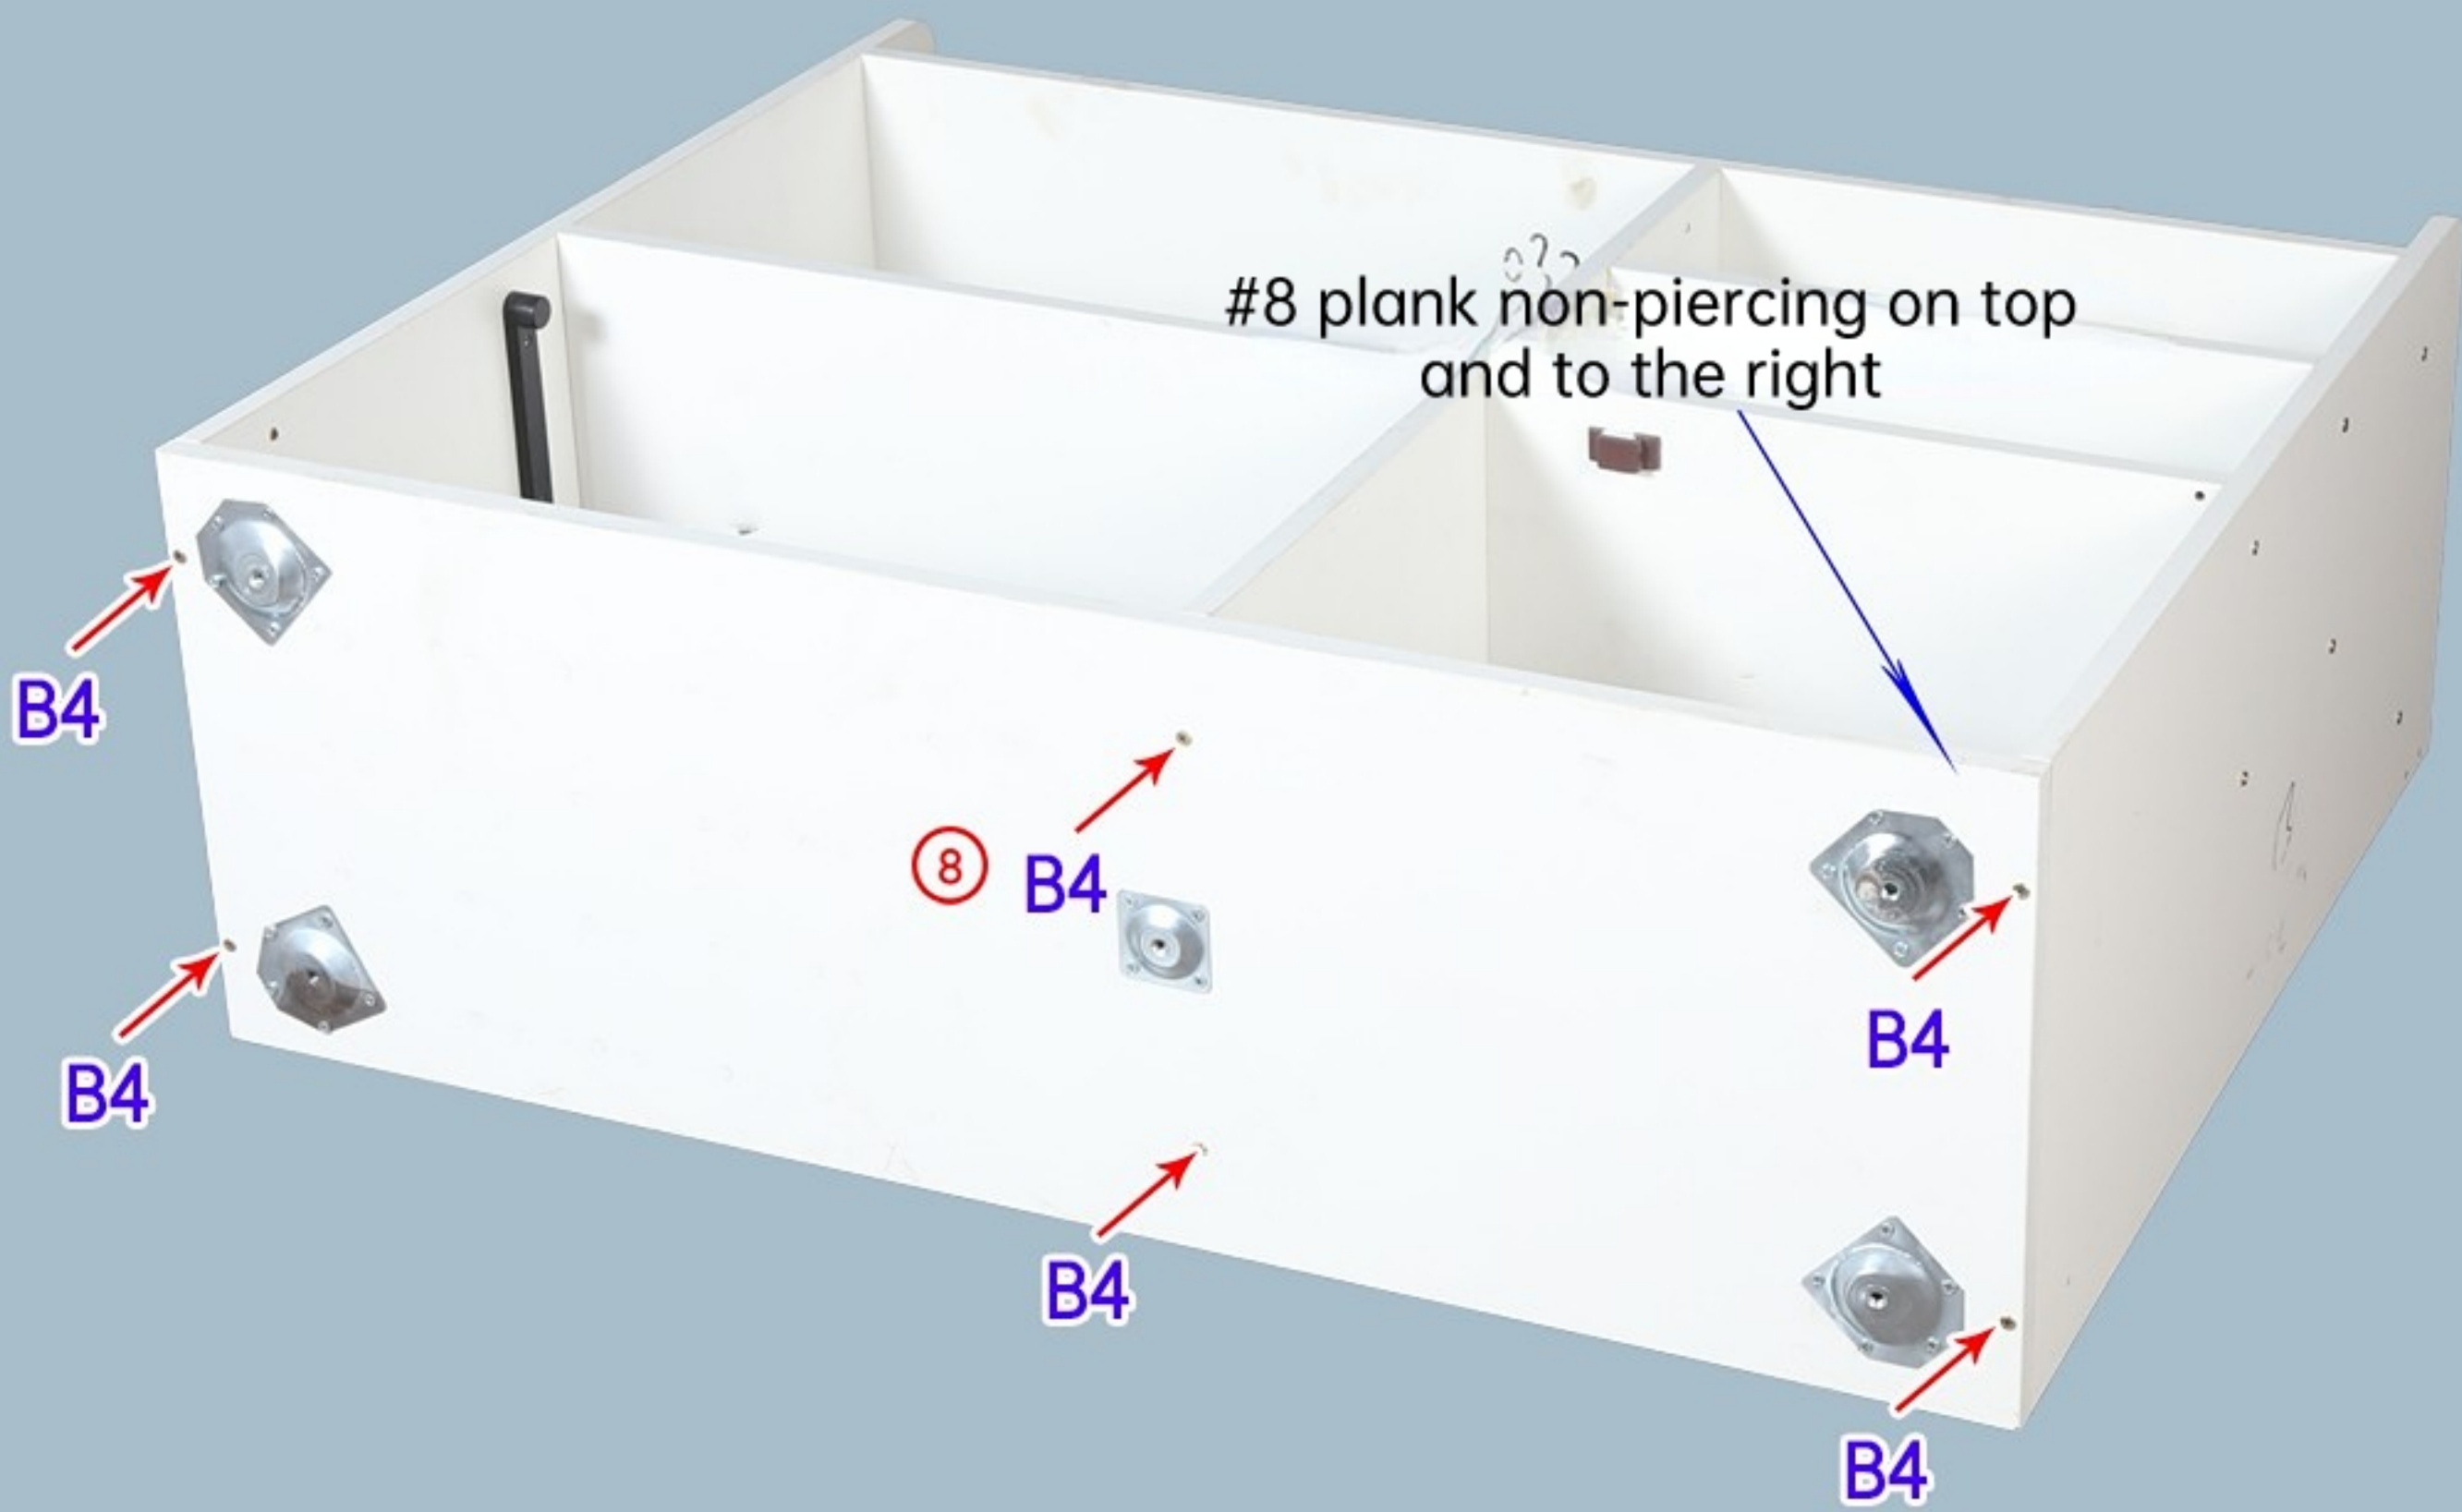

⑧ base plank


4*40 Tapping Screw
B4*6

<8>

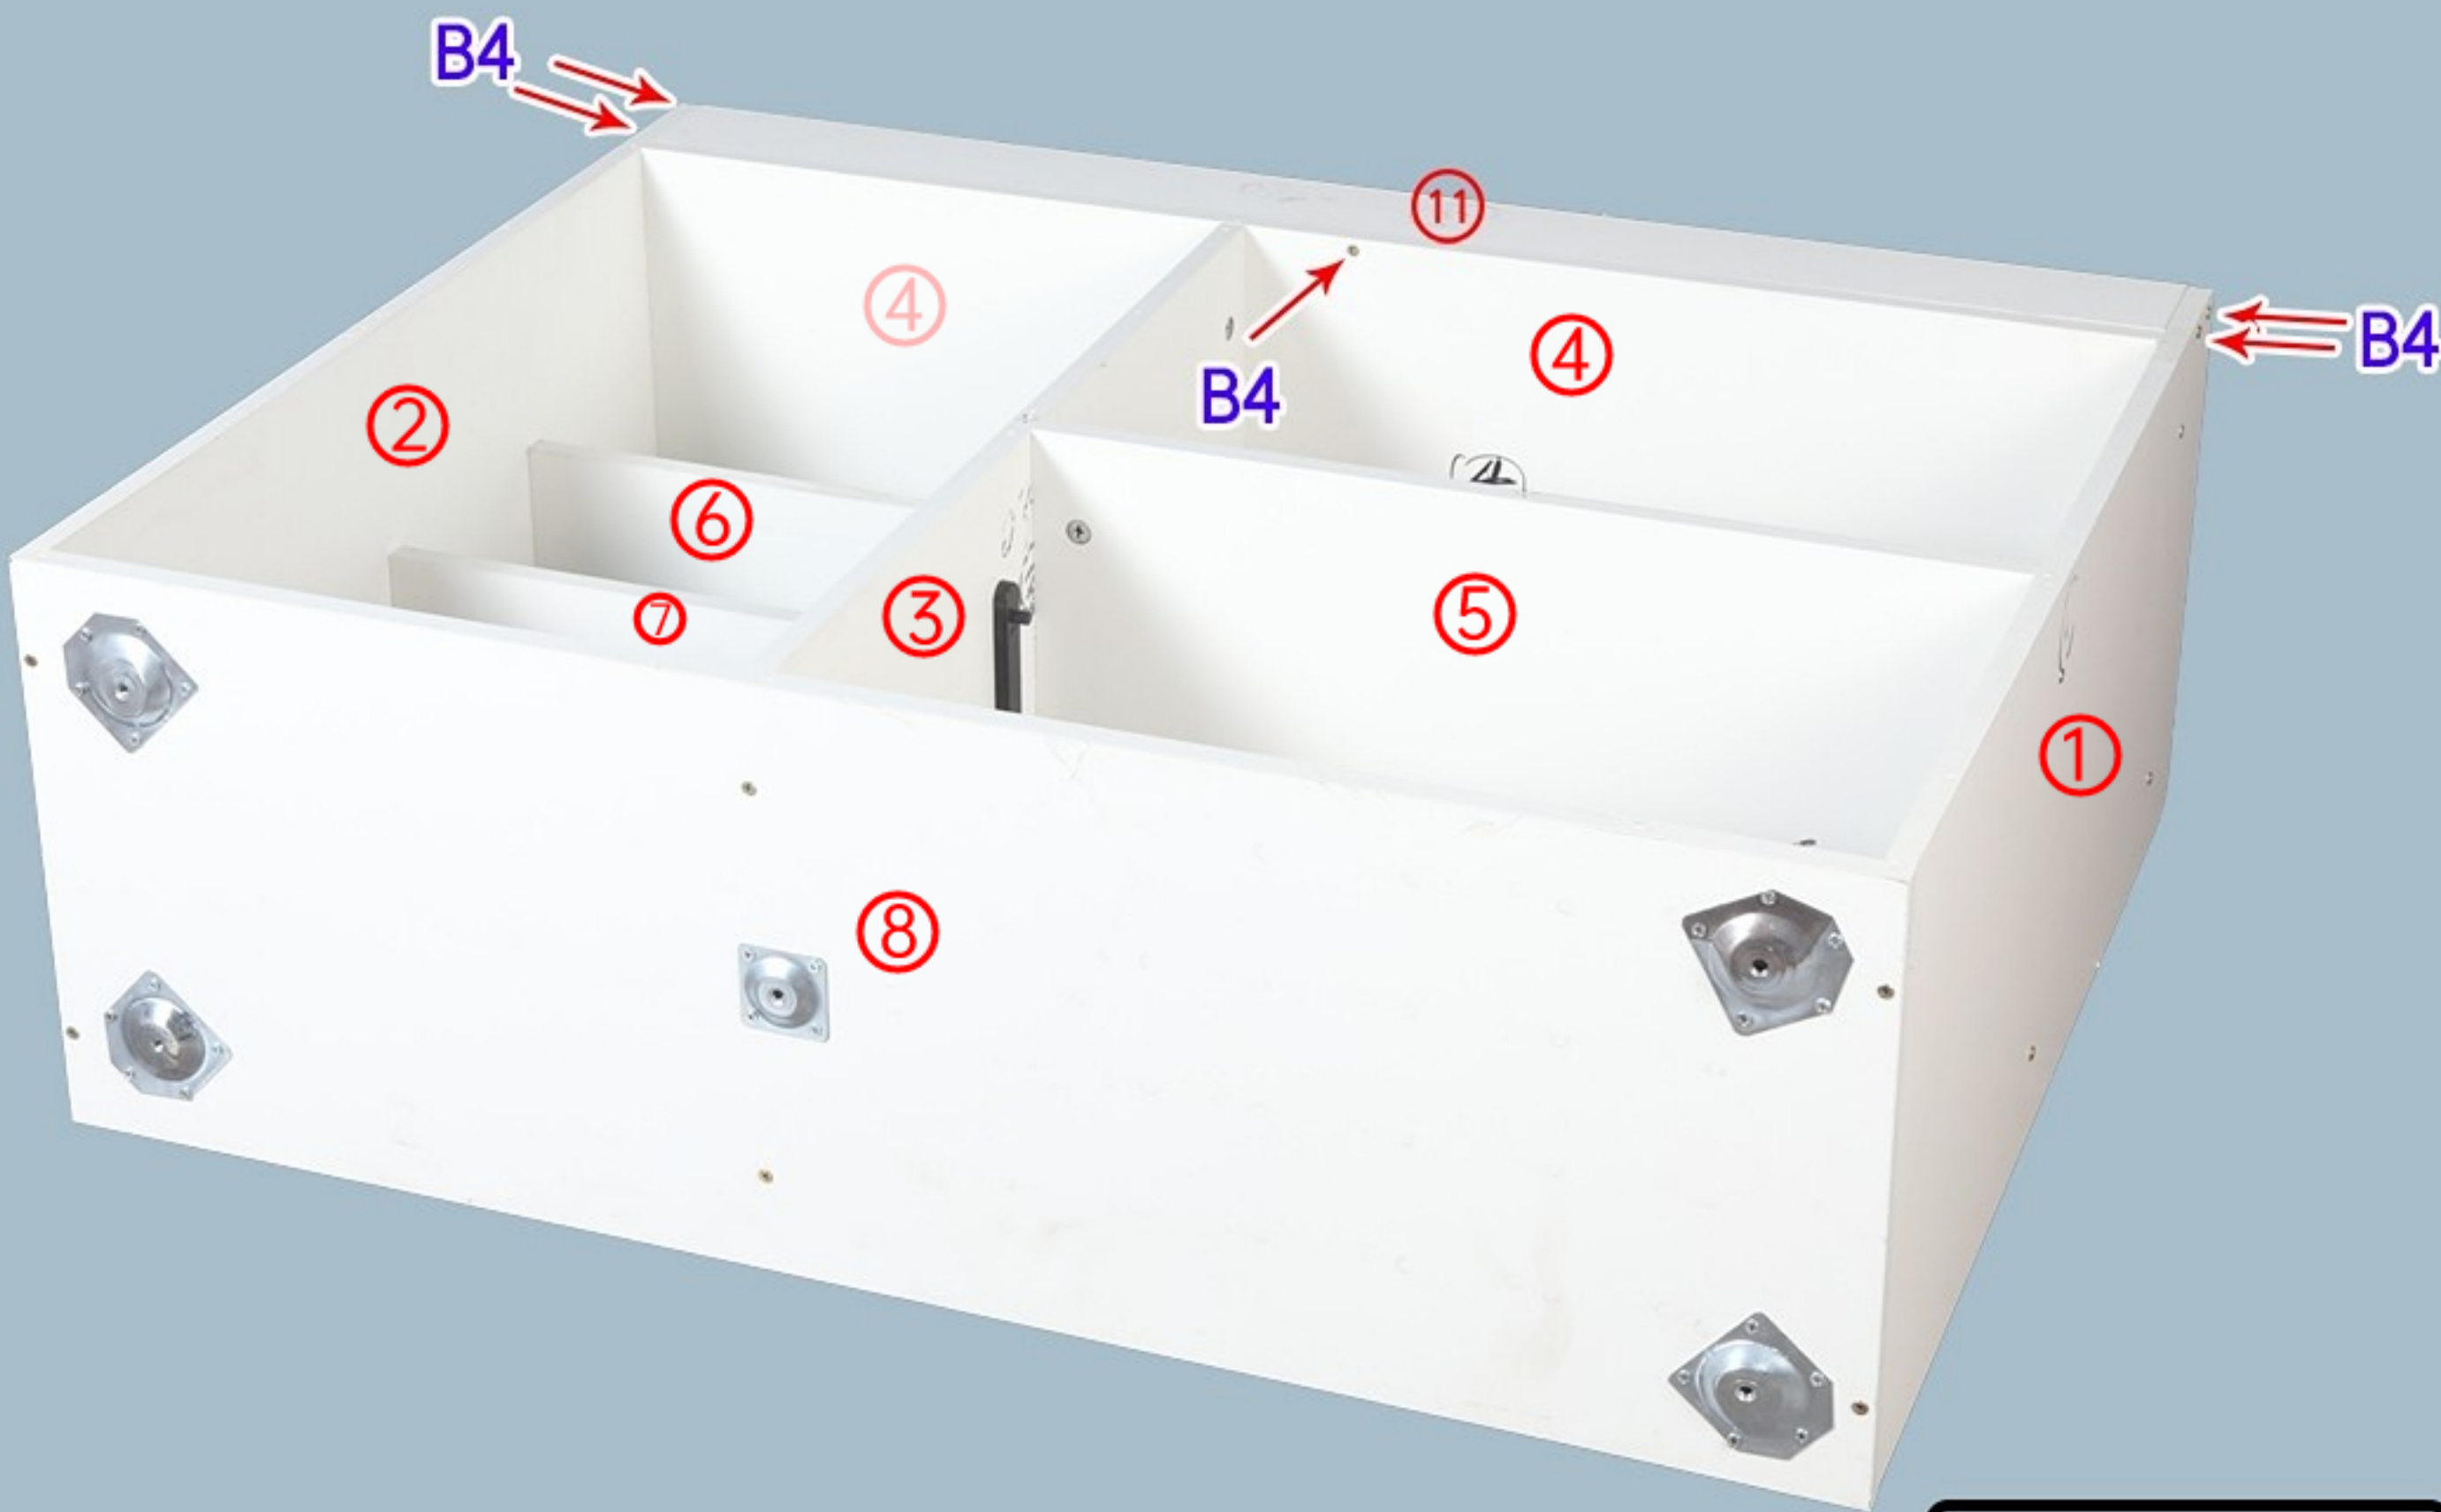


⑪ Top tension plate / baffle


4*40 Tapping Screw
B4*5



<9>

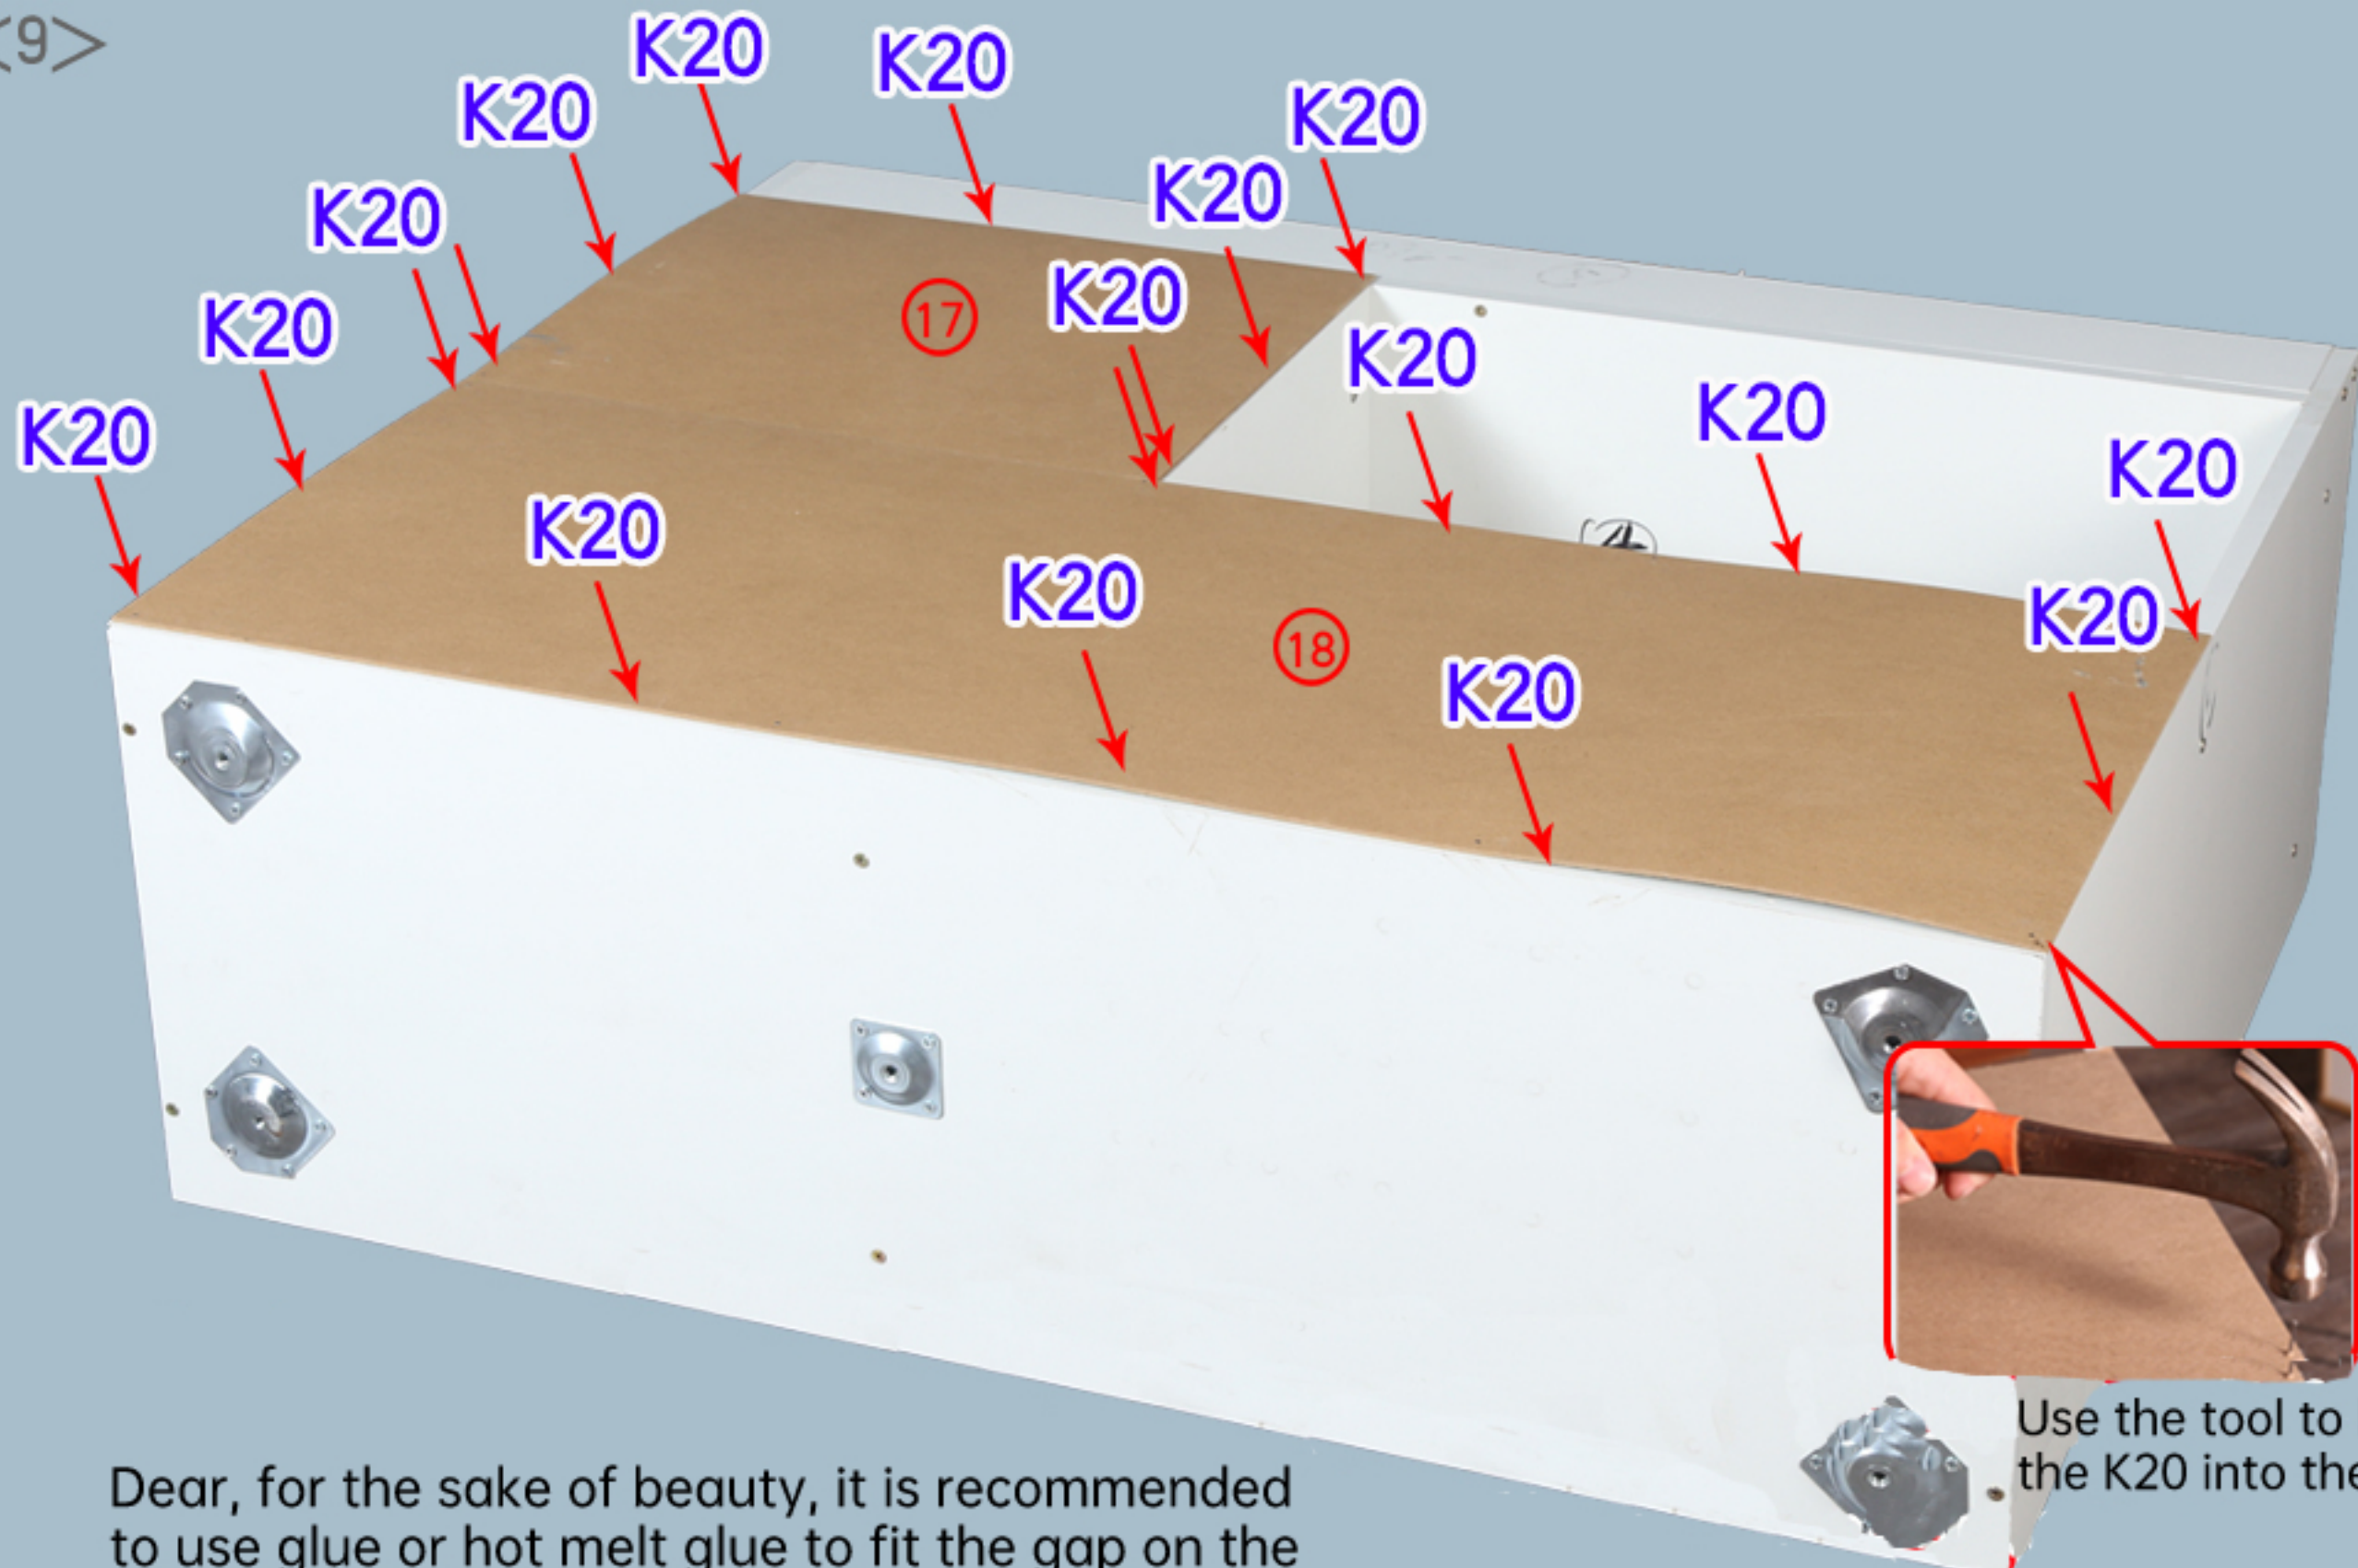

Dear, for the sake of beauty, it is recommended to use glue or hot melt glue to fit the gap on the back panel until it is flat.



(17) Small Cabinet Back Plank (18) Large Cabinet Back Plank



Small Iron Nails

K20\*19

<10>



Screw the #19 cabinet feet clockwise into the No. 8 bottom plate patch




(19) Cabinet Feet



Note: The acrylic film on the No. 9 cabinet door is cut around with a knife, and the film is easier to tear off

A1+G8

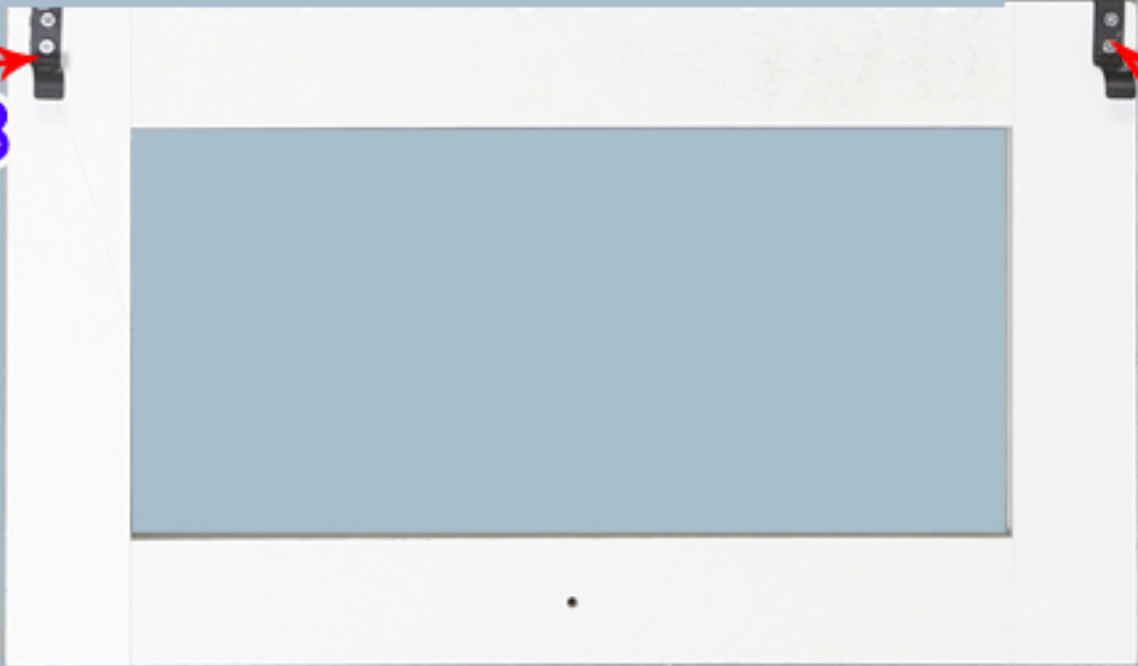



A1

A1




Note that the arc faces inward when installing the G8 hook



⑨ flip-up cabinet door

	
Tapping Screw 3.5*12	Flip up Guide Rail
A1*4	G8*2

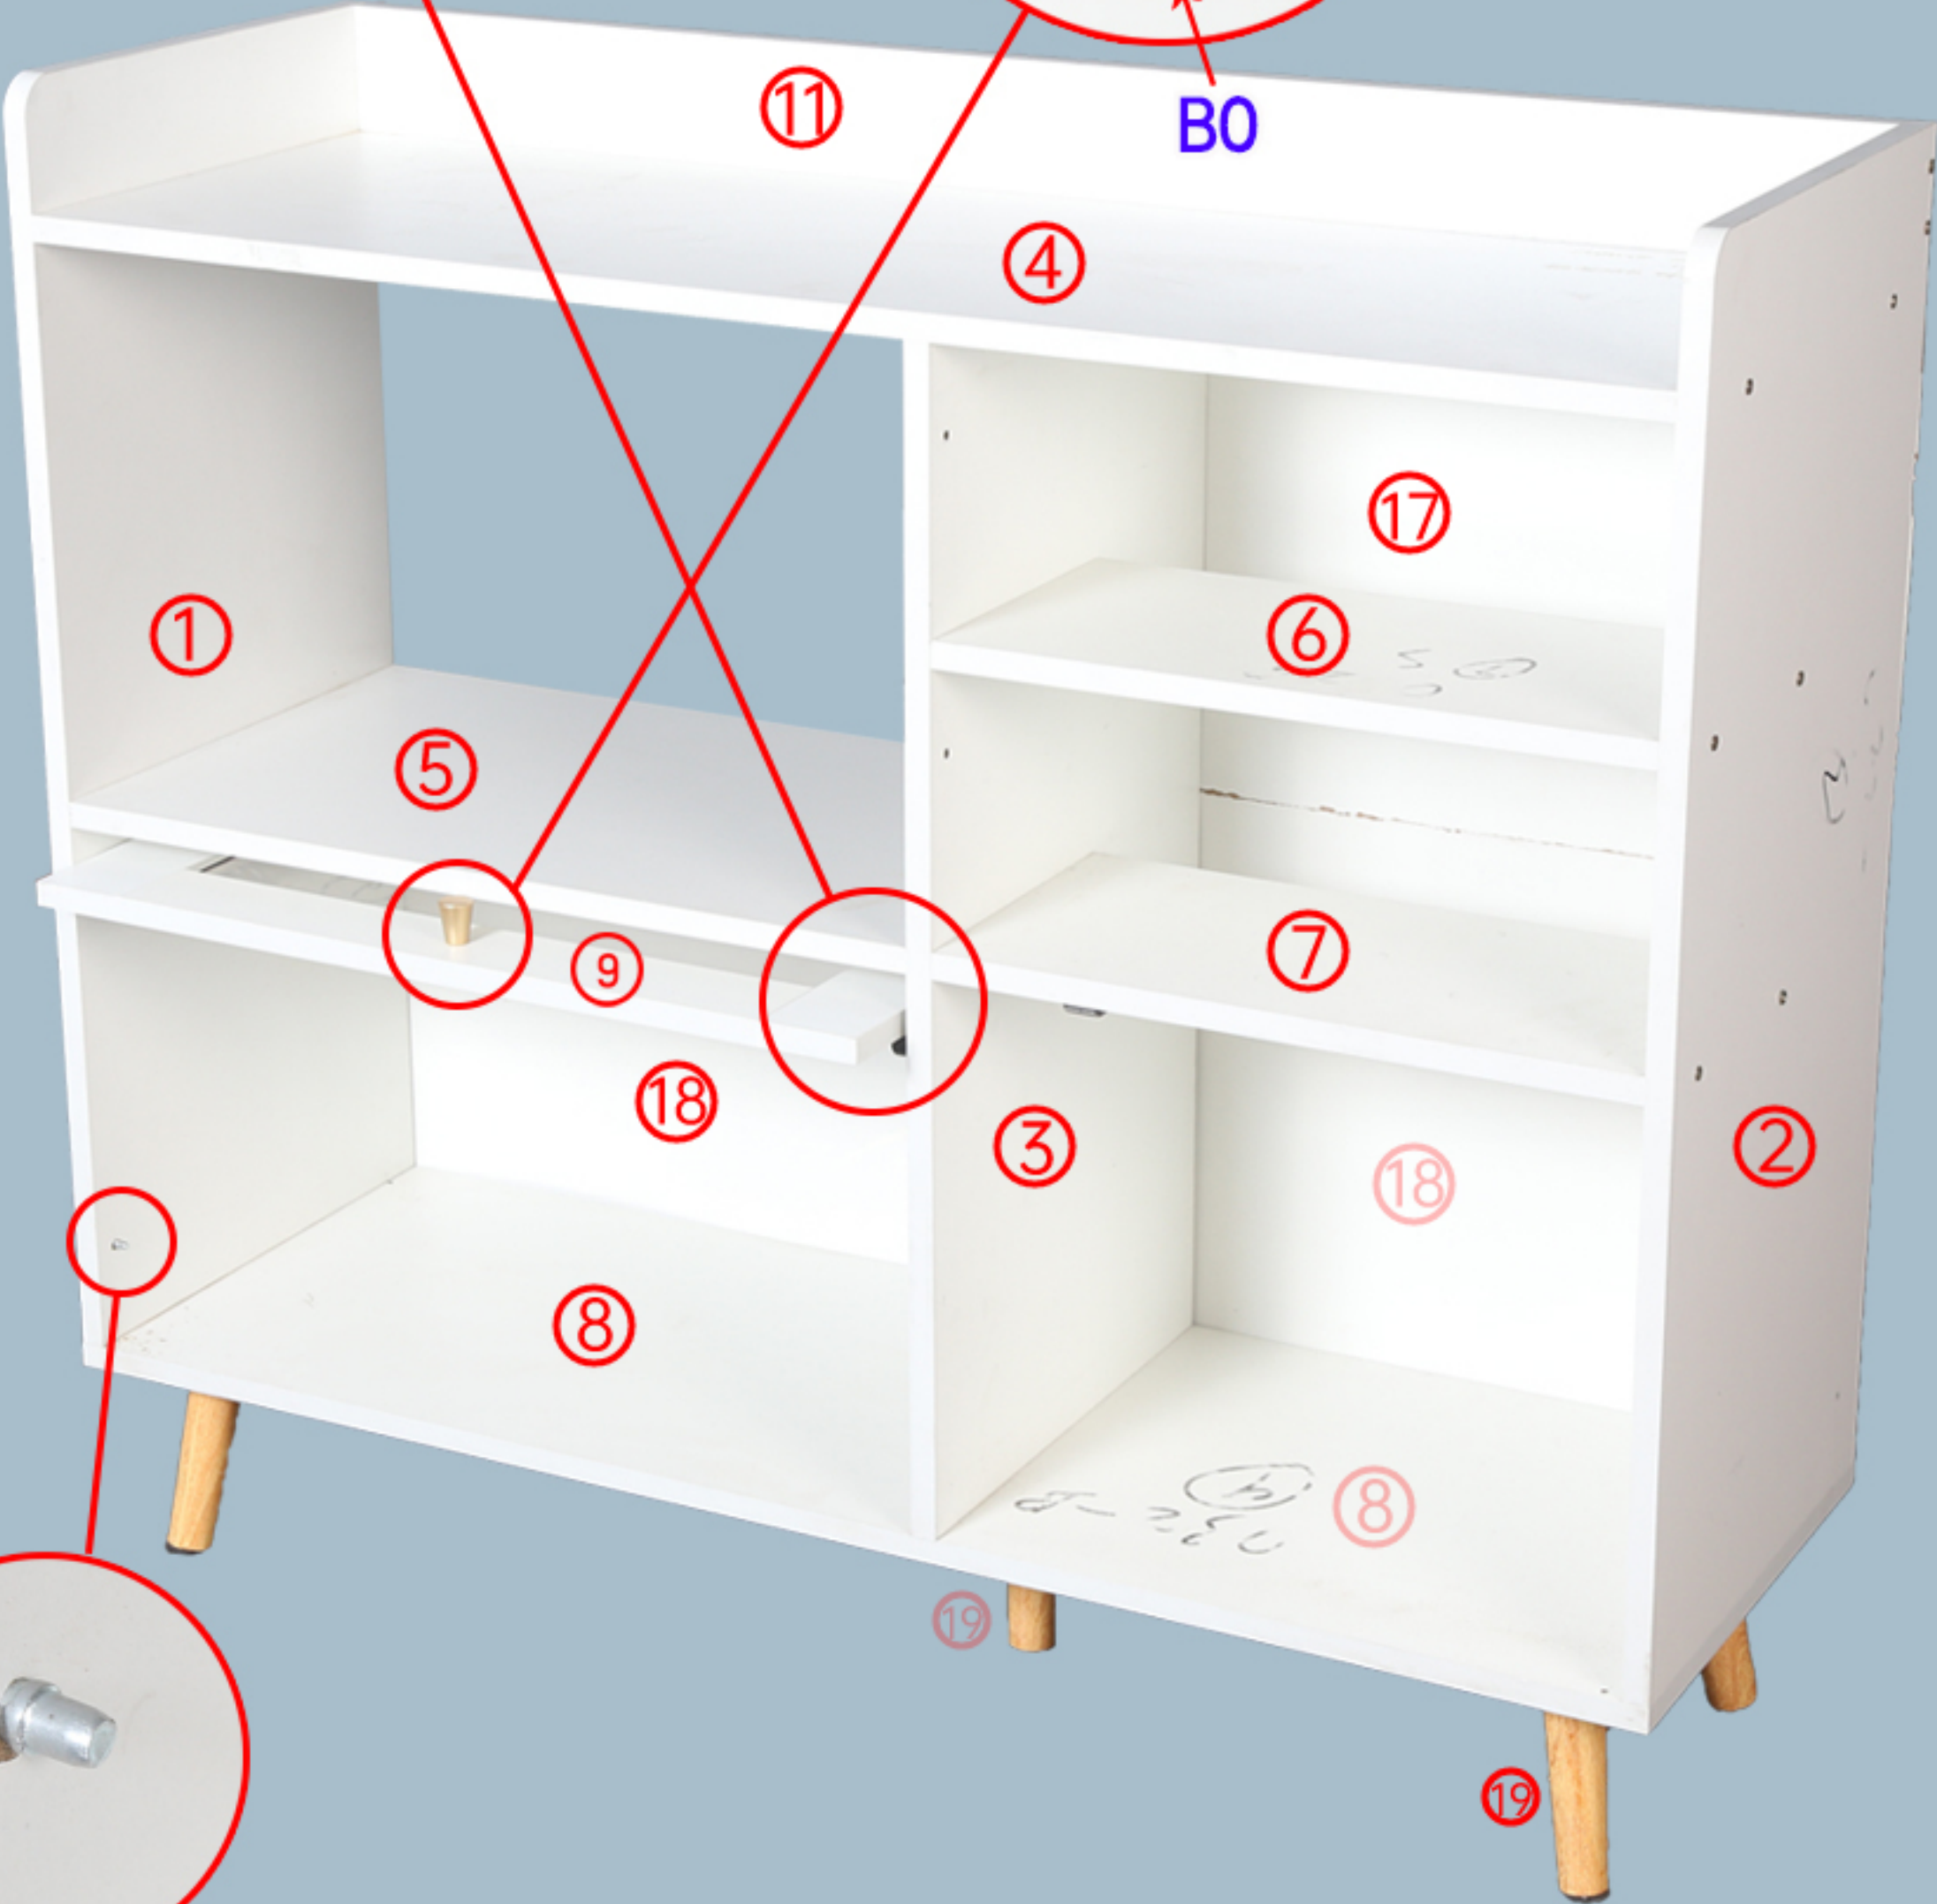Turn the #9 door panel up and push it in




After the No. 9 door panel is pushed in, K0 is stuffed into the non-perforated part on both sides. The function of K0 is to block the door


		
Shelf Pins	Handle	4*18 handle screw
K0*1	J15*1	B0*1



The small hole on the door panel is inserted into K0

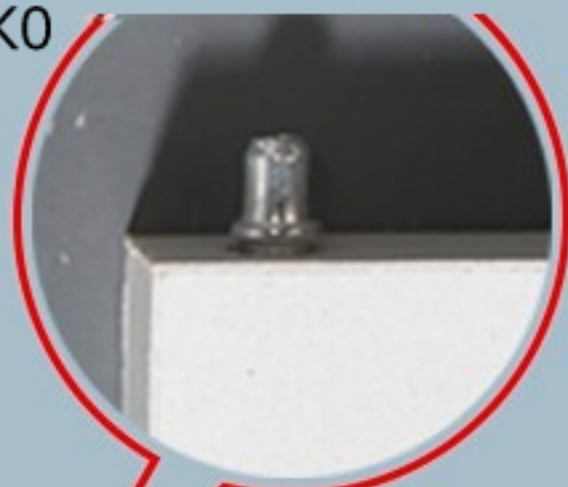

Fix L19 with A17 at the pinhole mark

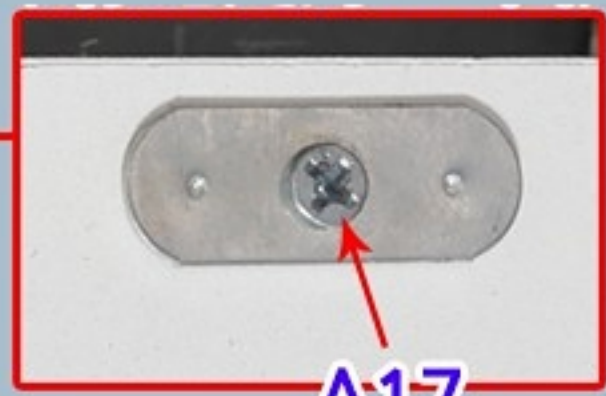


The large hole on the door panel is inserted into the L8



⑩ Right Door Plank

			
Single Hole Door Magnet	Tapping Screw 3.5*12	Shelf Pins	Bulkhead Spring Pin
L19*1	A1*1	K0*1	L8*1

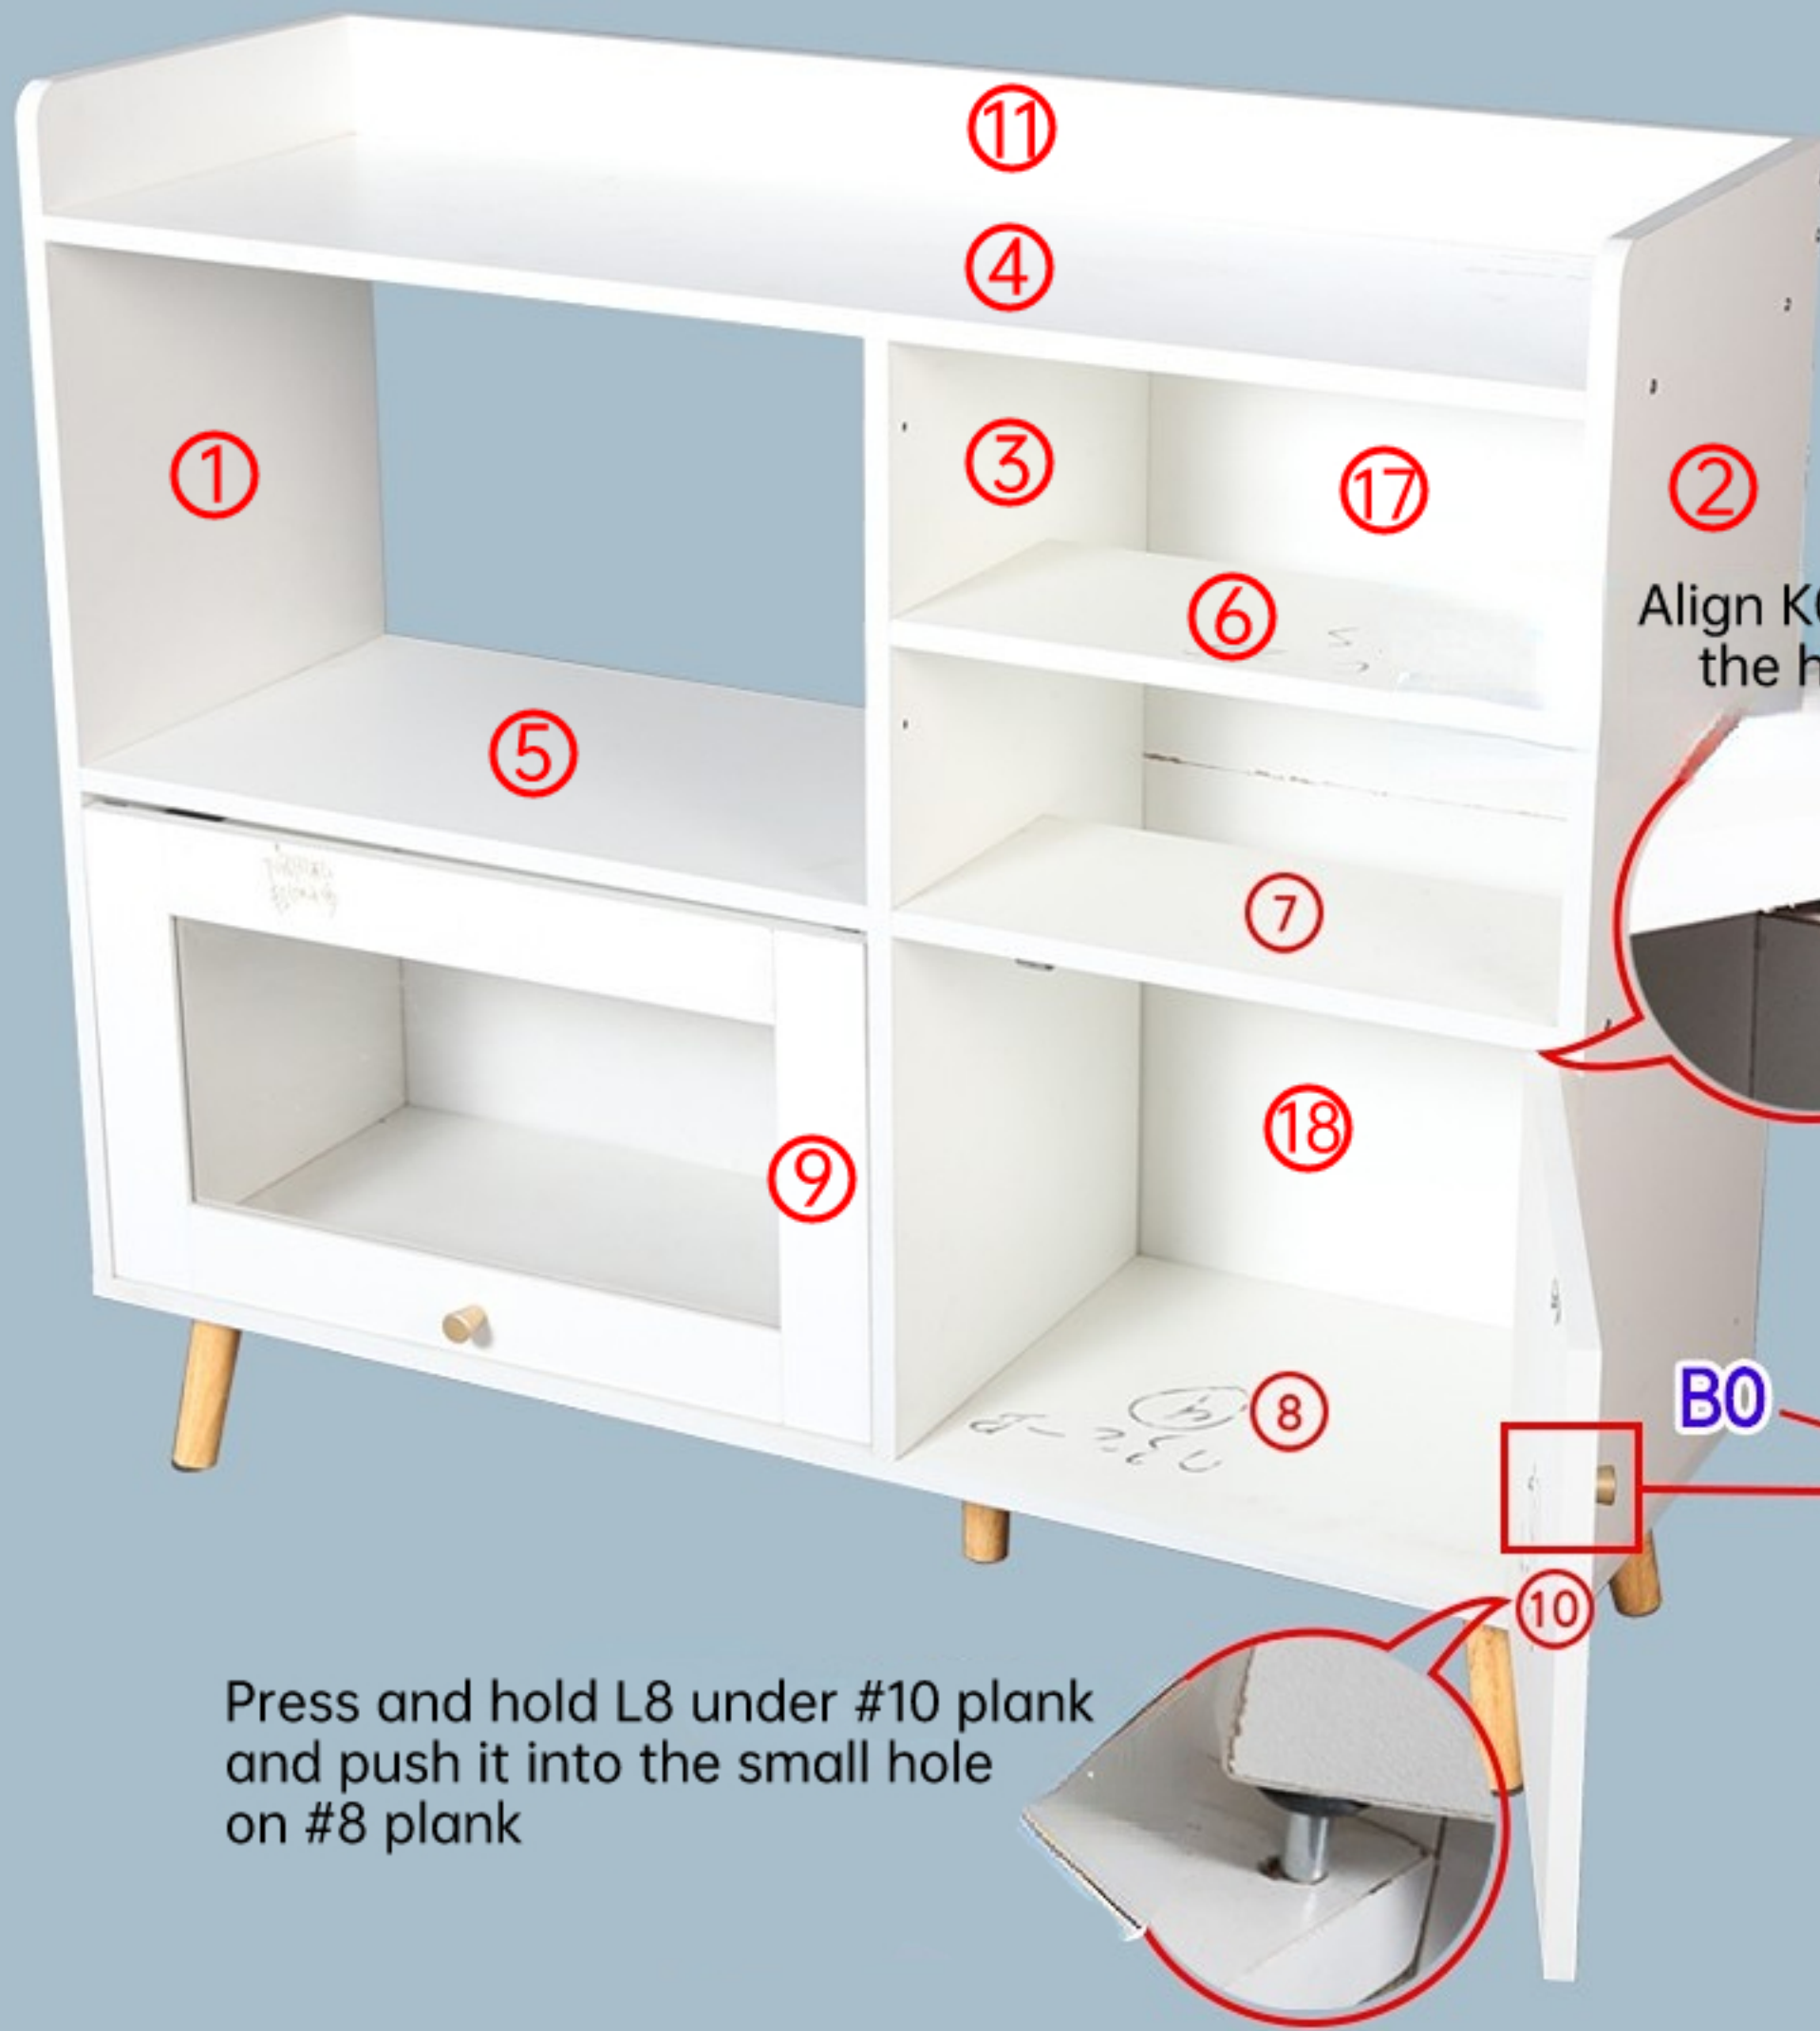

Align K0 on #10 plank with the hole below #7 plank and insert





Press and hold L8 under #10 plank and push it into the small hole on #8 plank



B0




J15

	
Handle	handle screw 4*18
J15*2	B0*1



<13>

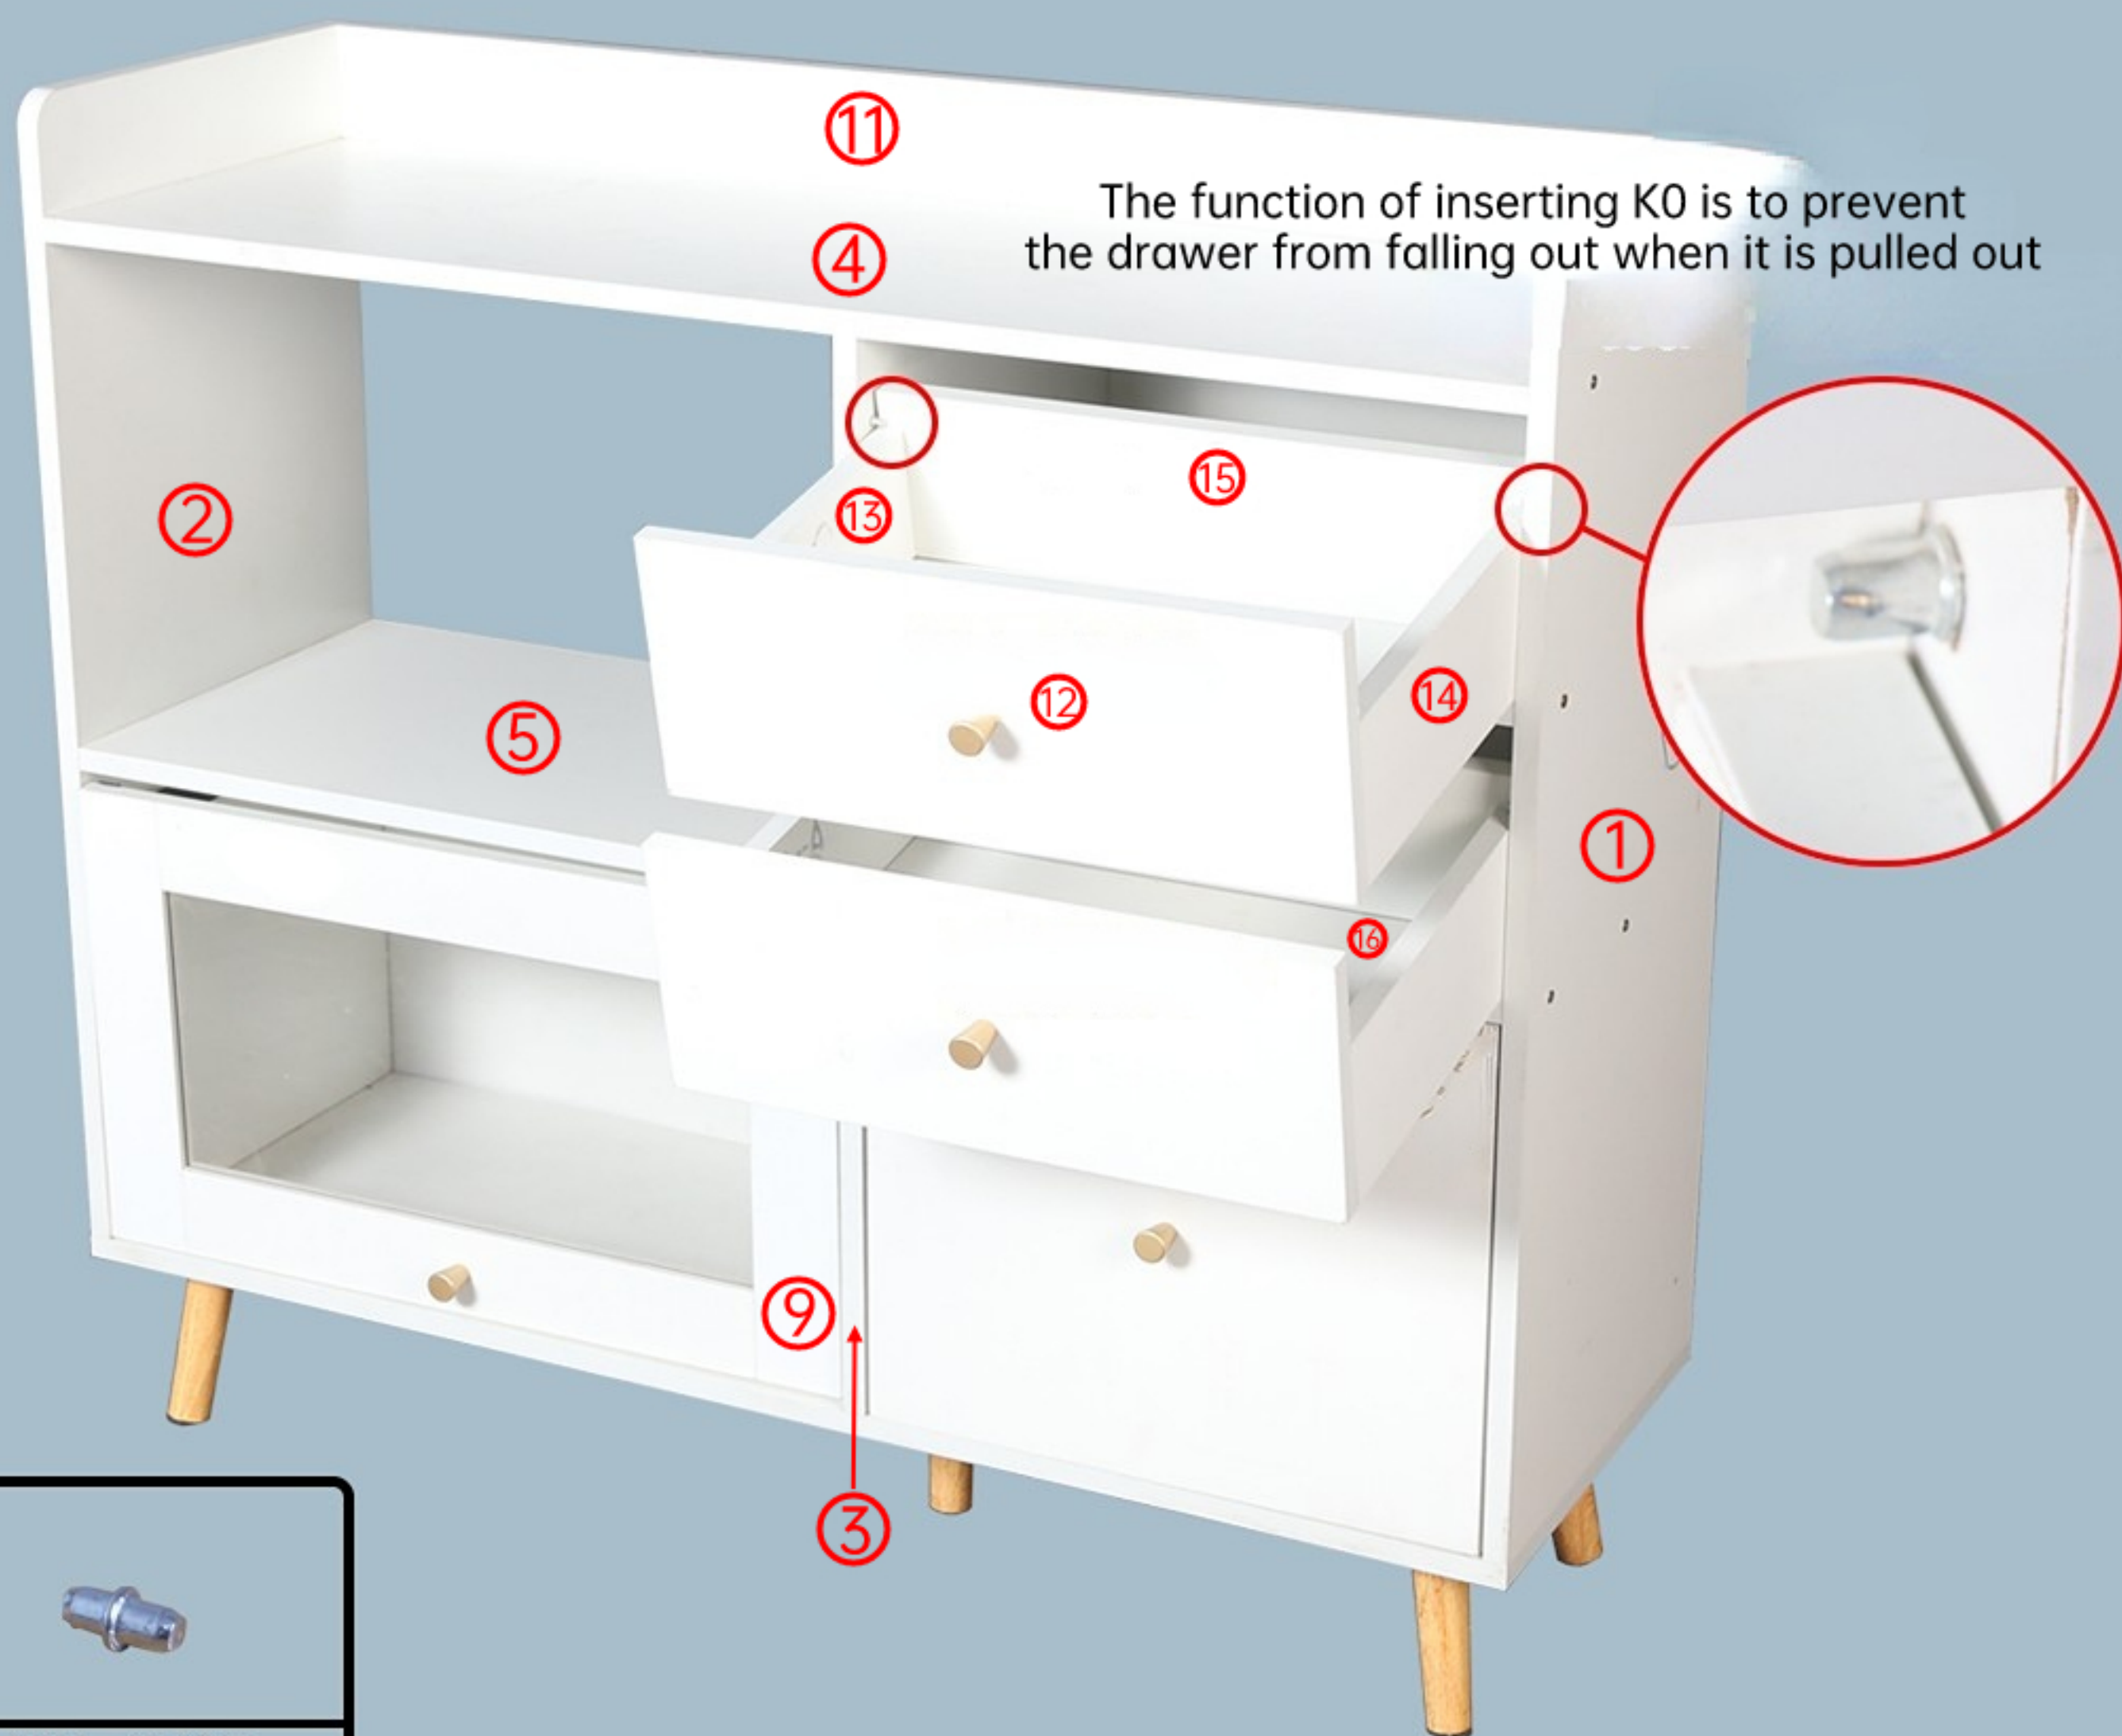

<15> Cabinet Assembled

