


HMD FURNITURE

3 DRAWER BEDSIDE CABINET Assembly Instructions

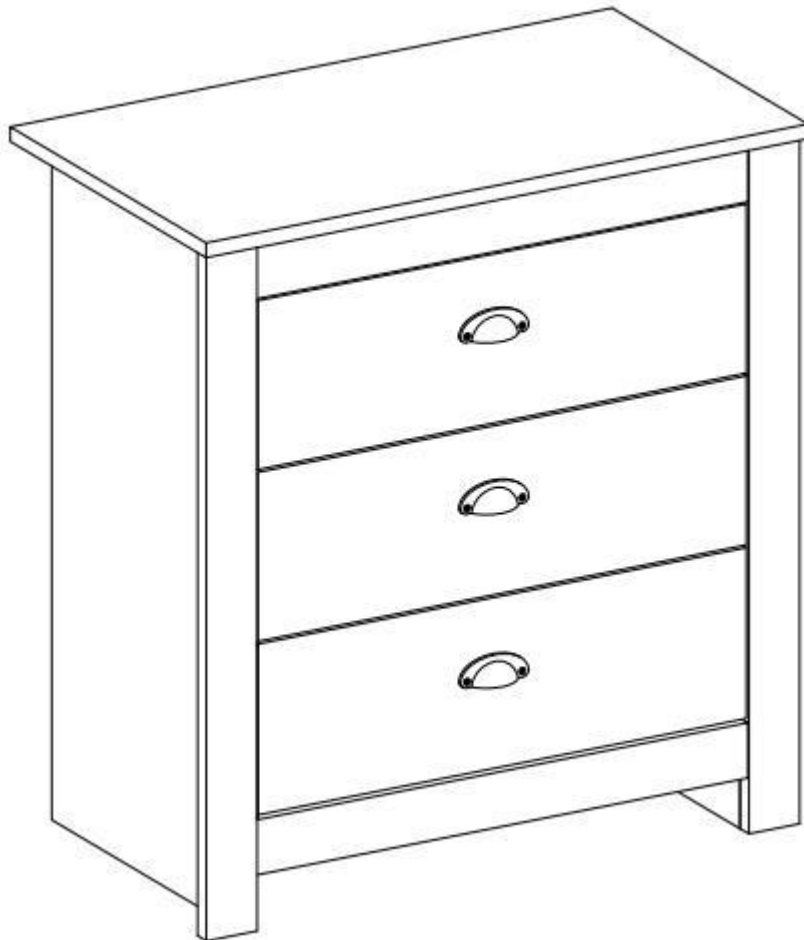










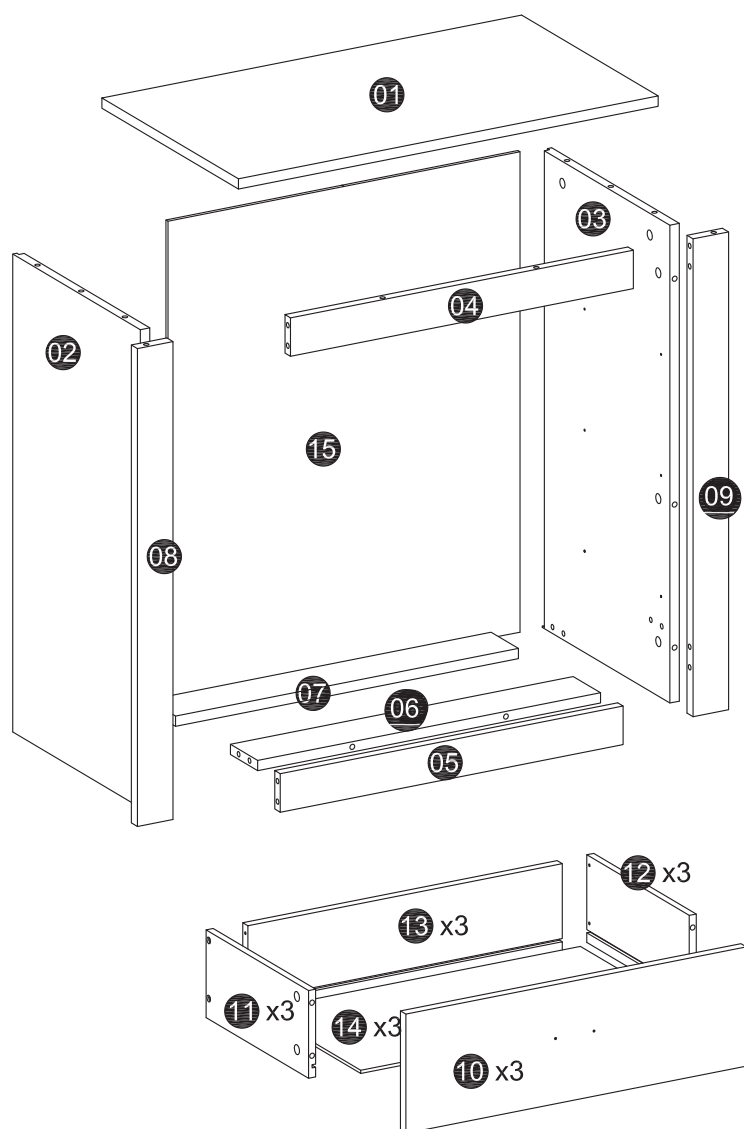



PLEASE READ this instructions carefully before assembly the product.

Please open the outer carton carefully and confirm all parts and fixings condition according to the instruction before assembly.


If there is a shortage of parts or hardware or any questions, do not directly return or give a negative feedback, please contact us by this e-mail: help@furniturehmd.co.uk

Our professional after-sales service staff will give you a satisfactory answer within 24 hours.

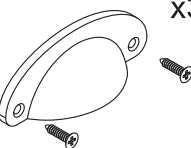


A CAM lock dowel x40 	B CAM lock x40 	C Wood dowel x6 	D Drawer rail x3 CR  CL  DR  DL 	E Screw Ø3.5x35 x12 
F Screw Ø3.5x14 x24 	G Nail 	H Handle&Screw x3 	I Nail Leg x4 	


01

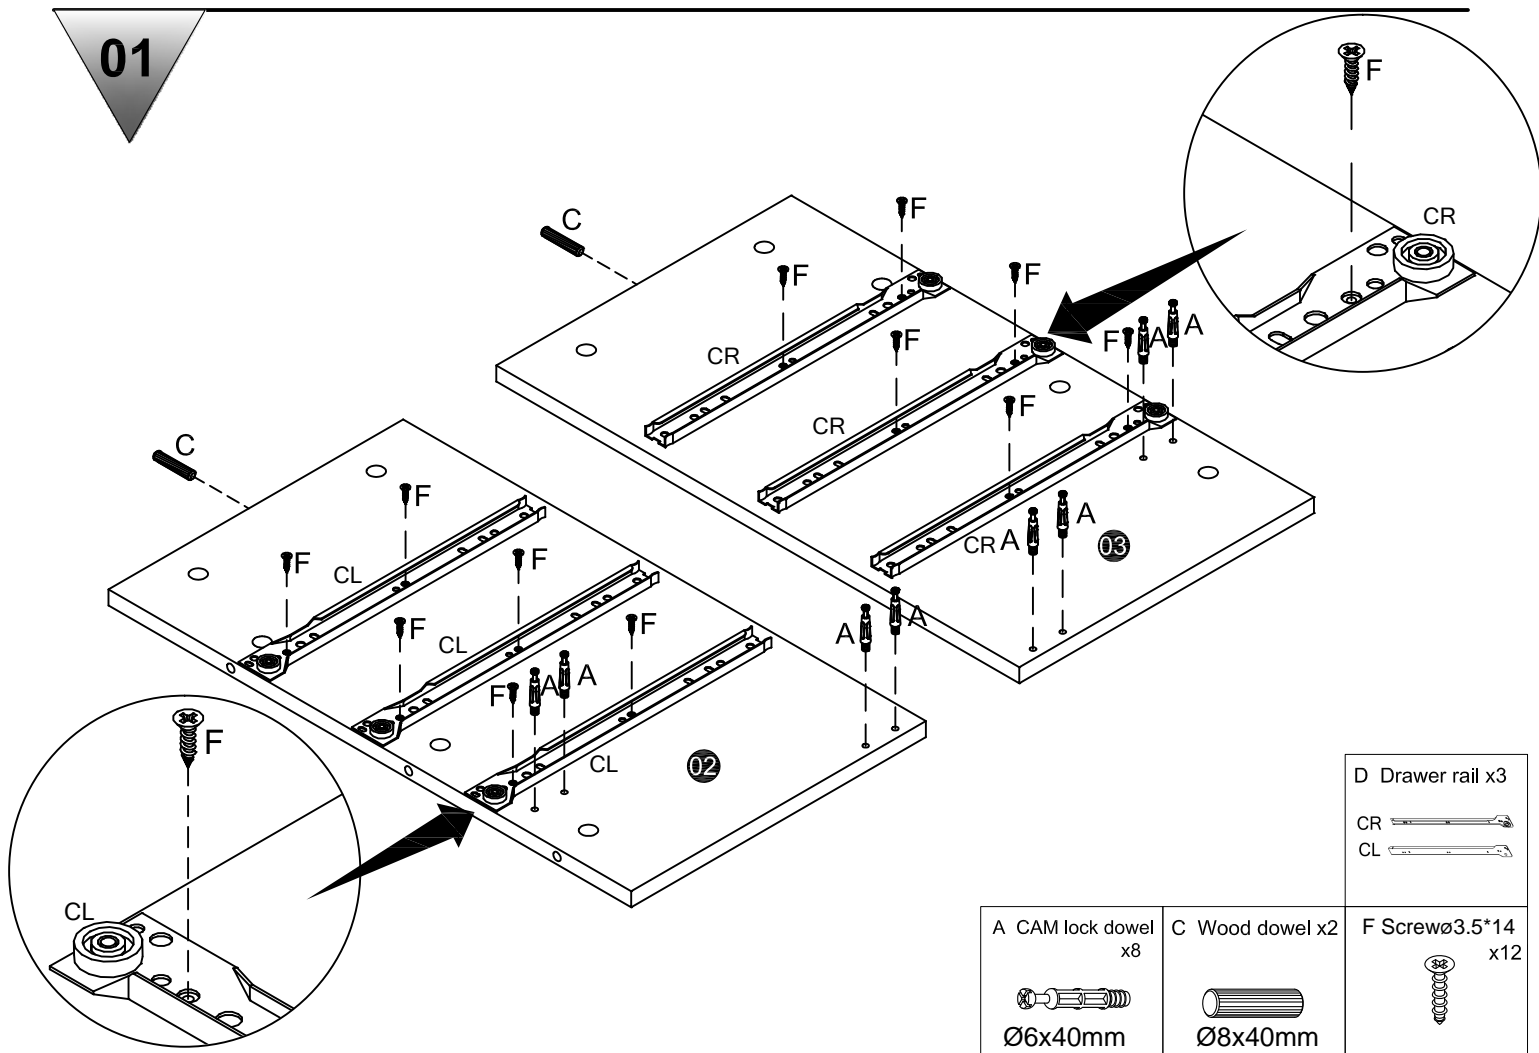

02

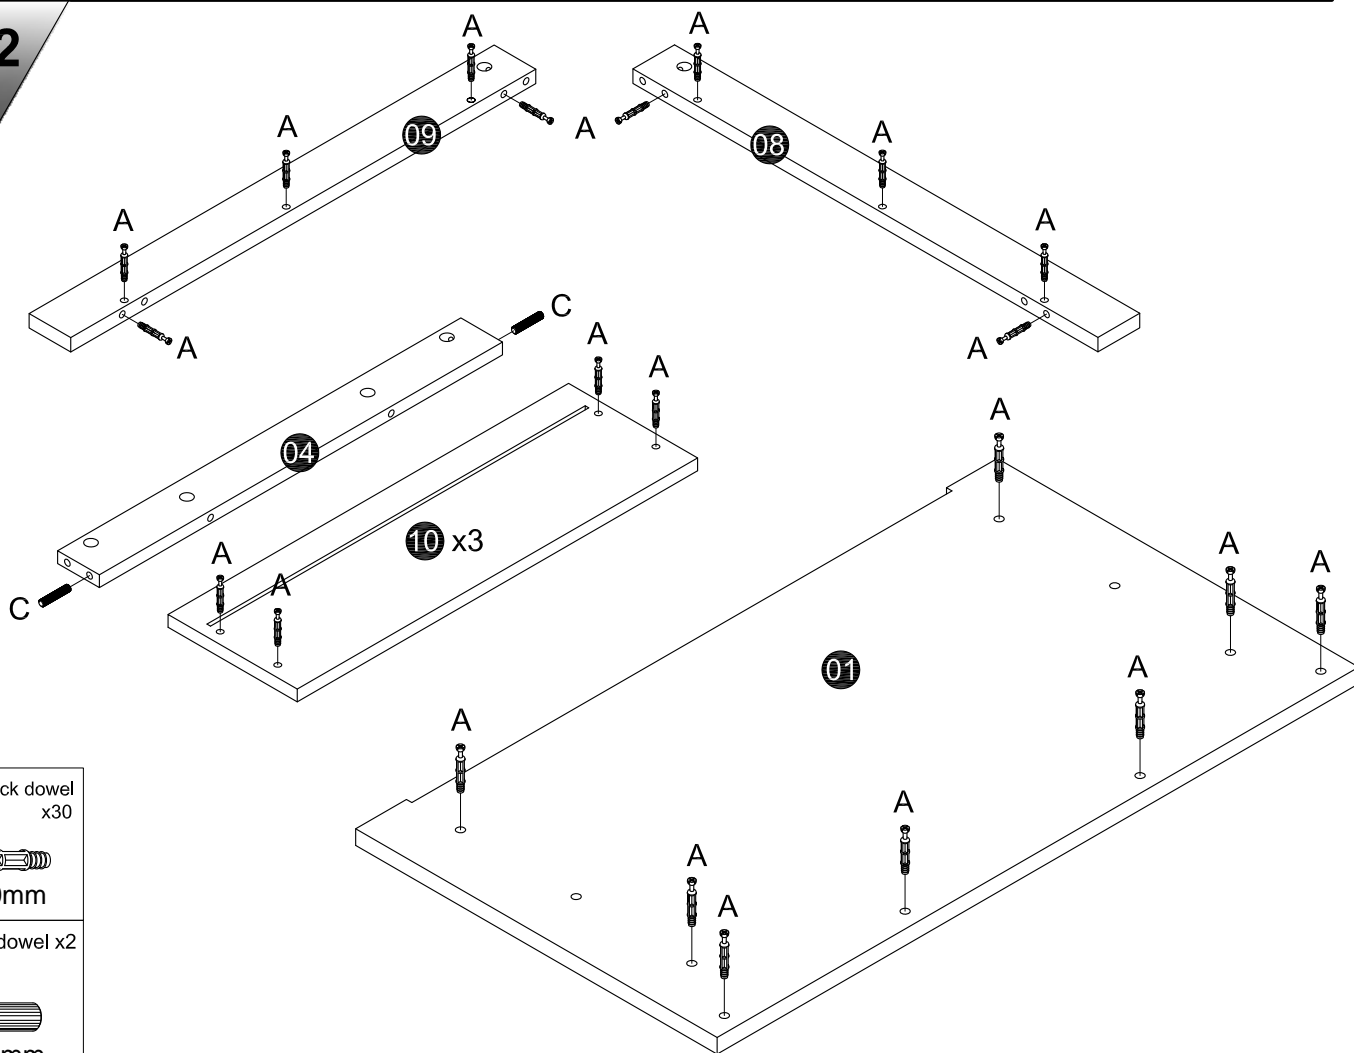

03

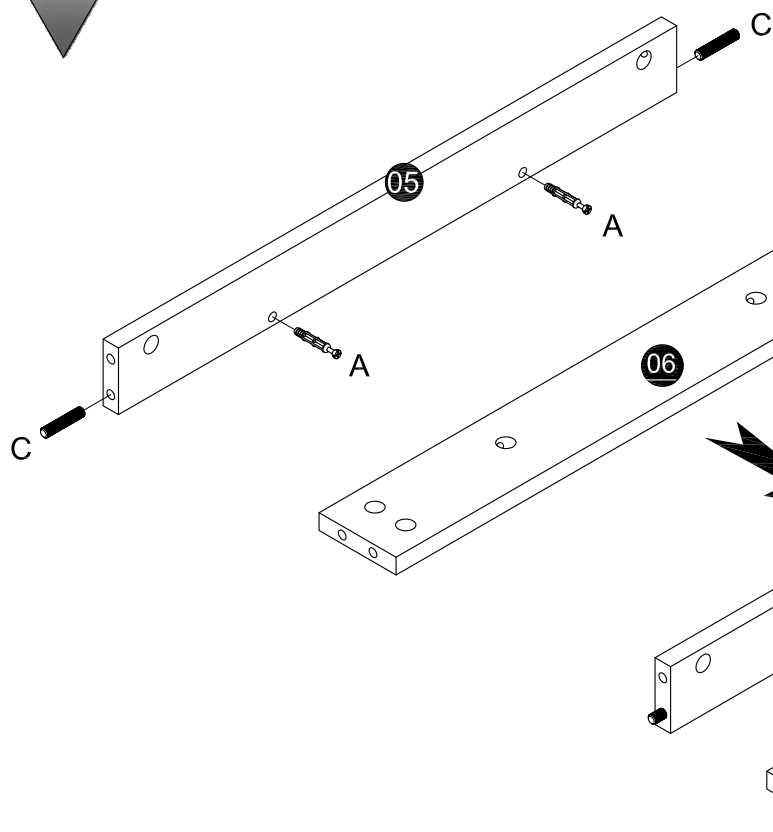

C Wood dowel x2



Ø8x40mm

A CAM lock dowel x2




Ø6x40mm

B CAM lock x2



Ø15x11mm

04

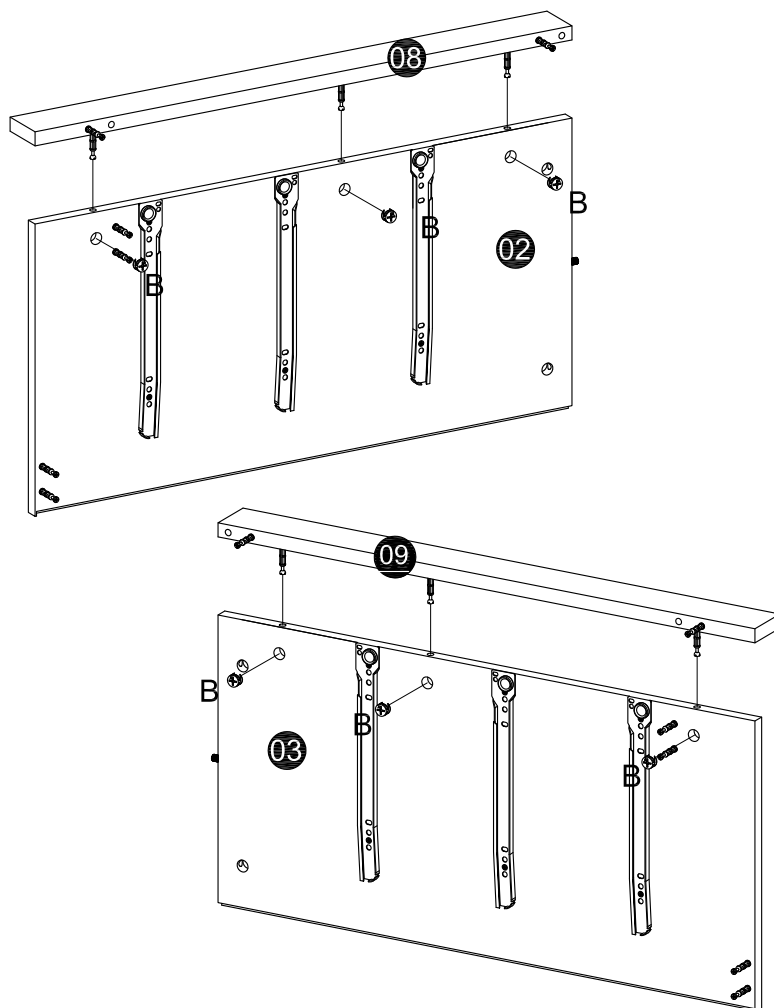

B CAM lock x6




Ø15x11mm

05

B CAM lock x6



Ø15x11mm

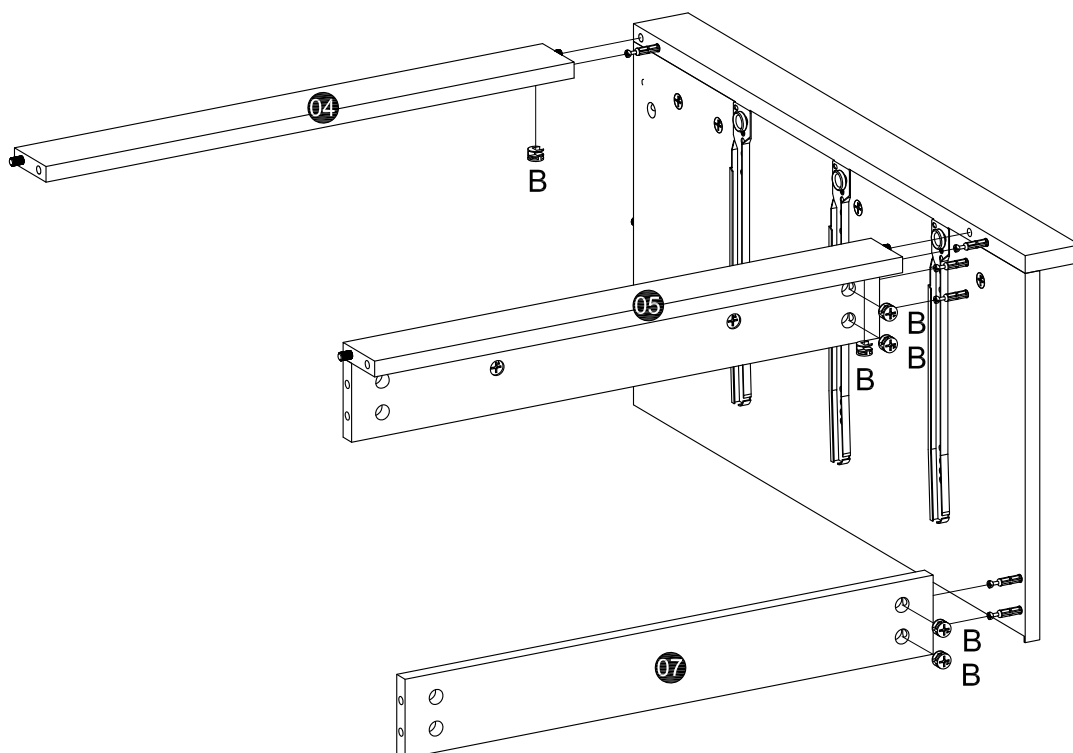


06


B CAM lock x6



Ø15x11mm

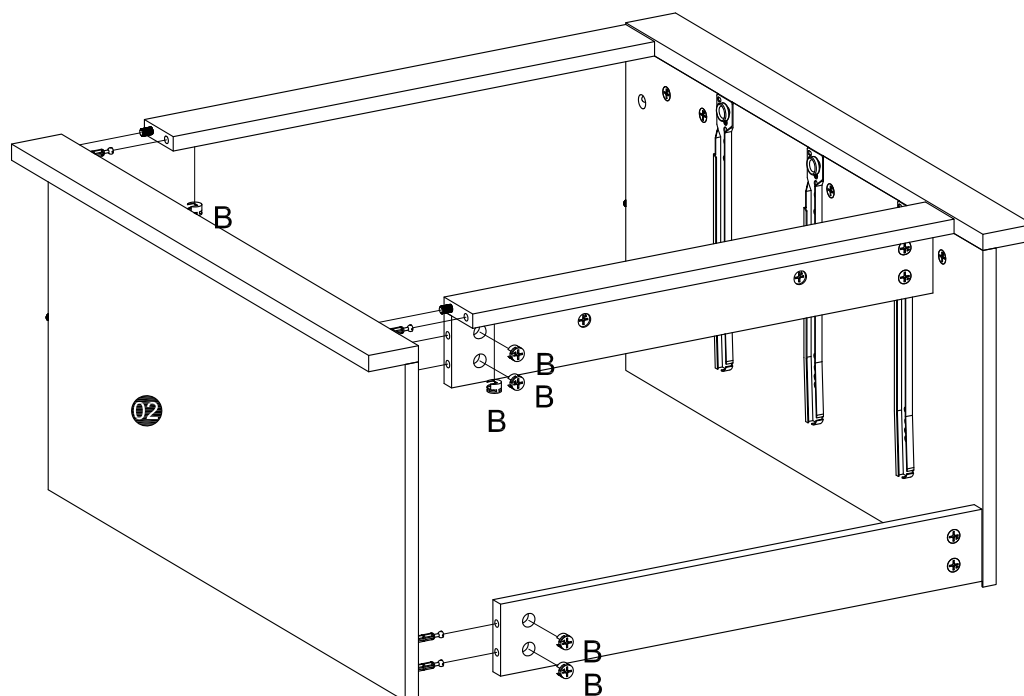

07

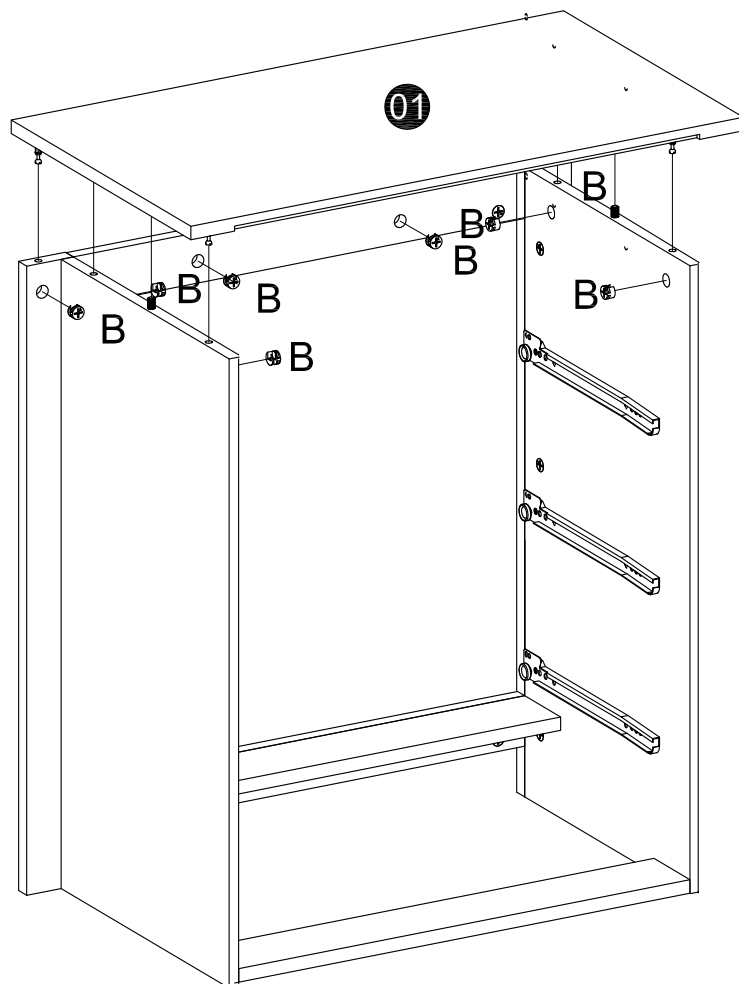


B CAM lock x8



Ø15x11mm

08

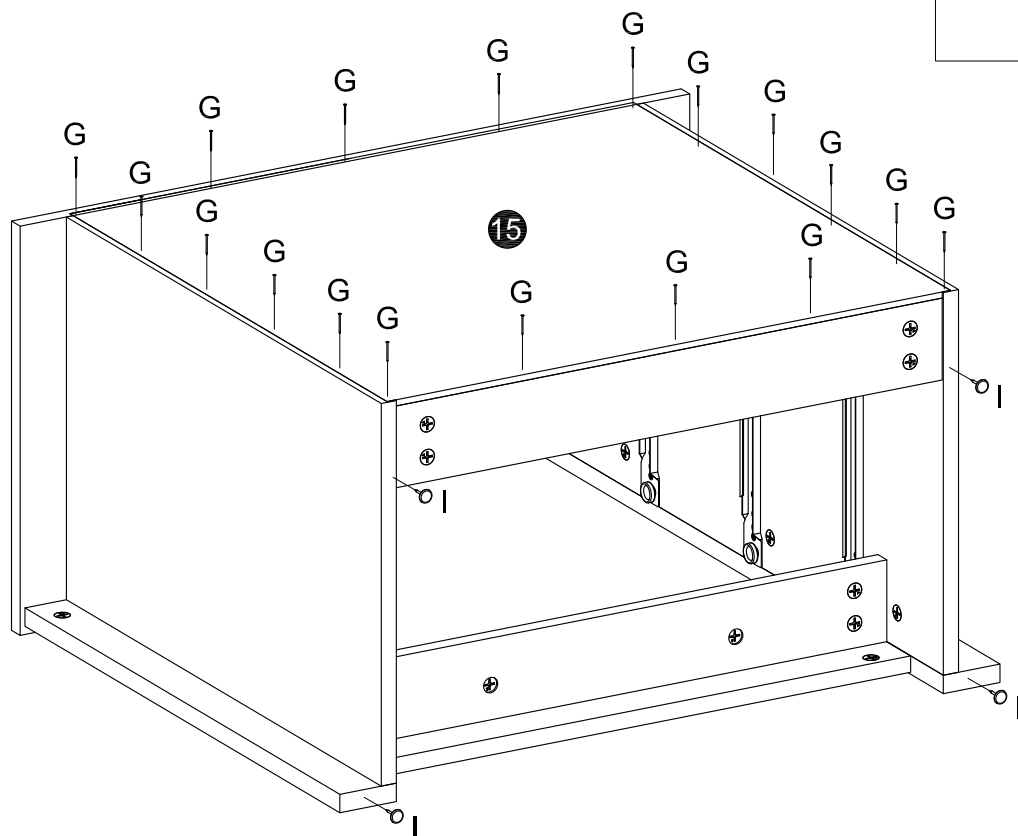

G Nail





I Nail leg



x4


09

E Screw $\varnothing 3.5 \times 35$
x12

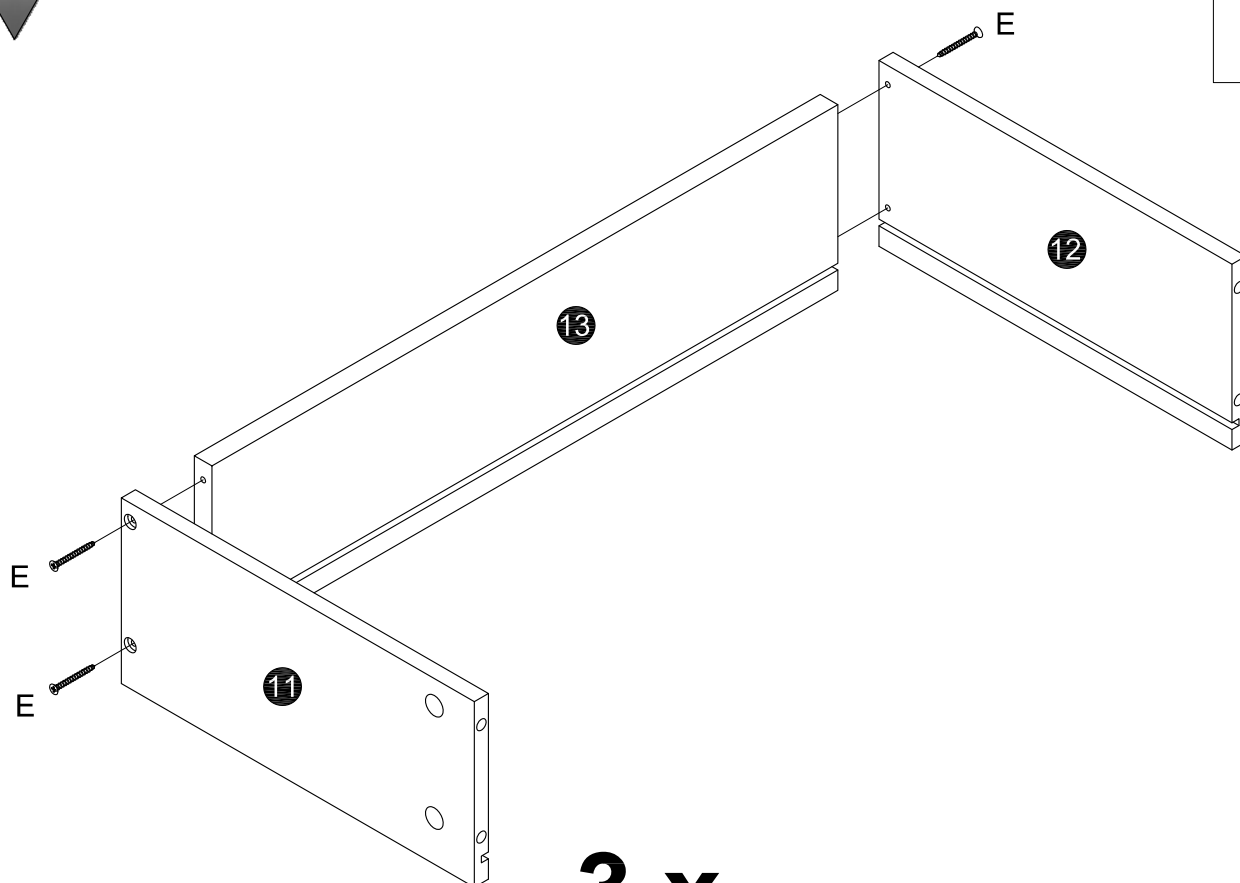

3 x

10

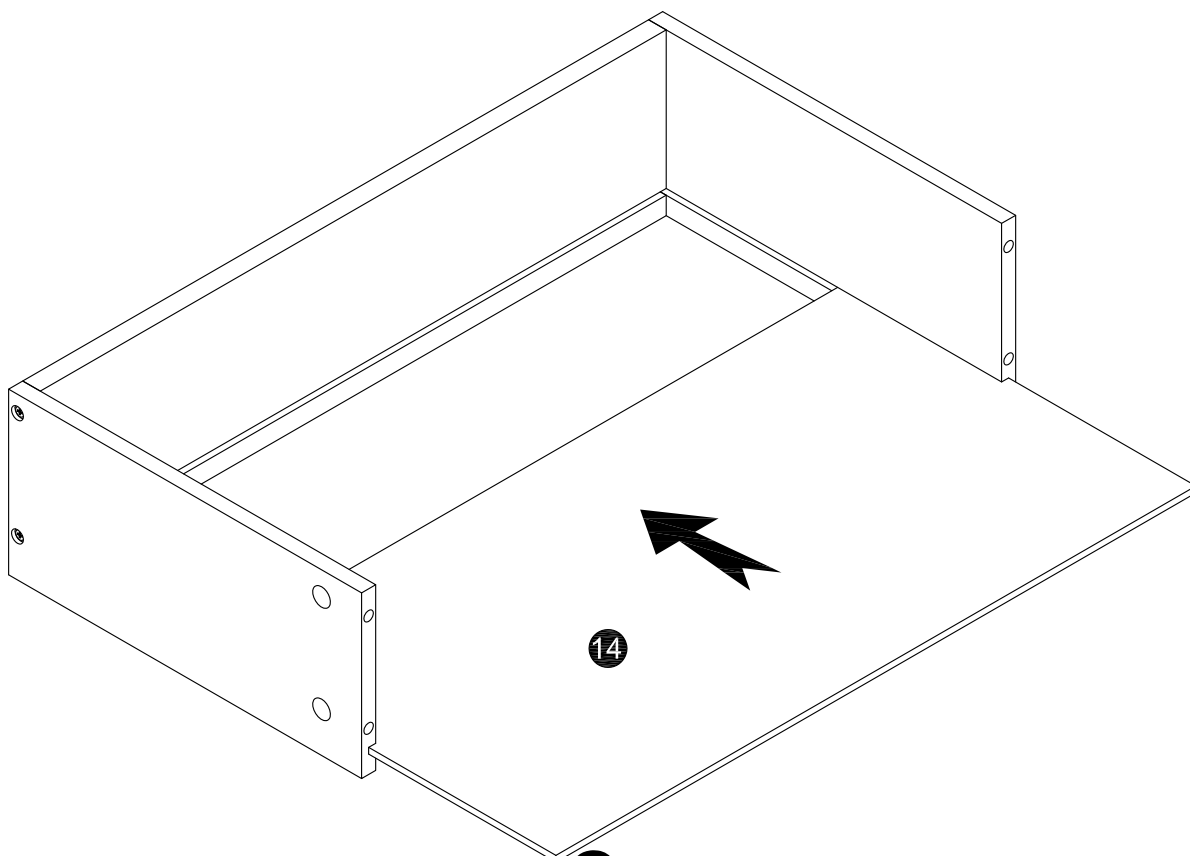


3 x

11

B CAM lock x12



Ø15x11mm

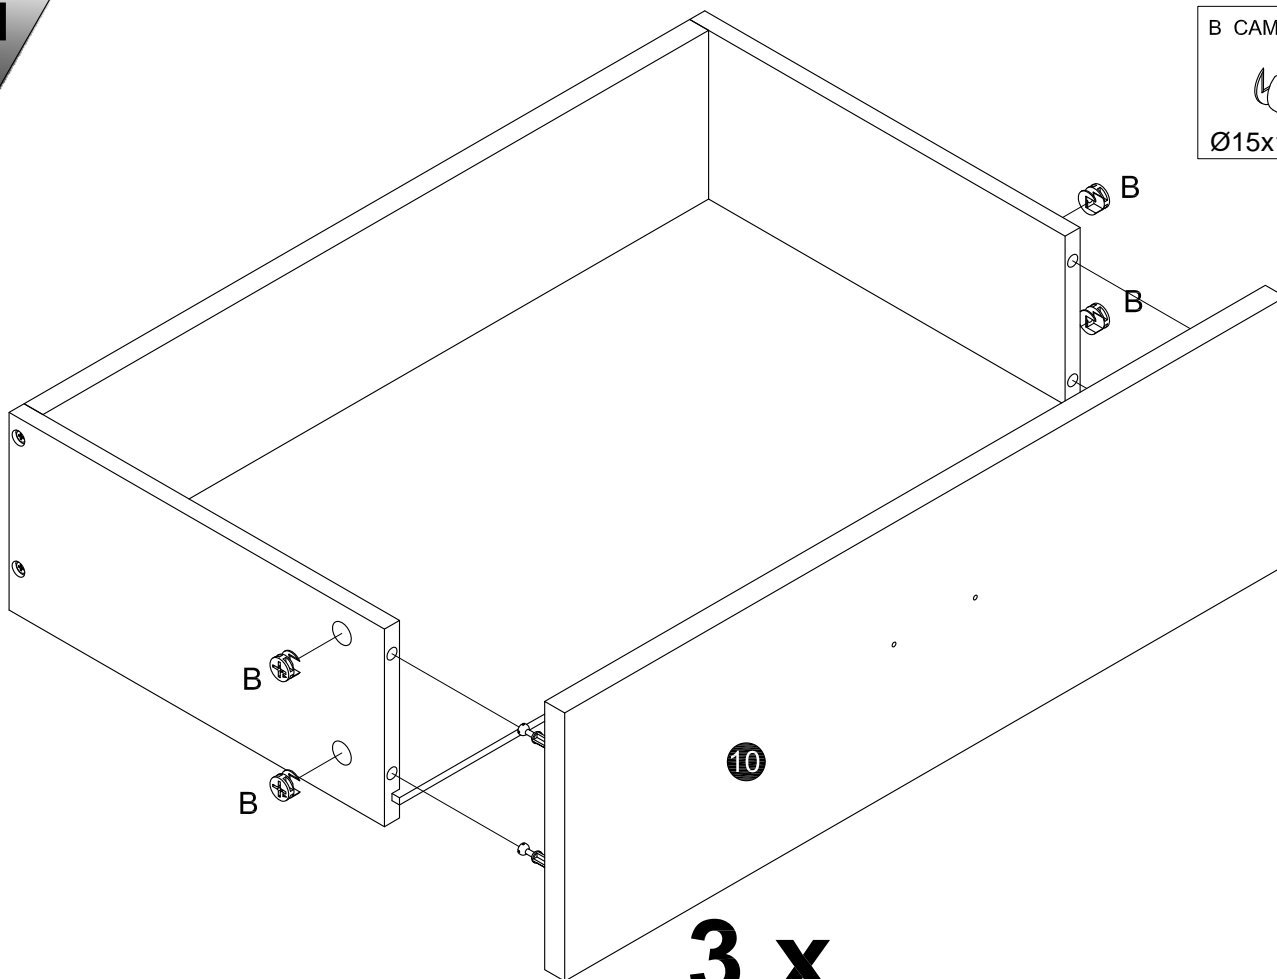


12

F Screw Ø3.5x14
x12




D Drawer rail x3

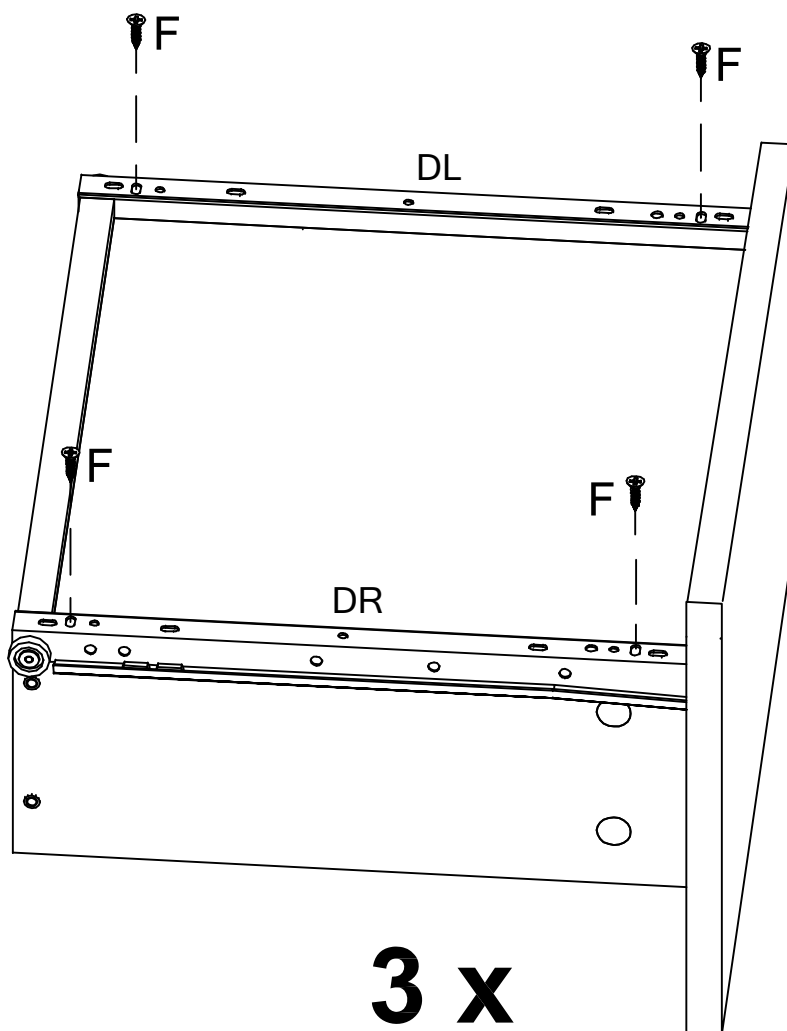



13

H Handle&Screw

x3

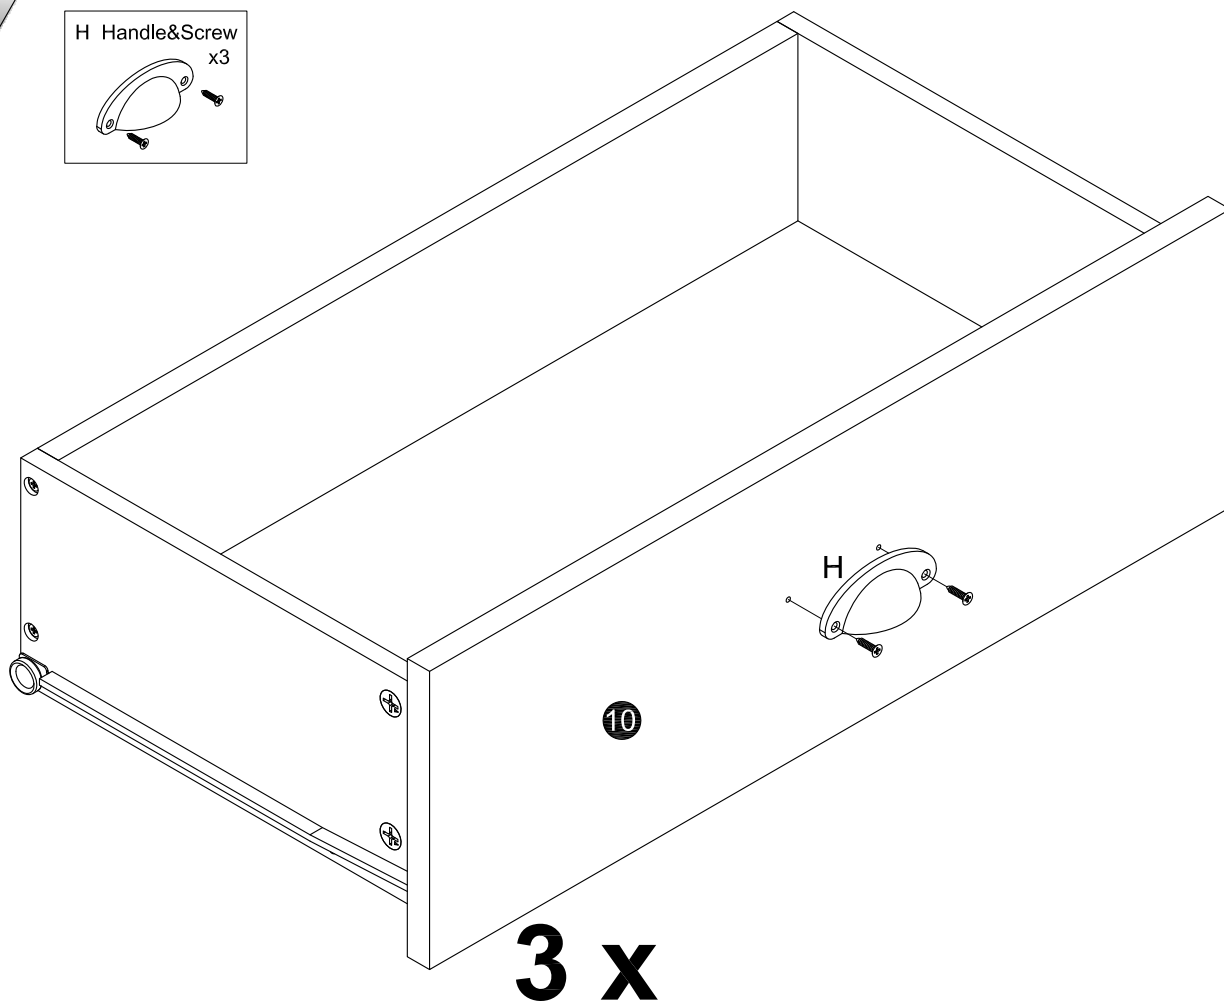

14

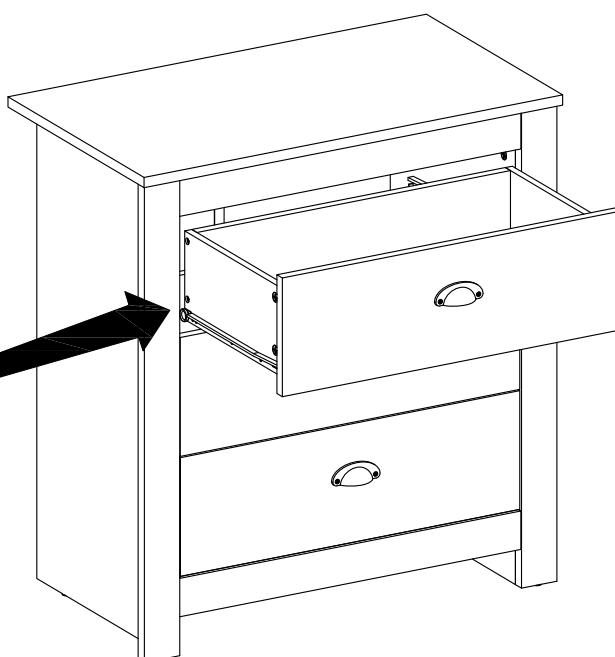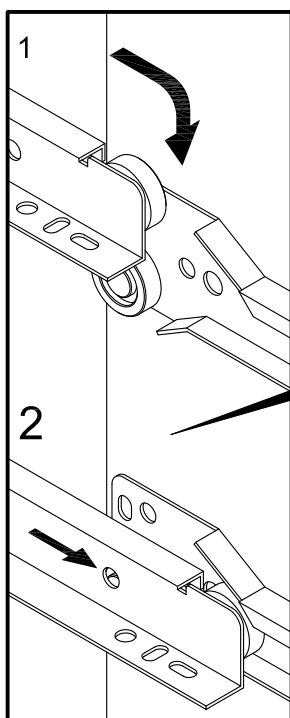


Return:

Please keep your original packages, due to the health and safety reasons, we can not accept returns without original packages.

Comments and Suggestions:

Please give us your advice about this purchase and send to this e-mail: help@furniturehmd.co.uk

Need Two Or More People To Complete

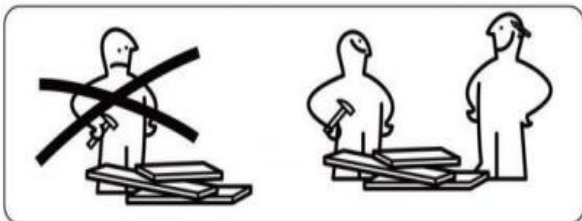

Assemble Item On a Clean Flat Surface

