

ropoda




NOTICE:

Please make sure you peel off the protective film on the surface of the backboard.


NOTE:

1. Place the smooth side with the ROPODA logo facing you. The foam side of the whole product is the BACK (Foam is to prevent scratching the door!).
2. Let the Basketball Hoop in the sun for 15 to 30 minutes before using it, this will make it brighter at night.
3. After a period of play, if Rim sags, please slight tighten the Breakaway Hoop Lock Nut. Do not overtighten Nut as this would DEFEAT the breakaway function of the Rim.

Mounted Accessories

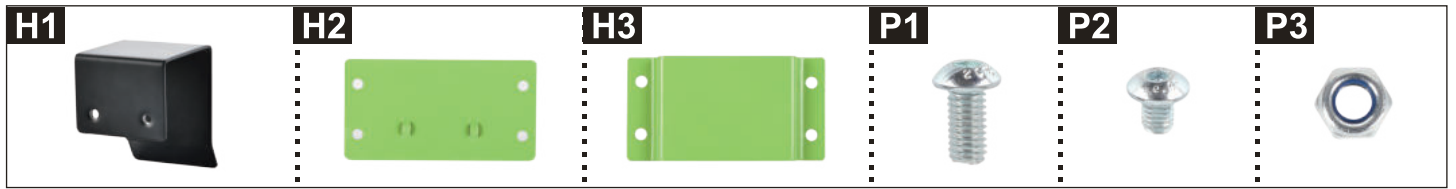



How to Install the Basketball Hoop?





Step1

Put H1 behind the Backboard and align the holes, then use P2 to fix H1 to the Backboard.

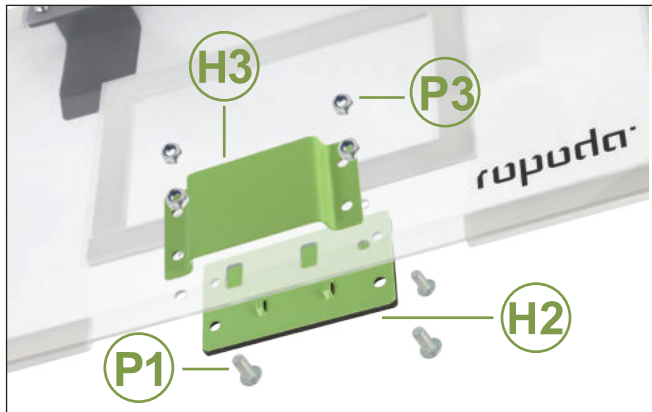

Step2

Attach H3 to the Backboard with H2, P1 & P3. Make sure do not tighten P1&P3 too much, in order to insert the Rim.

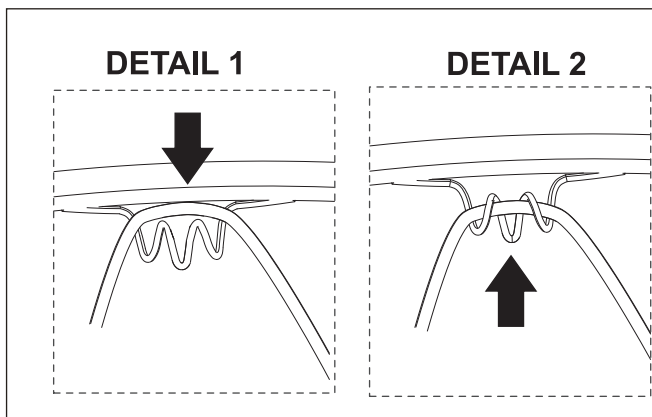


DETAIL 1

DETAIL 2

Step3

Install the Basket Net and place the Rim in the gap, then tighten P1&P3 with the wrench until the Rim is secure.

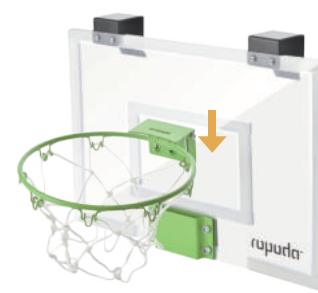

Step4

Pumping up the ball. And now you can hang the Mini Basketball Hoop on the door and enjoy the game!



Please note that the Needle of the Pump is hidden at the bottom of the Pump.