

L1B005BR0M L1B005HS0M

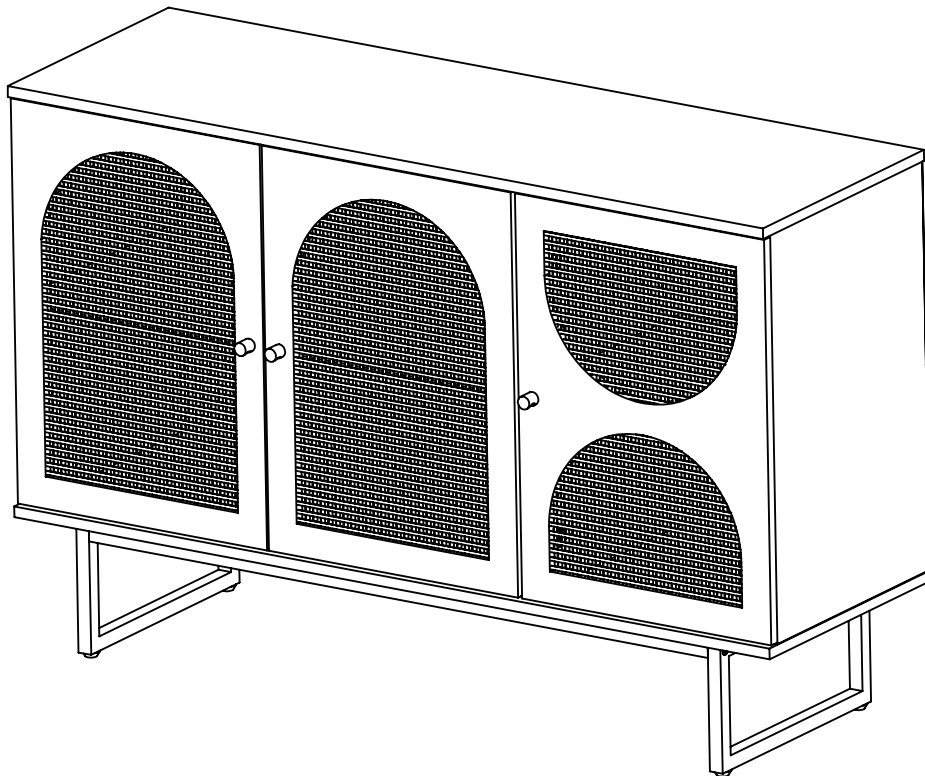


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

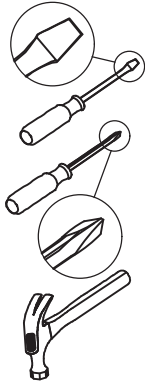

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

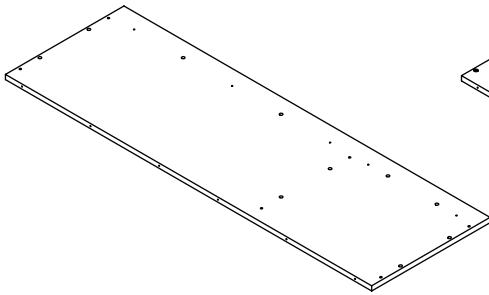


Ⓐ
TOP
Qty:1

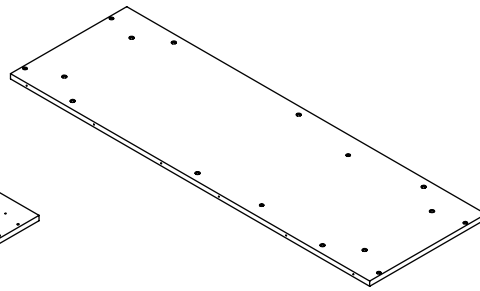


Ⓑ
BOTTOM
Qty:1

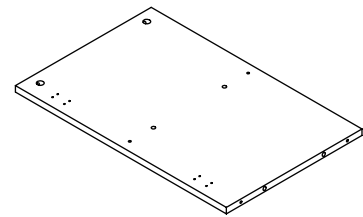


Ⓒ
LEFT SIDE
Qty:1

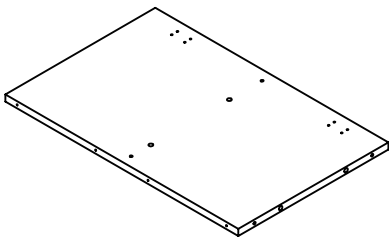


Ⓓ
MIDDLE SIDE
Qty:1

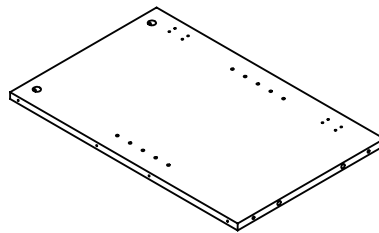


Ⓔ
RIGHT SIDE
Qty:1

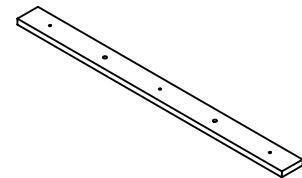


Ⓕ
LEFT TOP SUPPORT
Qty:1

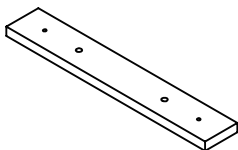

Ⓖ
RIGHT TOP SUPPORT
Qty:1

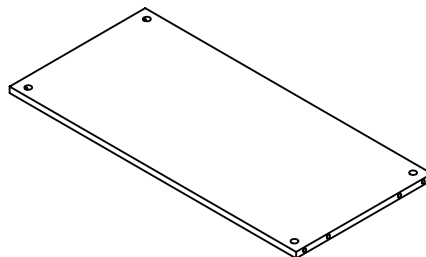


Ⓗ
FIXED SHELF
Qty:1

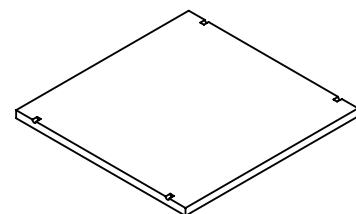


Ⓘ
ADJUSTABLE PLATE
Qty:1

Board Identification


Not actual size

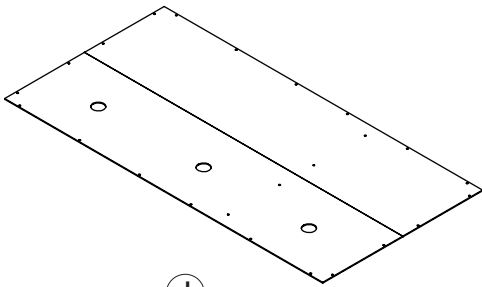


ⓐ
BACK
Qty:1

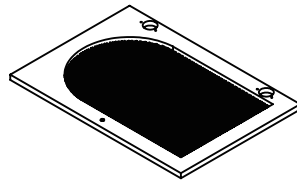


ⓑ
LEFT DOOR
Qty:1

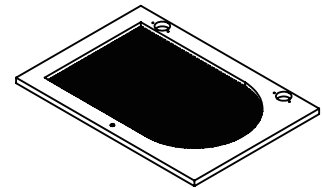


ⓒ
MIDDLE DOOR
Qty:1

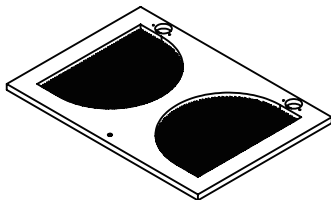

ⓓ
RIGHT DOOR
Qty:1

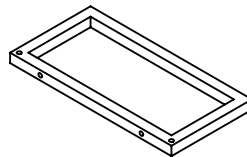


ⓔ
METAL BRACE
Qty:2

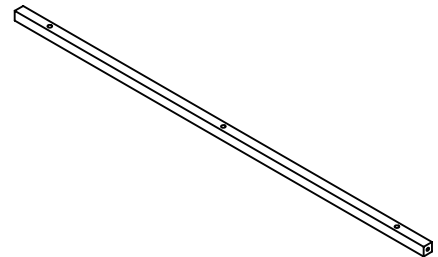


ⓕ
METAL BRACE
Qty:2

Board Identification


Not actual size

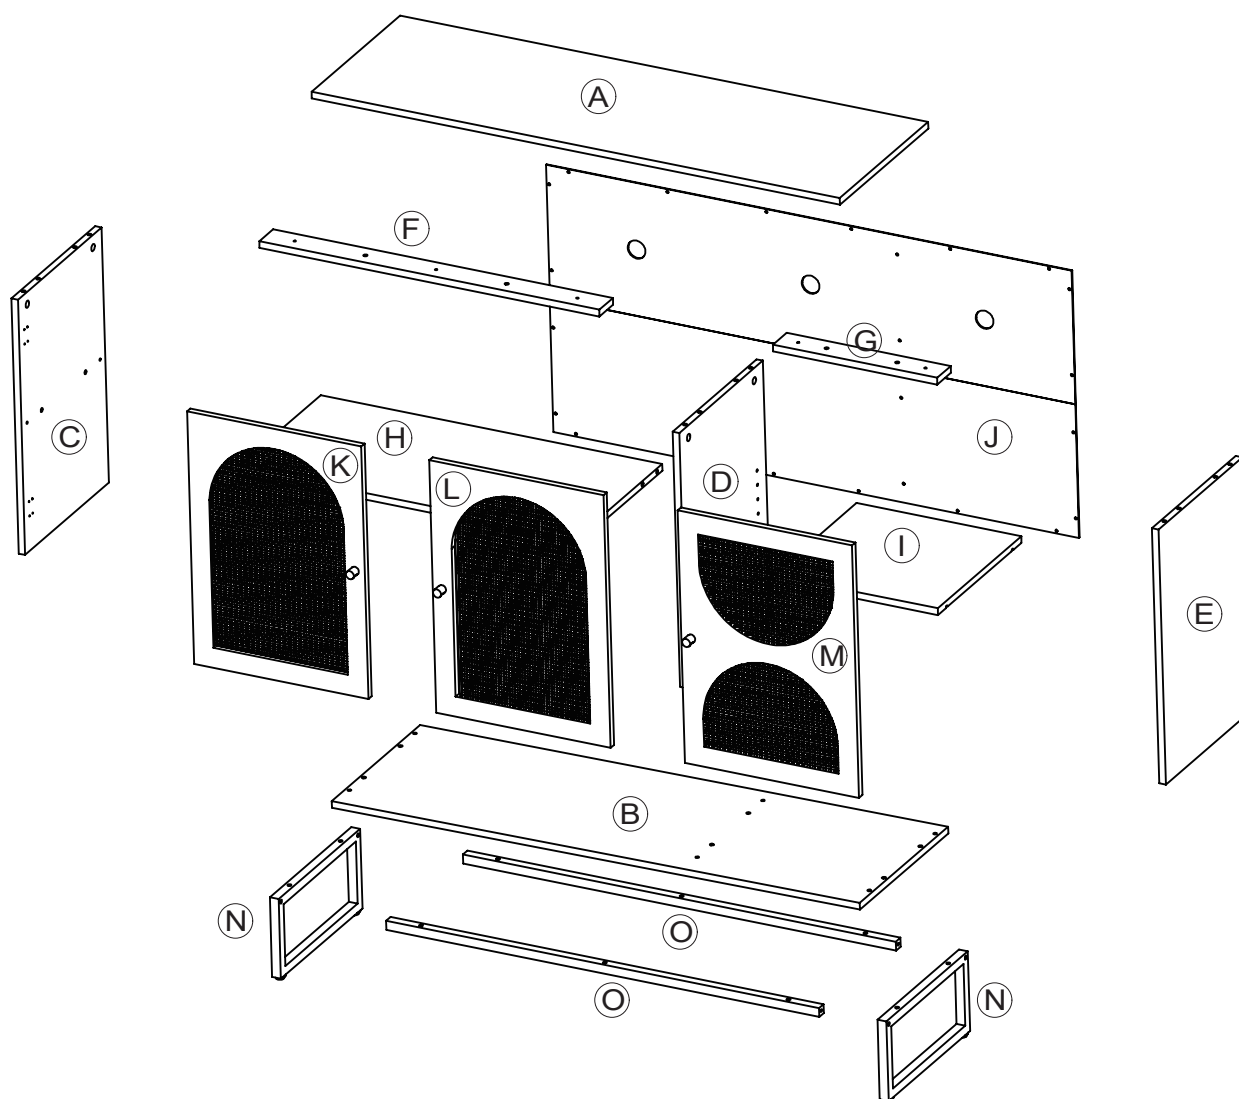


Part List

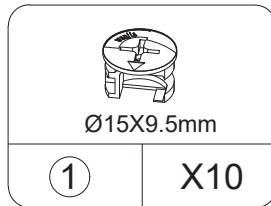


CAM LOCK
spare:1

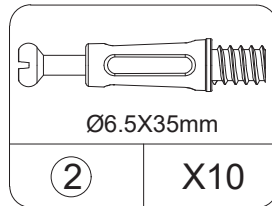


CAM BOLT
spare:1

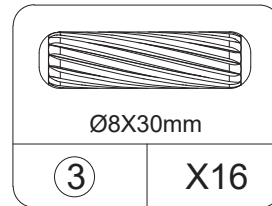


WOODEN DOWEL
spare:2

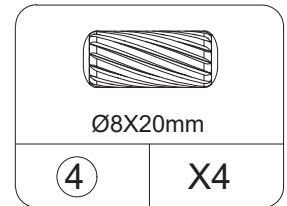


WOODEN DOWEL
spare:1

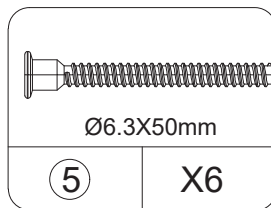


SCREW
spare:1

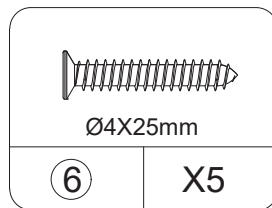


SCREW
spare:1

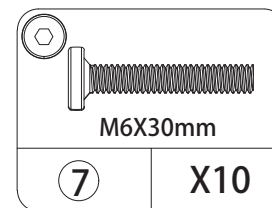


SCREW
spare:1

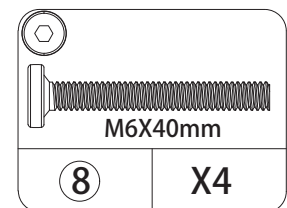


SCREW
spare:1

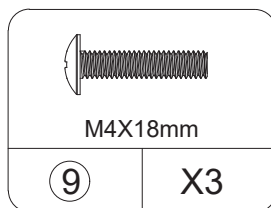


SCREW
spare:1

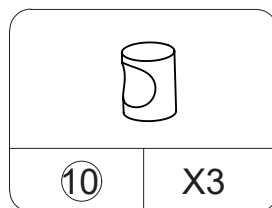


HANDLE

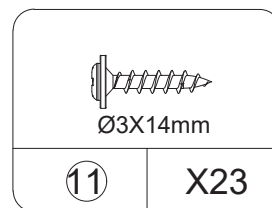


SCREW
spare:2

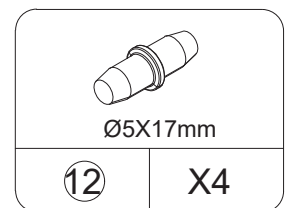


SHELF SUPPORT
spare:1

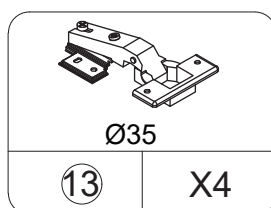


HINGE

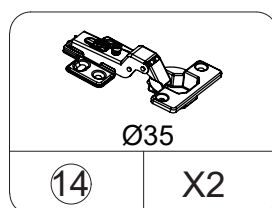


HINGE

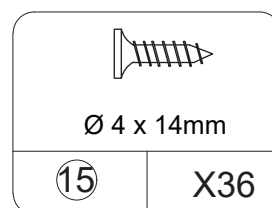

SCREW
spare:3

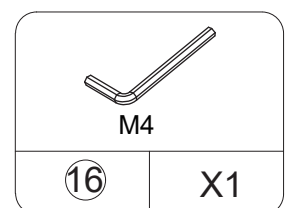


HEX KEY

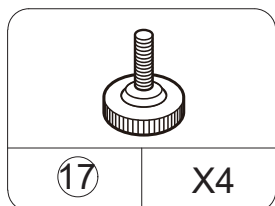

17

X4

ADJUST FEET

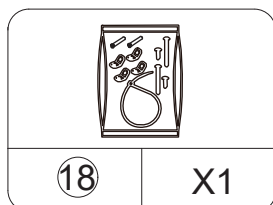

18


X1

TIPPING RESTRAINT
HARDWARE KIT


Cam Lock Fastening System

Insert the cam bolt into the
hole first, then insert the
cam lock and lock it.


1

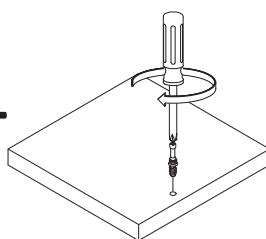

2

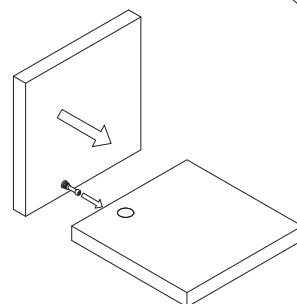


3

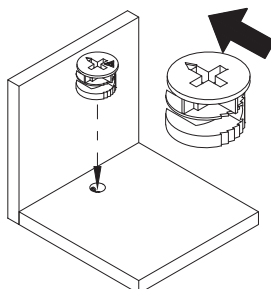


The opening must point toward the
edge of the board

4

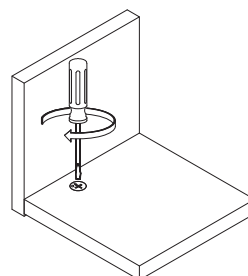


STEP1






Ø6.5X35mm




2	X10
---	-----

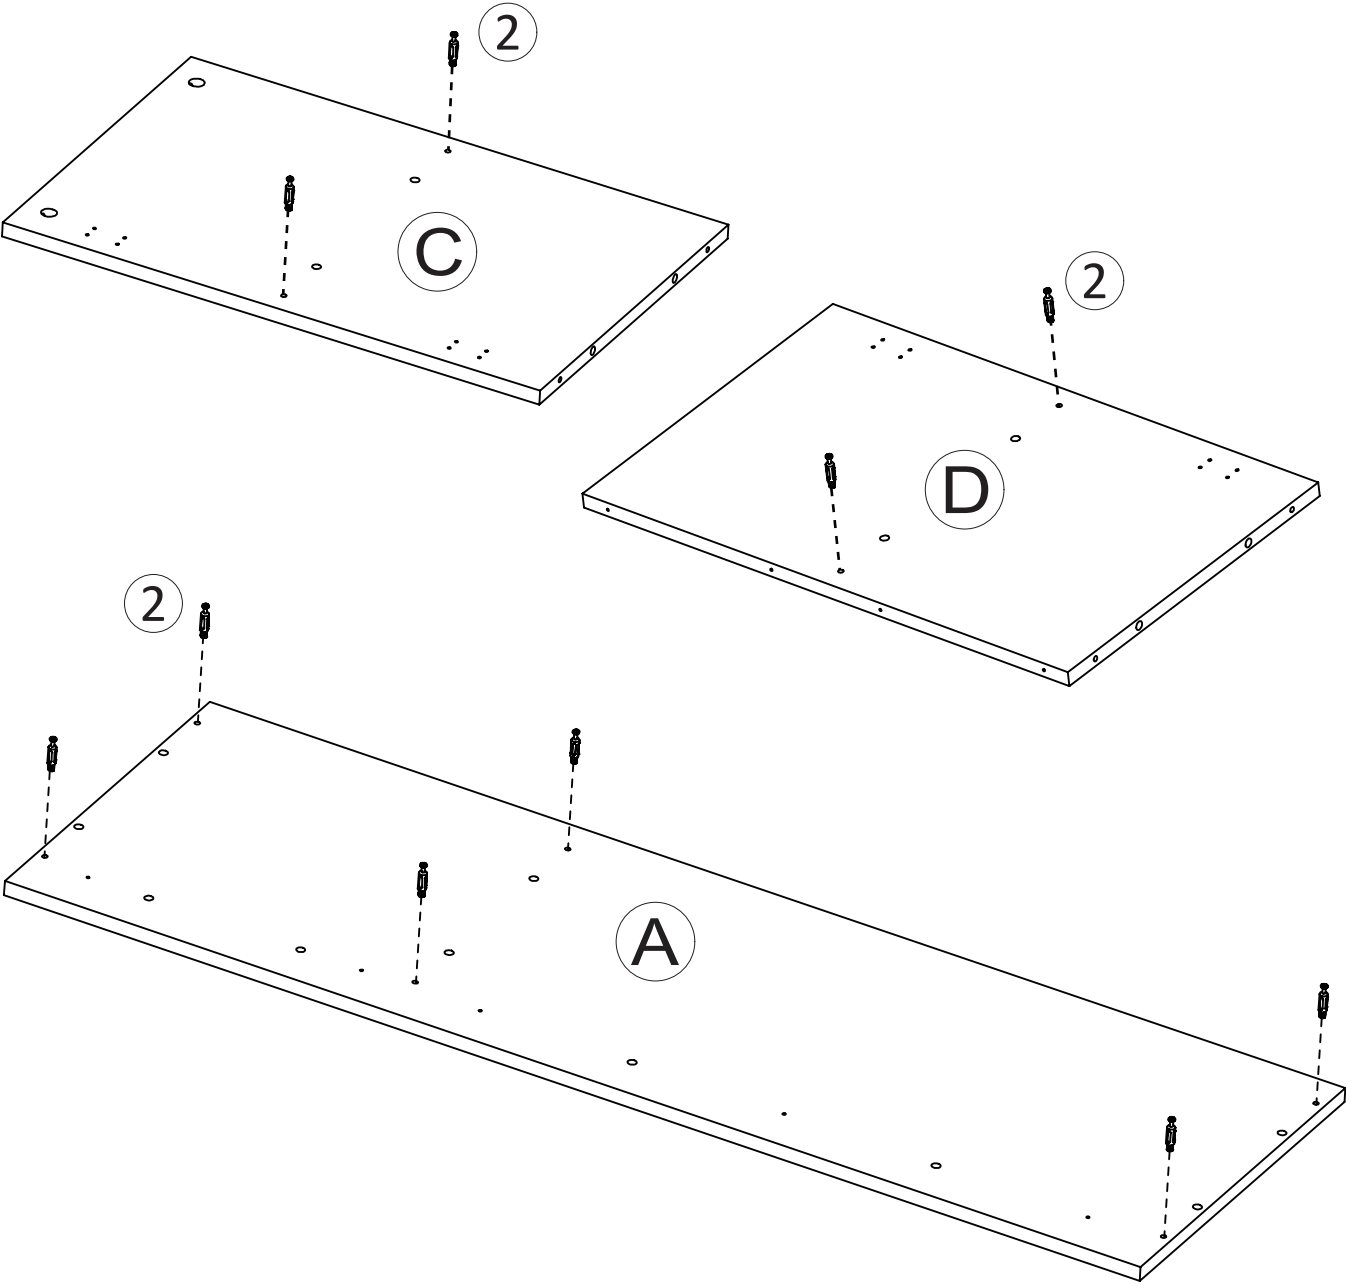





STEP2

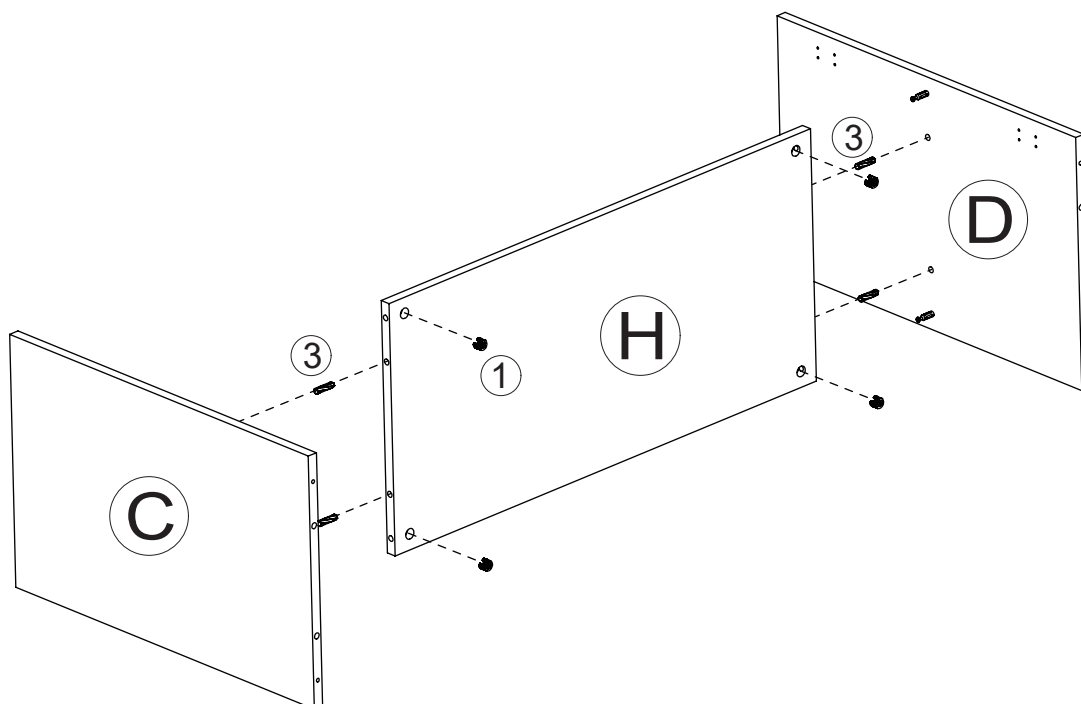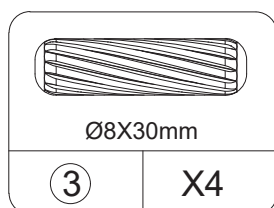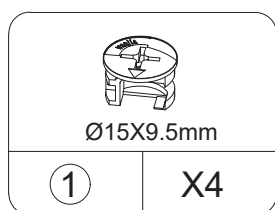






STEP3

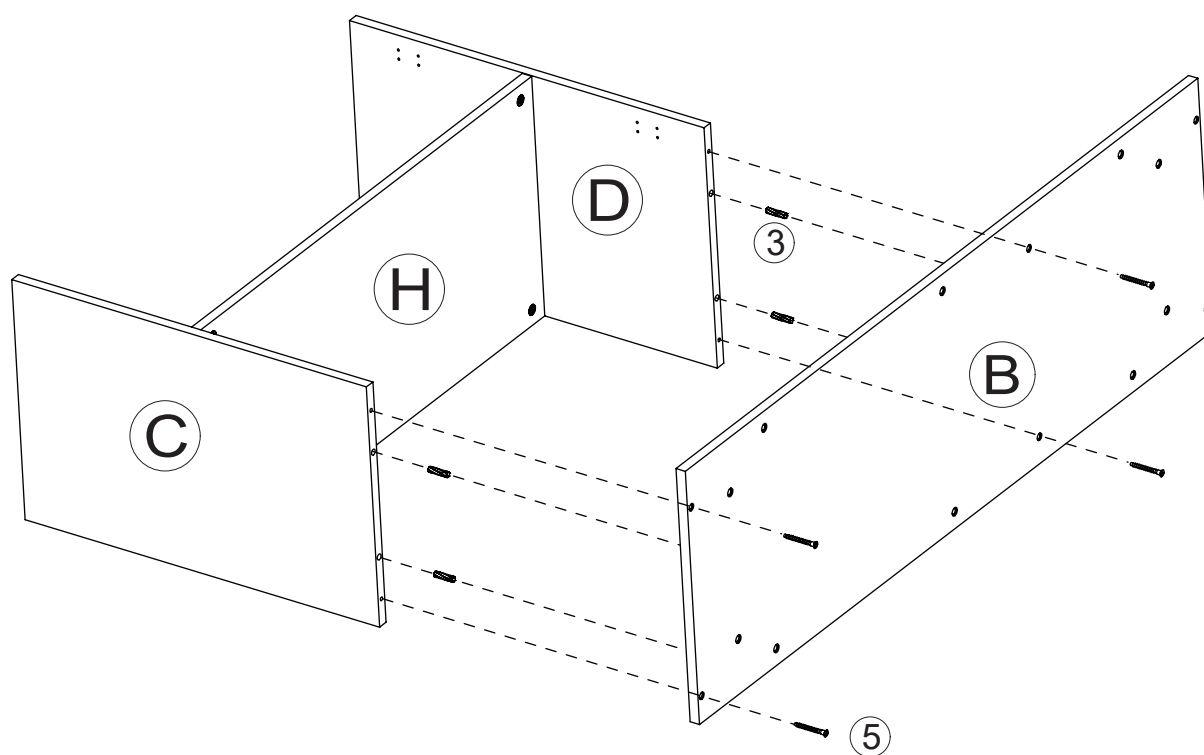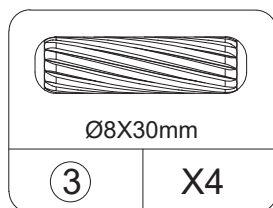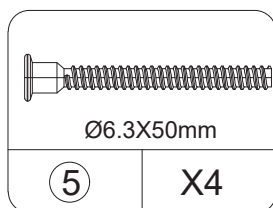


STEP4

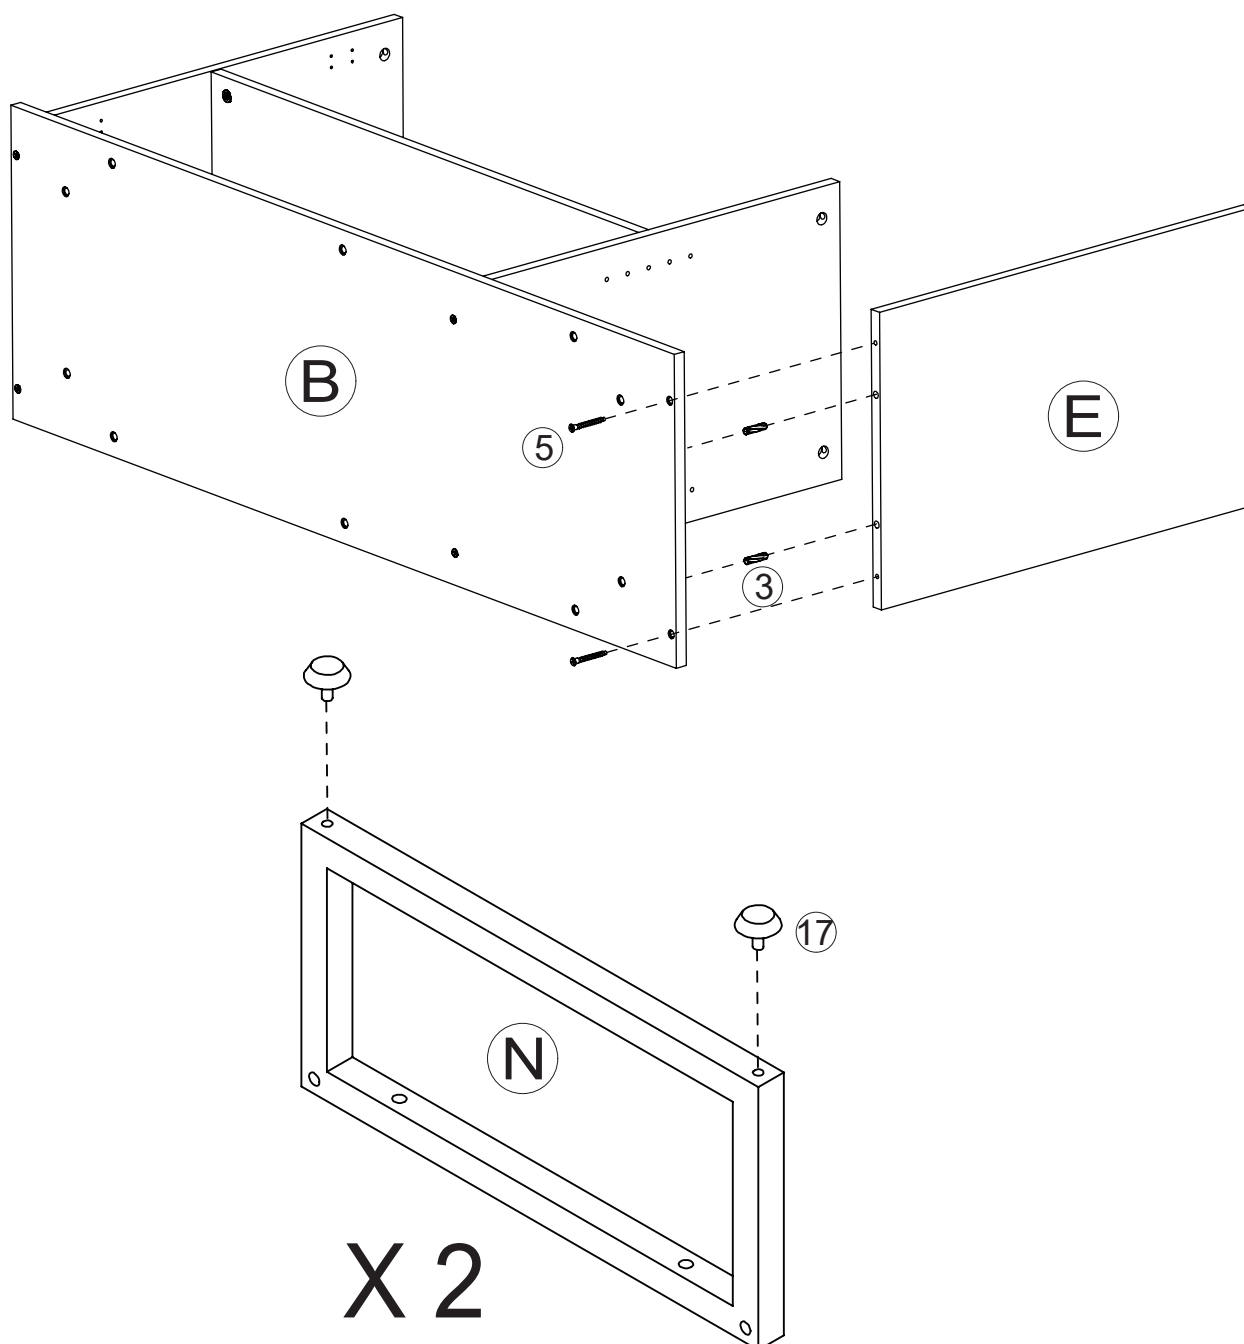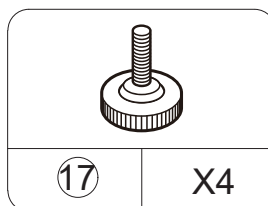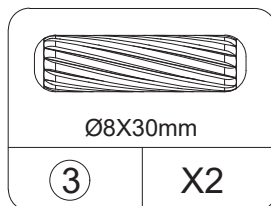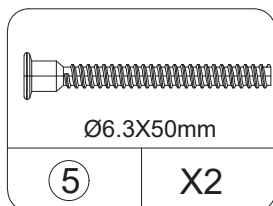


STEP5

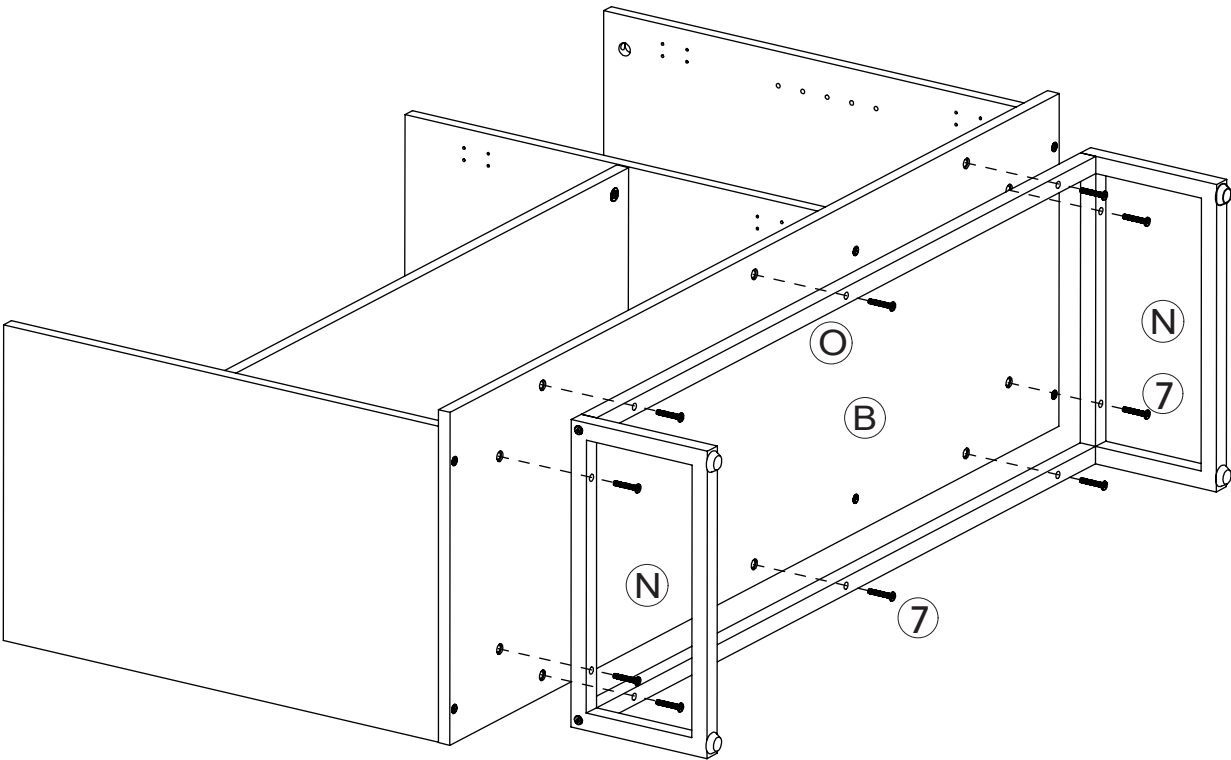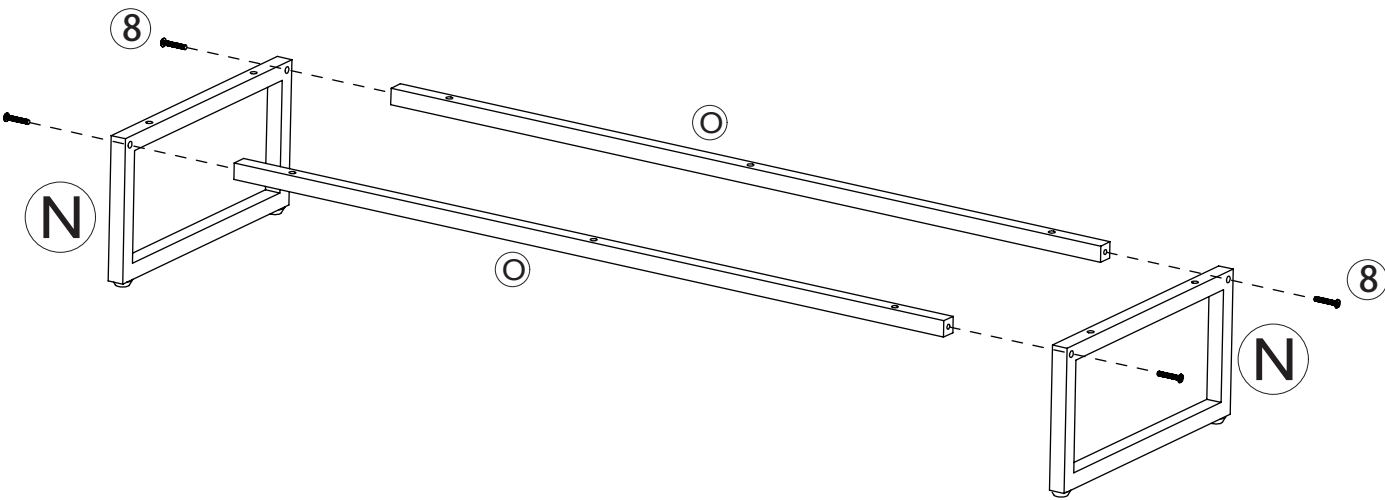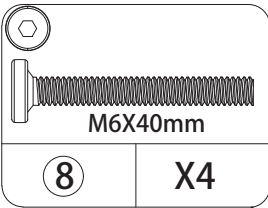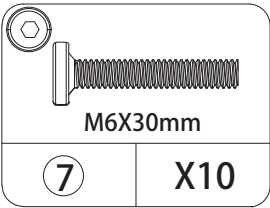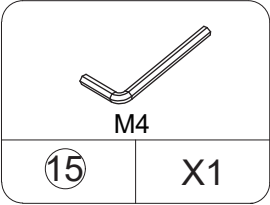


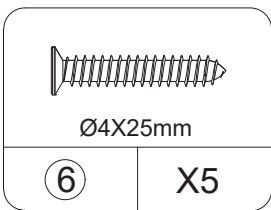



STEP 7

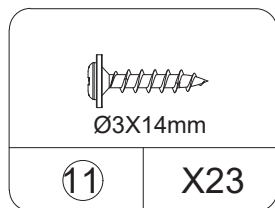


THIS DRILLING HOLE
IS FOR TIPPING KIT

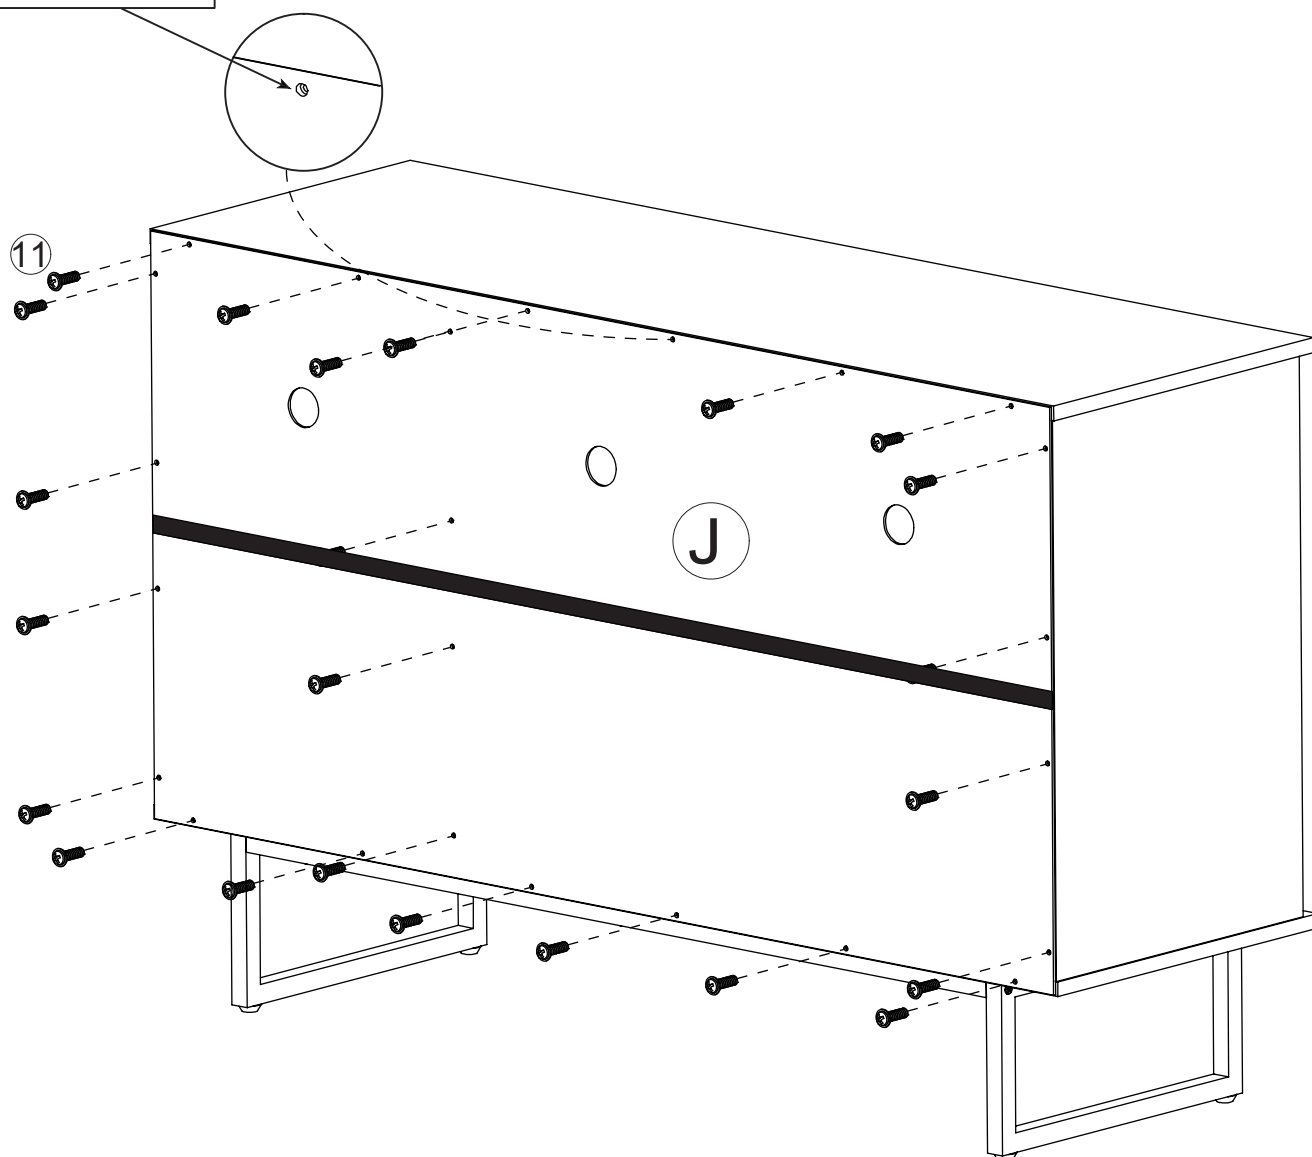






STEP8

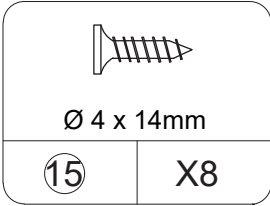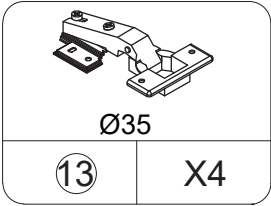





make sure the hinge is the part 13#

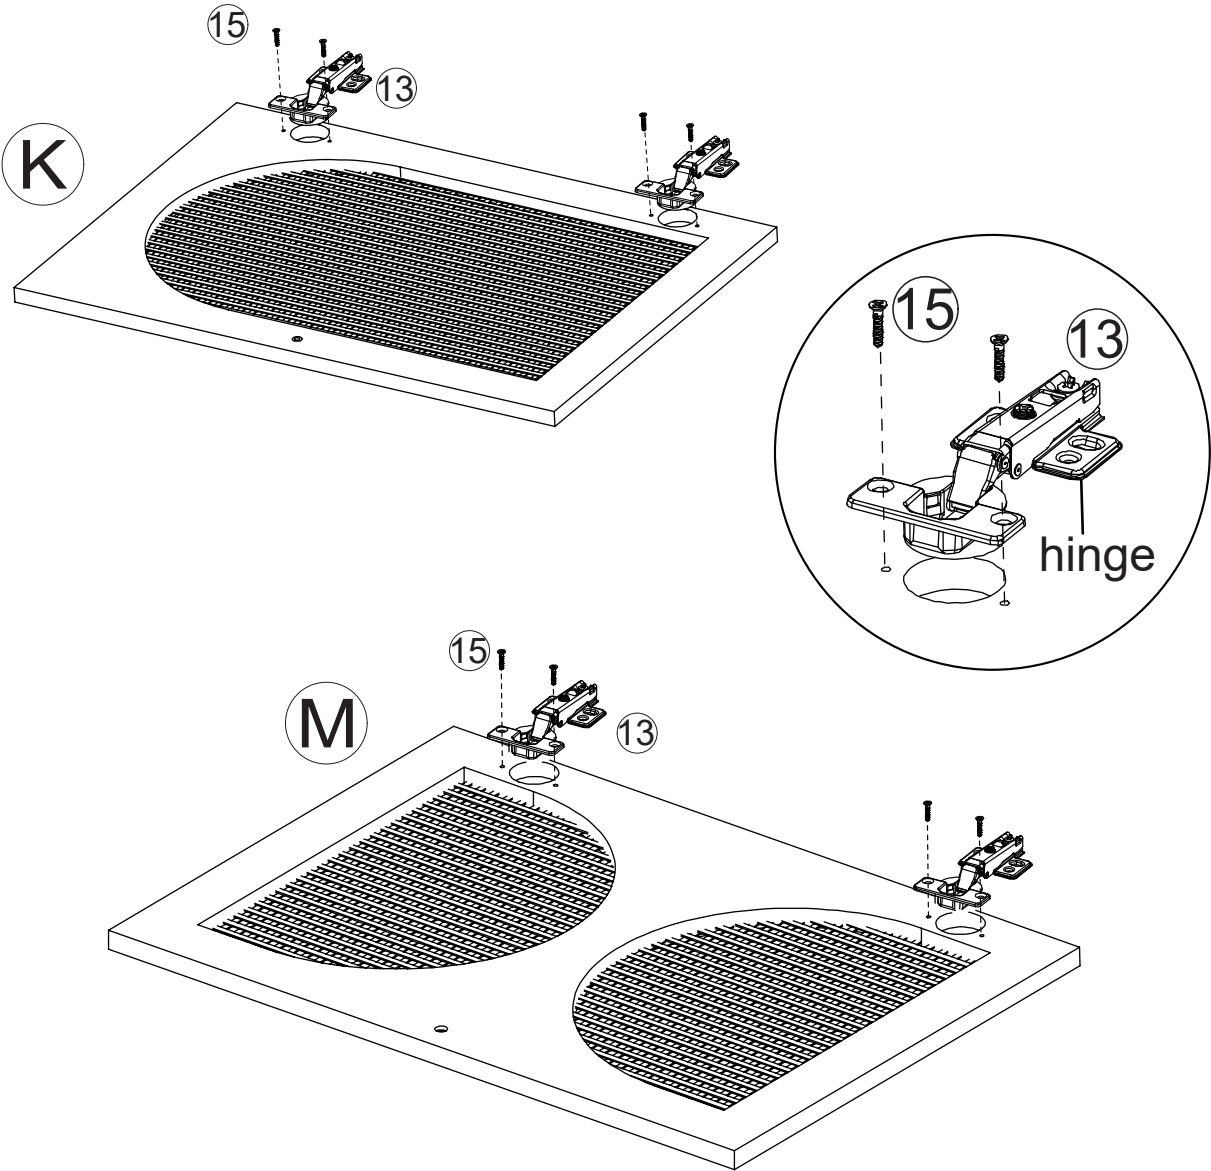



STEP9

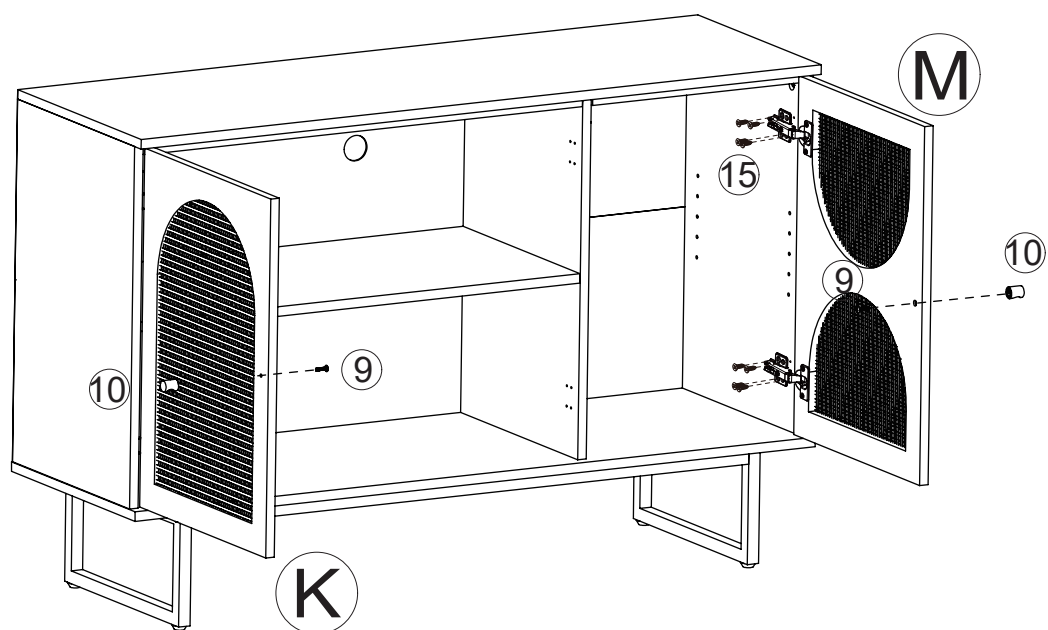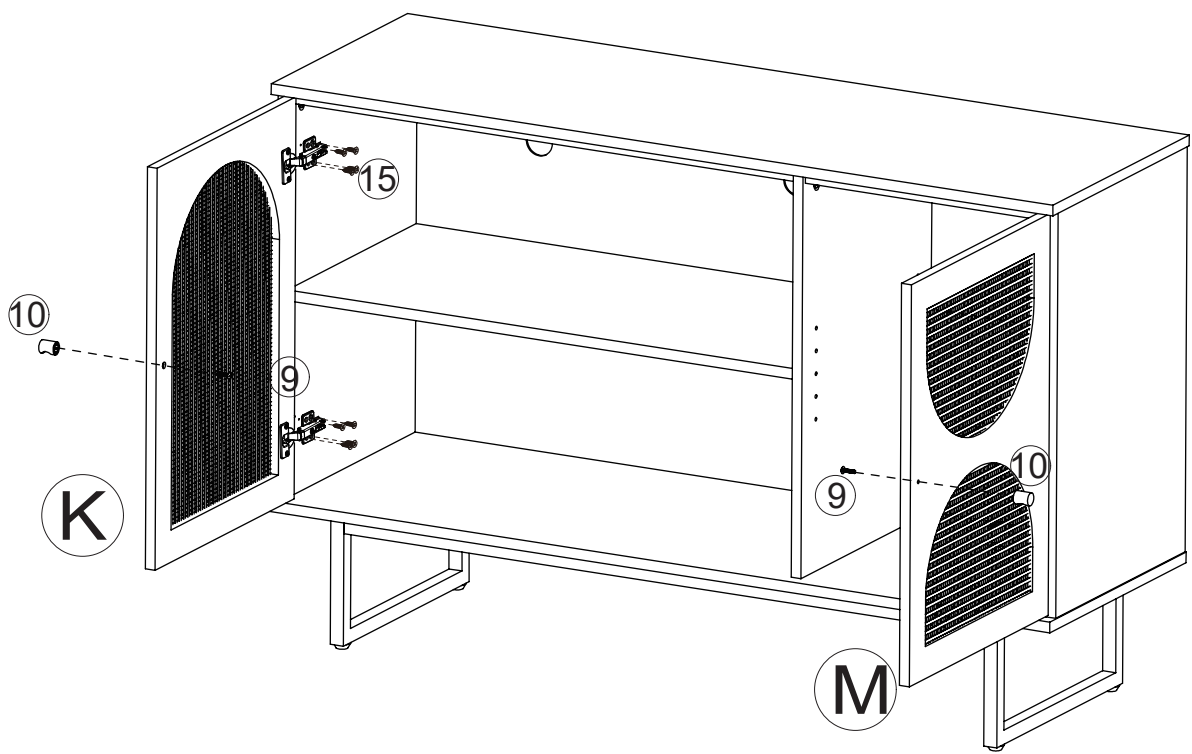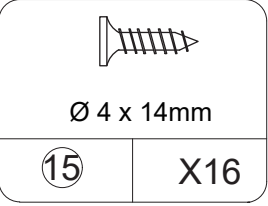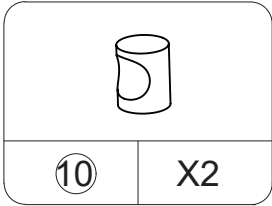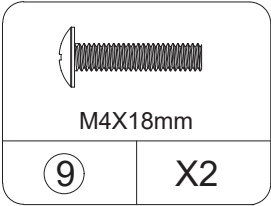




STEP10

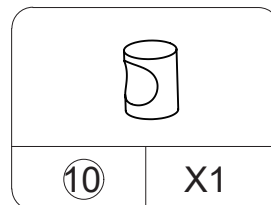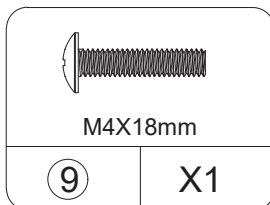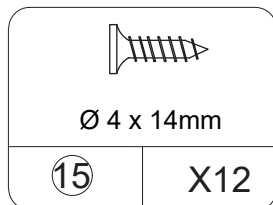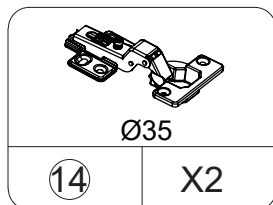

make sure the hinge is the part 14#

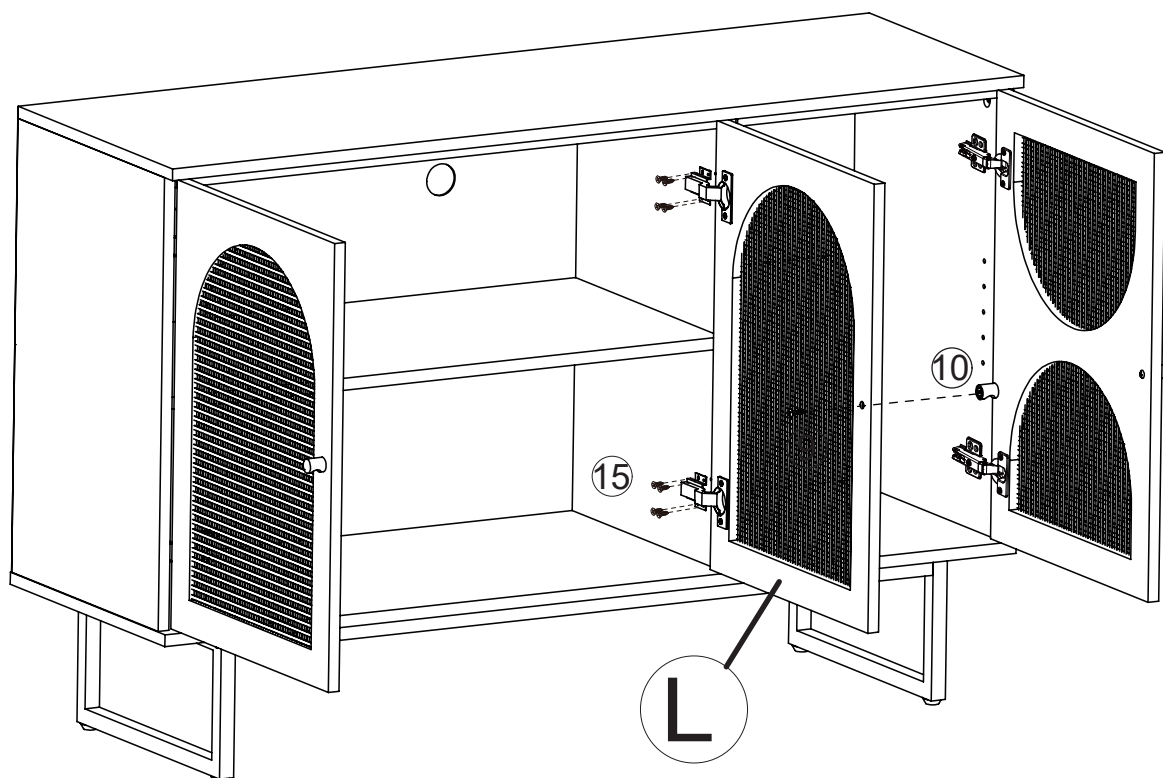
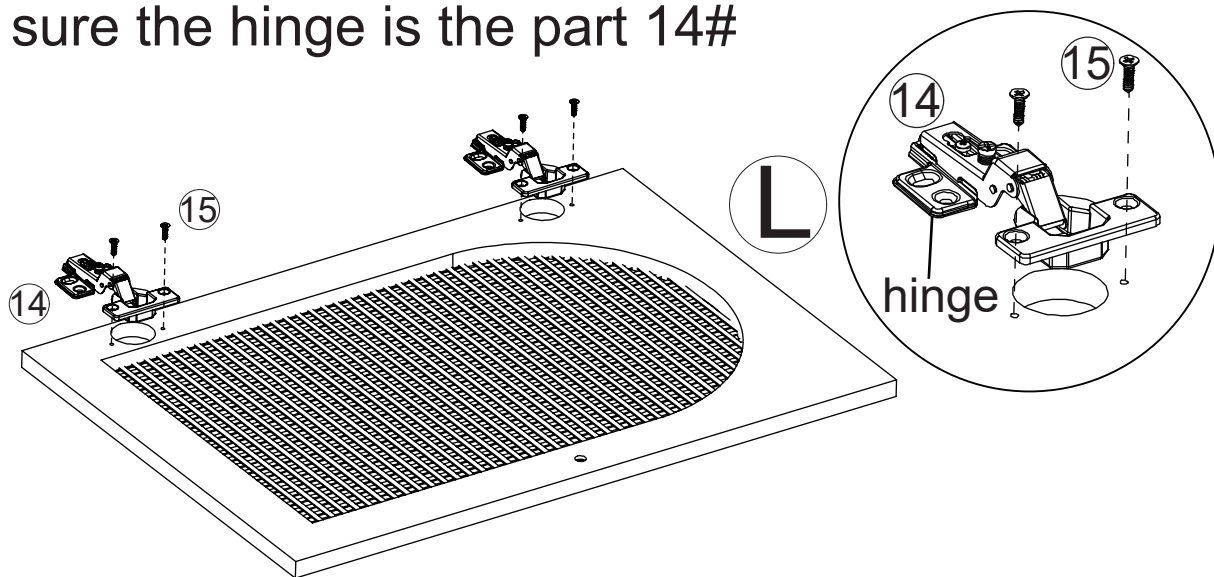


STEP11

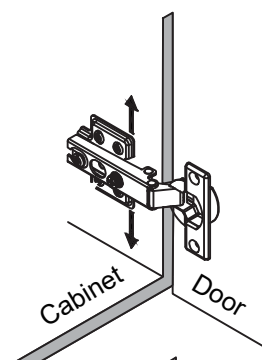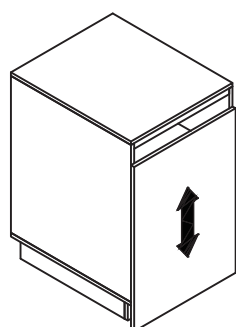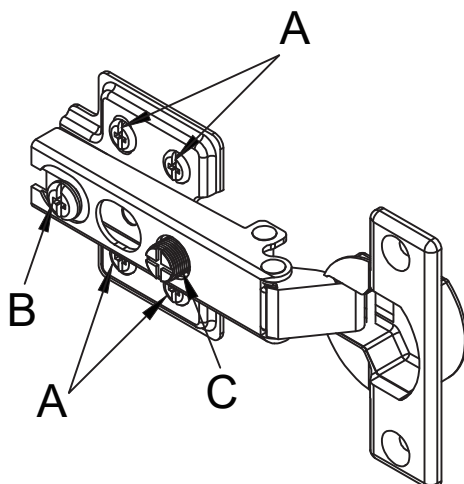



To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

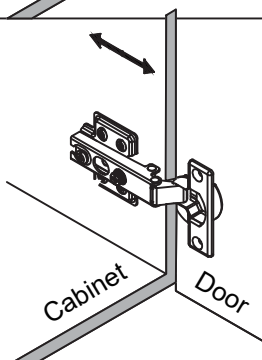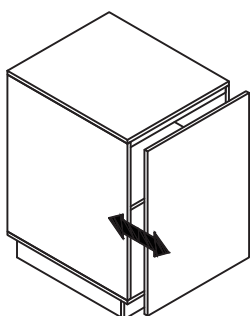

To adjust depth.




Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

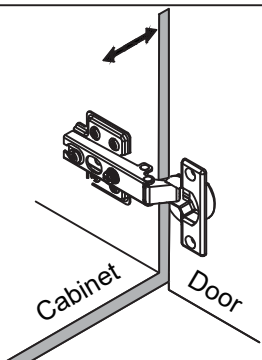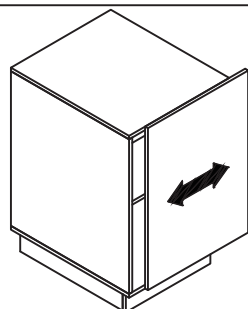


To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.




STEP12

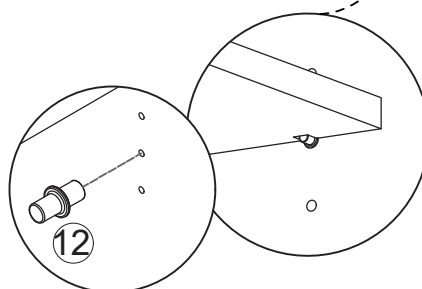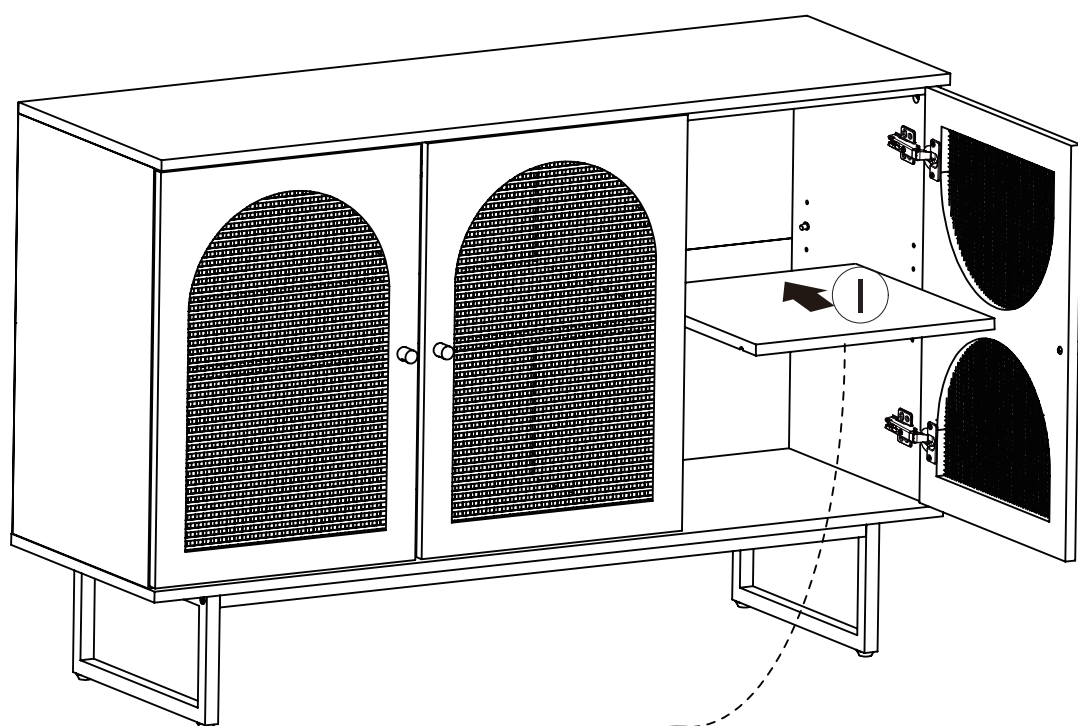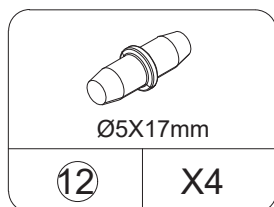

STEP13

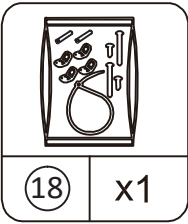

PART LIST	FIGURE	QUANTITY	DESCRIPTION
18.1		2PC	LONG SCREW (Dia.4mmX38mmL)
18.2		2PC	SHORT SCREW (Dia.4mmX19mmL)
18.3		4PC	METAL "L"BRACKET
18.4		2PC	PLASTIC ANCHOR
18.5		2PC	CABLE

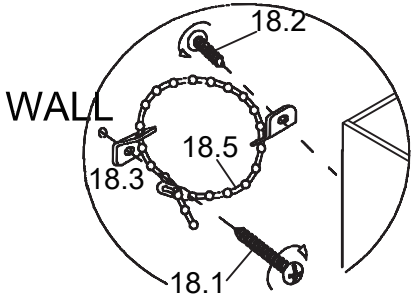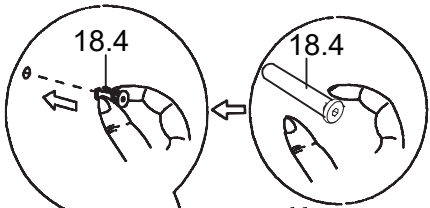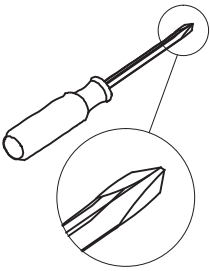

WALL

