



ASSEMBLY INSTRUCTION




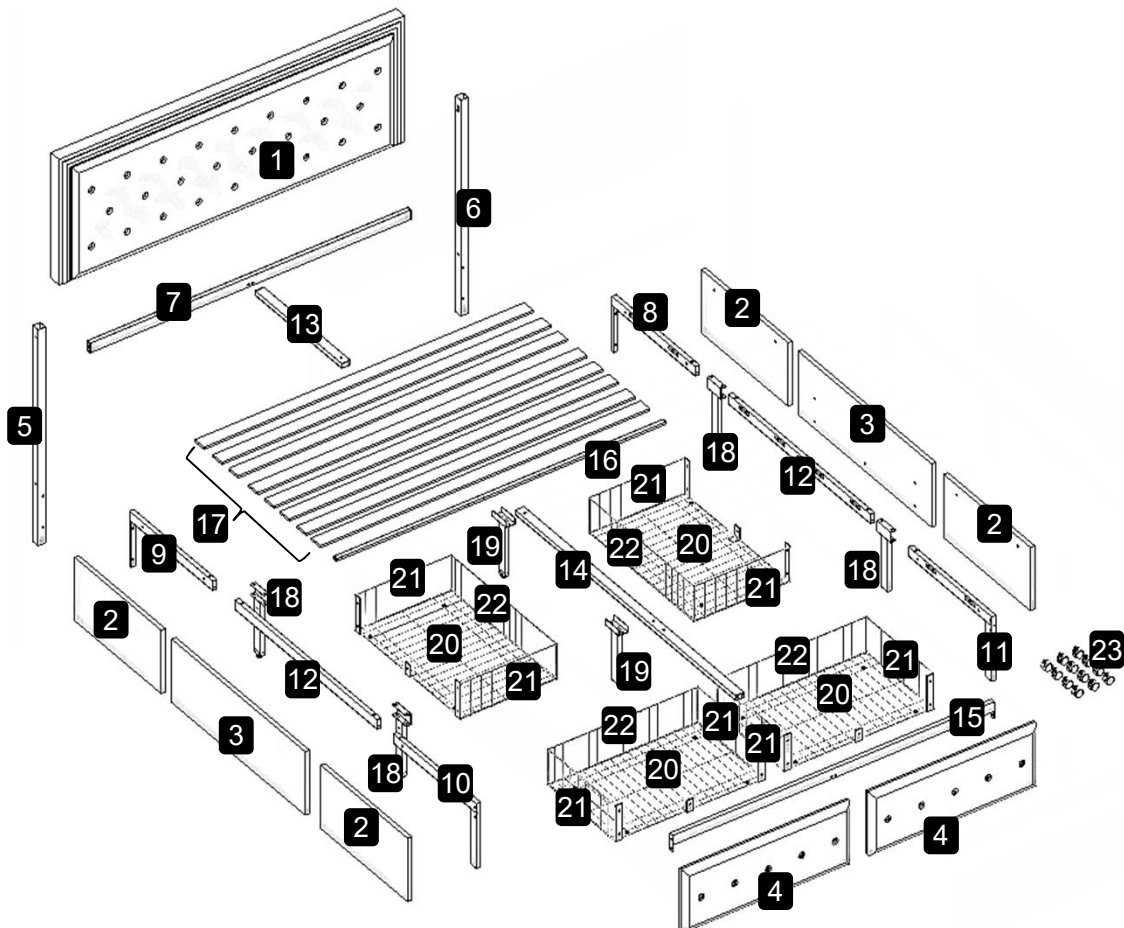










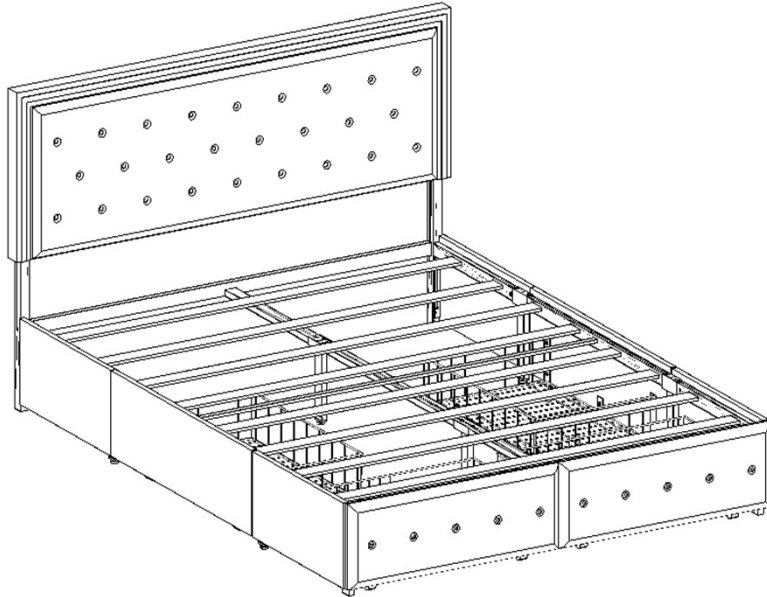



W1580119382 / W1580119383

TIPS



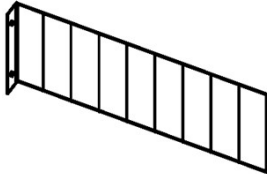


1. This bed fit standard queen mattress 80" L x 60" W.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
4. Do not use substitute part. Contact the manufacture or dealer for replacement part.

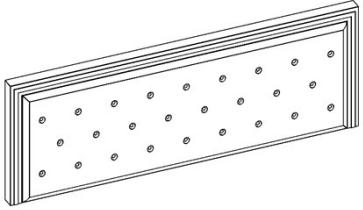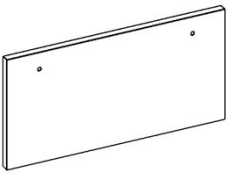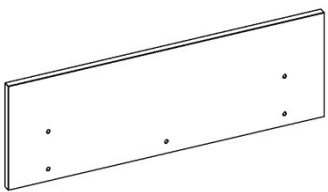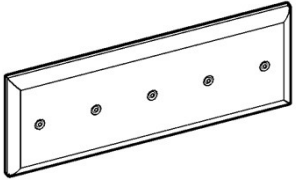

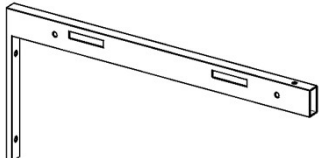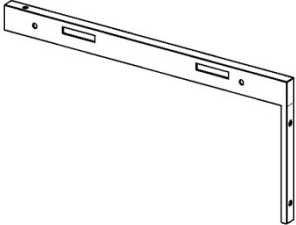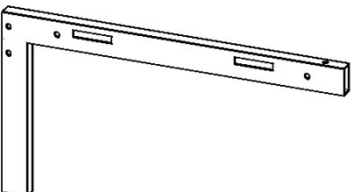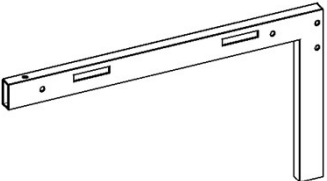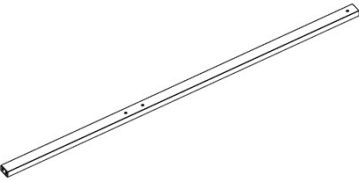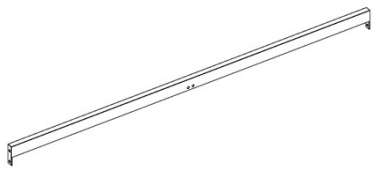


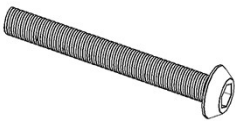




Part List

<p>1</p>  <p>Headboard x1</p>	<p>2</p>  <p>Side Rail x4</p>	<p>3</p>  <p>Panels x2</p>
<p>4</p>  <p>Panels x2</p>	<p>5</p>  <p>Headboard Leg x1</p>	<p>6</p>  <p>Headboard Leg x1</p>
<p>7</p>  <p>Rail x1</p>	<p>8</p>  <p>Metal Slat Frame x1</p>	<p>9</p>  <p>Metal Slat Frame x1</p>
<p>10</p>  <p>Metal Slat Frame x1</p>	<p>11</p>  <p>Metal Slat Frame x1</p>	<p>12</p>  <p>Metal Slat Frame x2</p>
<p>13</p>  <p>Support Frame x1</p>	<p>14</p>  <p>Support Frame x1</p>	<p>15</p>  <p>Rail x1</p>
<p>16</p>  <p>Rail x1</p>	<p>17</p>  <p>Slats x8</p>	<p>18</p>  <p>Support Leg x2</p>

Part List


19		20		21	
	Support Leg x2		Drawers Bottom Net x4		Drawers Side Net x8
22		23			
	Side Net x4		Caster x16		

Hardware List



A		B		C	
	Bolts(M6X10mm) X20		Bolts(M6X20mm) X2		Bolts(M6X30mm) X20
D		E		F	
	Bolts(M6X50mm) X14		Nut(M6) X14		Spanner X1
G		H			
	Allen Key X1		Clasp X44		

Step1

Attention: Do not tighten the screws before completing the entire installation.If you have any difficulty with the installation process, please feel free to contact us.

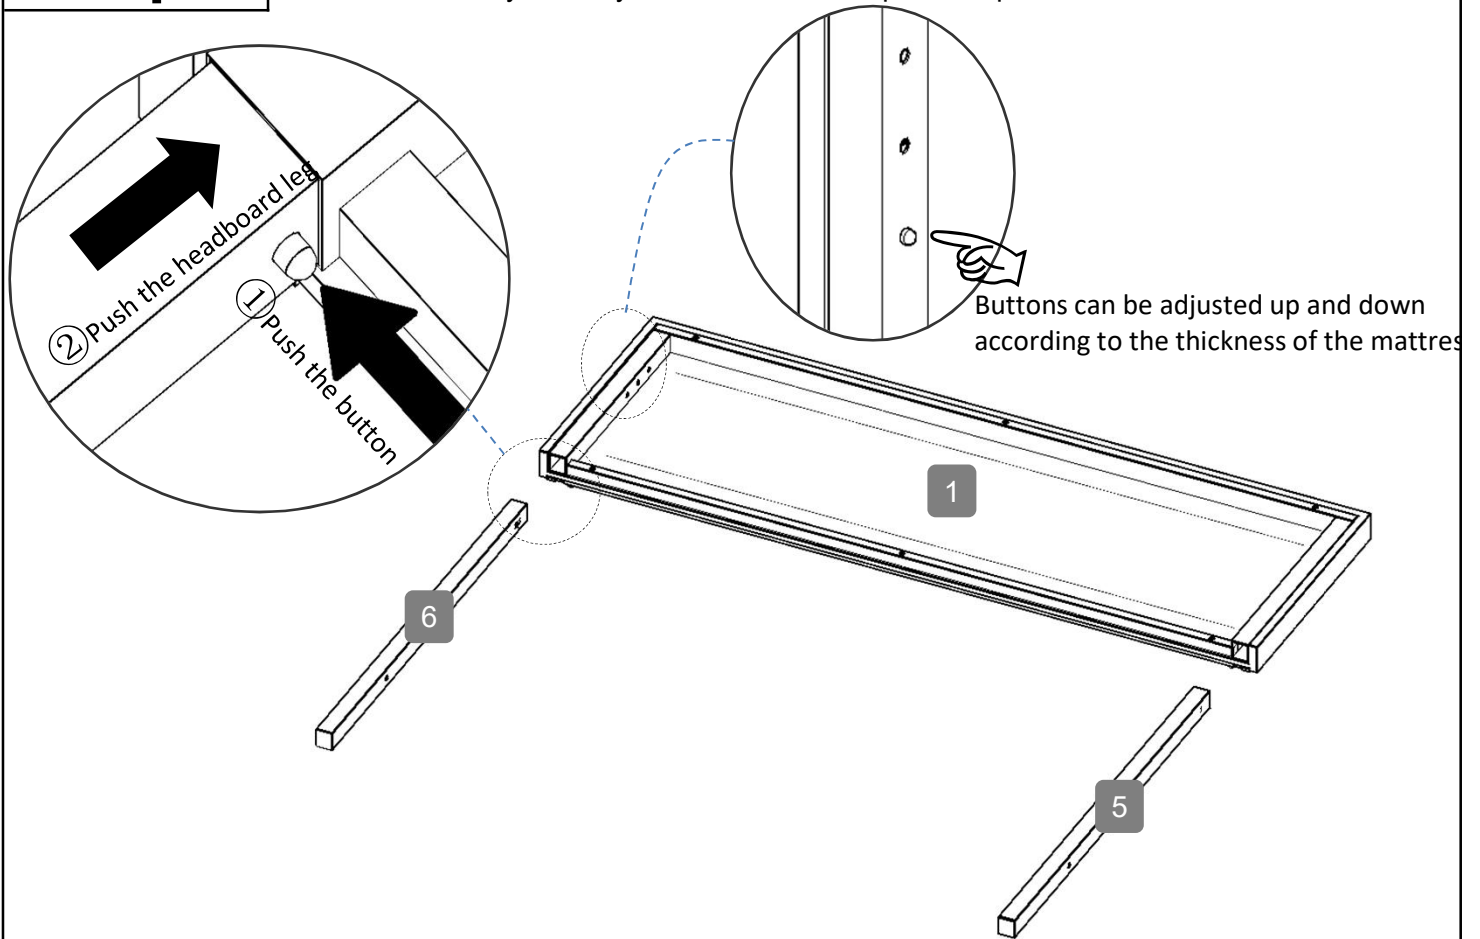

Step2

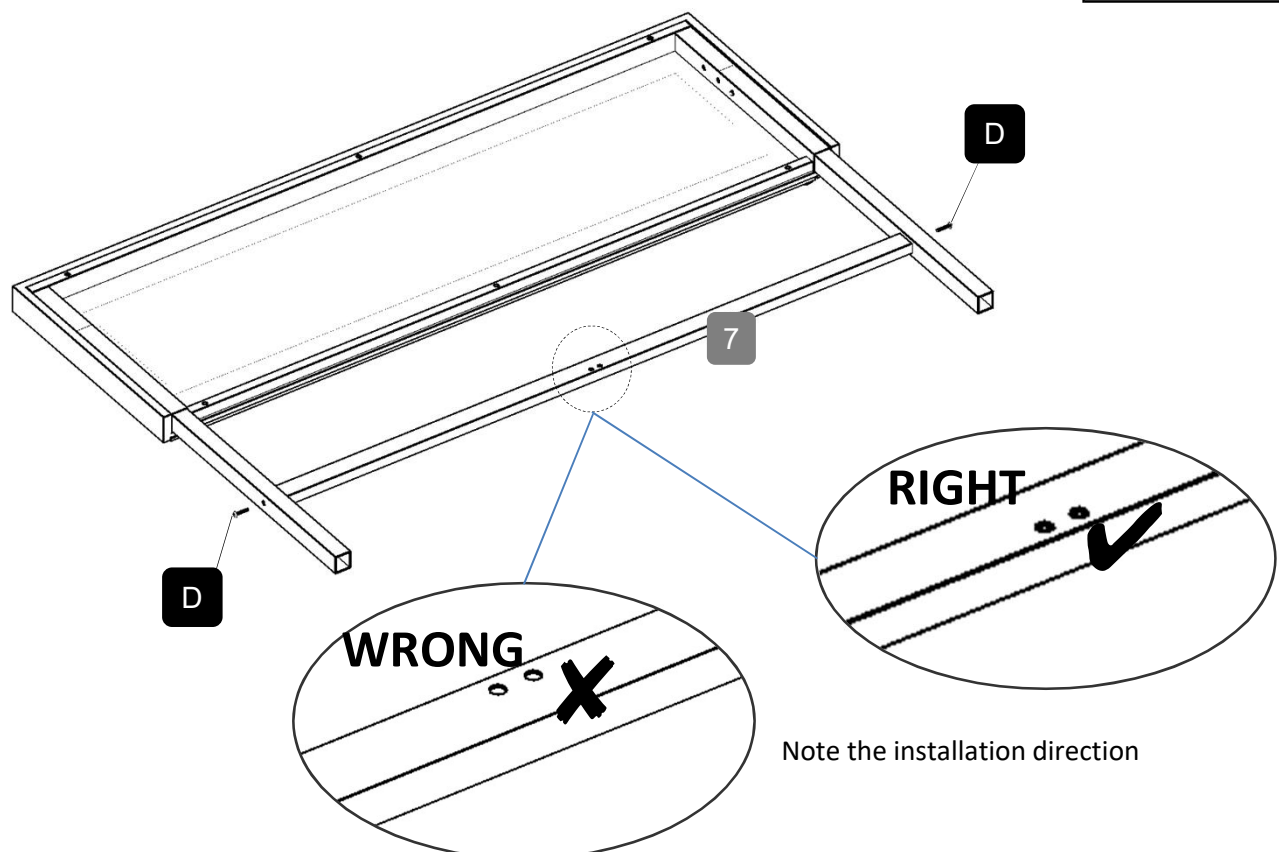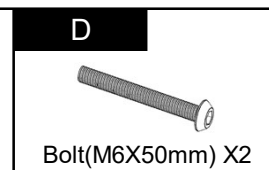

Step3

C



Bolt(M6X30mm) X5

D






Bolt(M6X50mm) X4

E



Nut(M6) X3

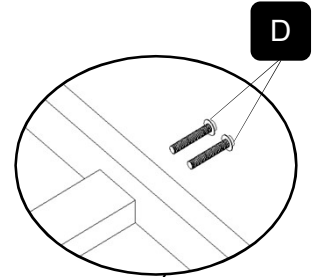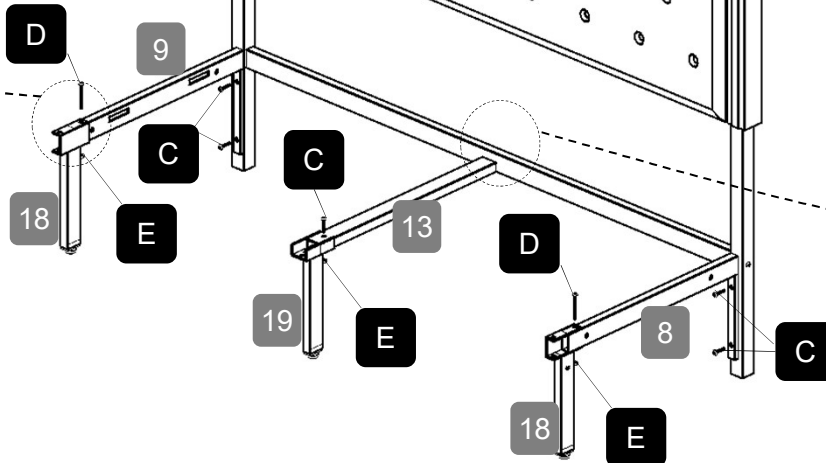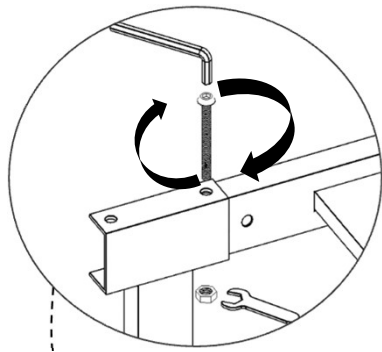

Step4

C



Bolt(M6X30mm) X3

D





Bolt(M6X50mm) X6

E



Nut(M6) X9

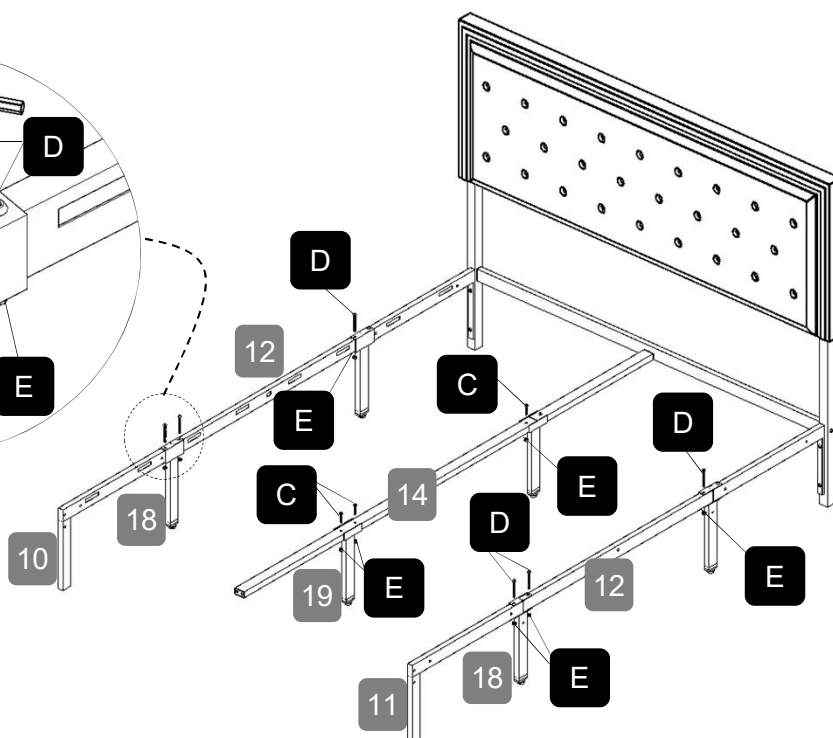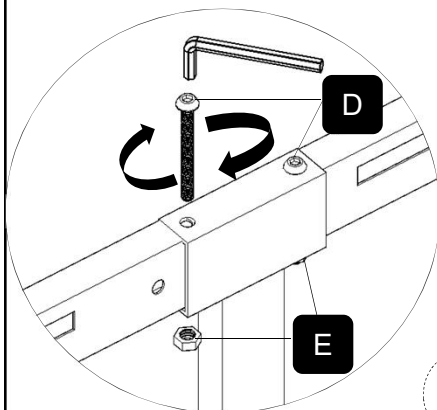


Step5

B



Bolt(M6X20mm) X2

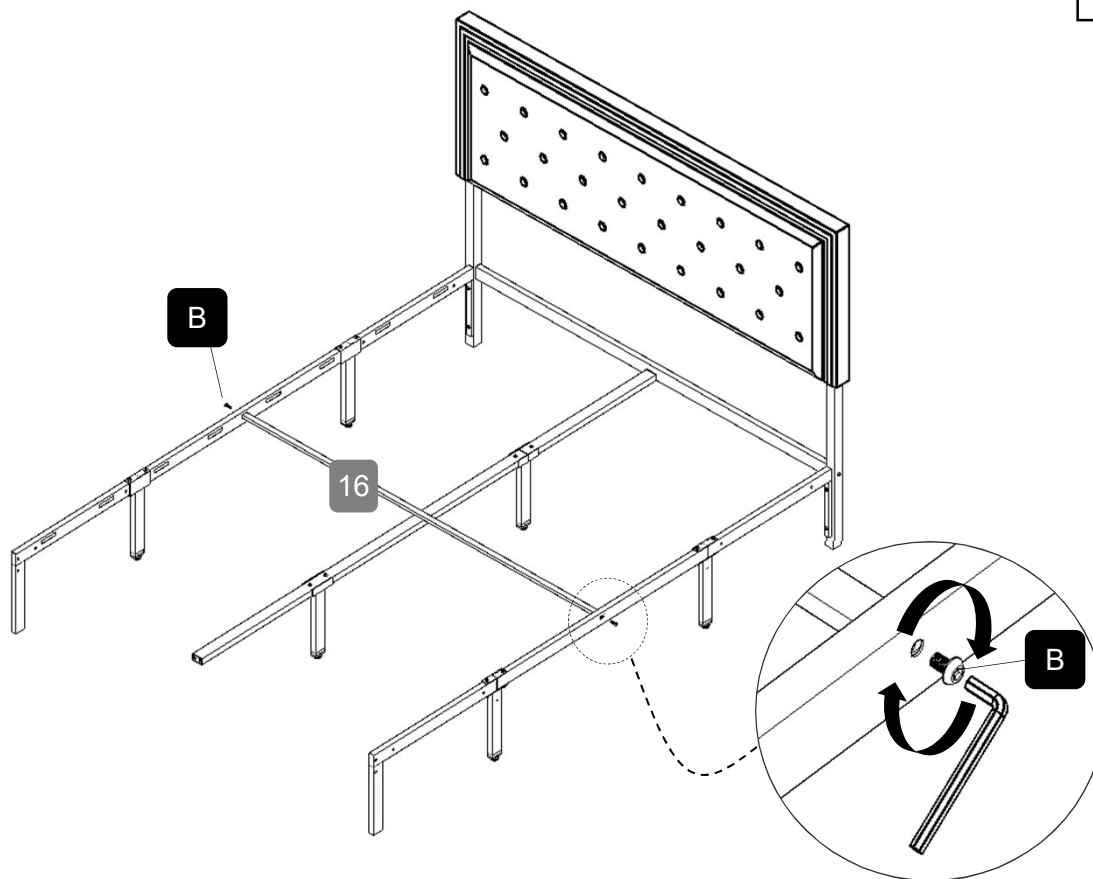

Step6

C



Bolt(M6X30mm) X4

D




Bolt(M6X50mm) X2


E



Nut(M6) X2

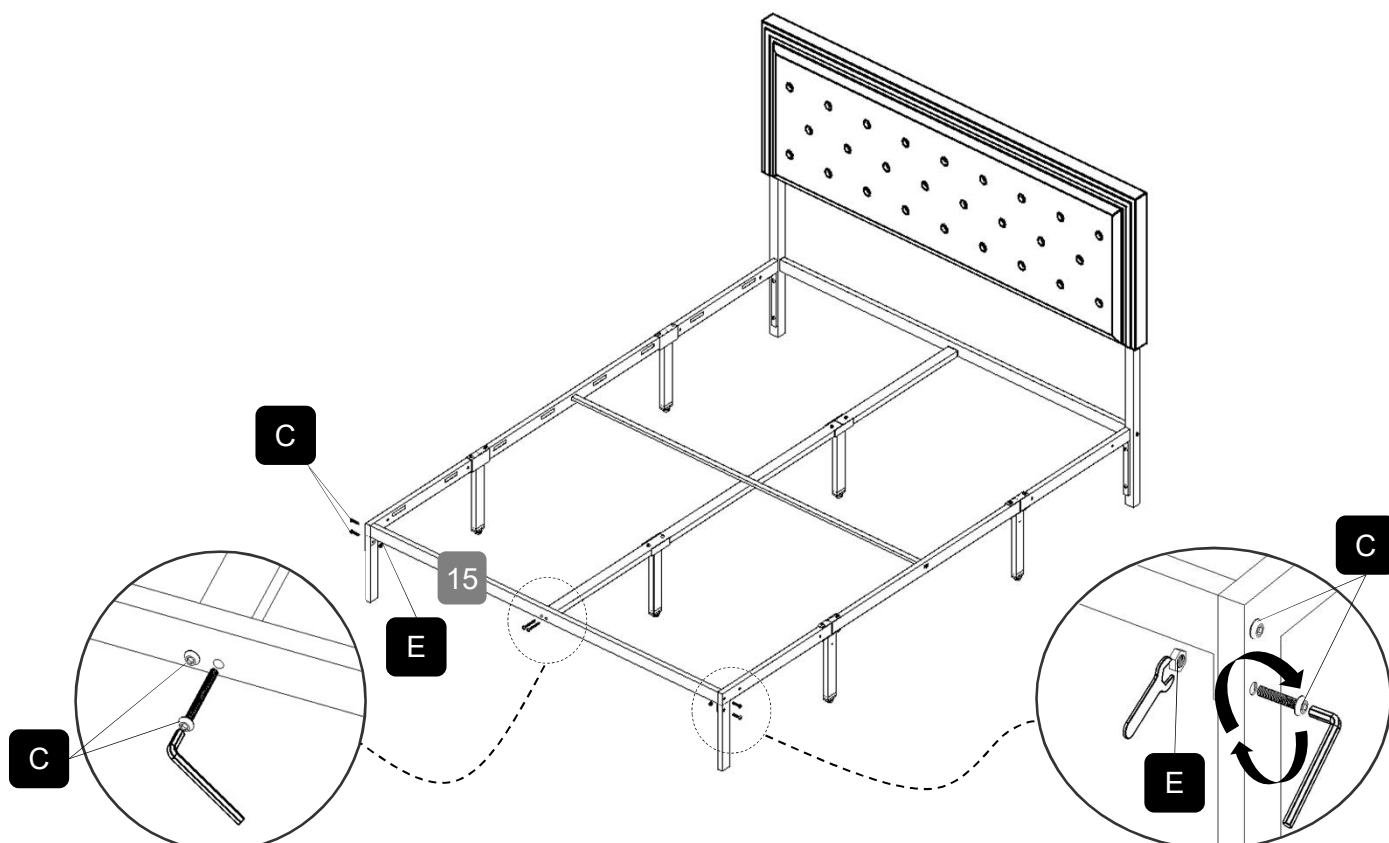

Step7

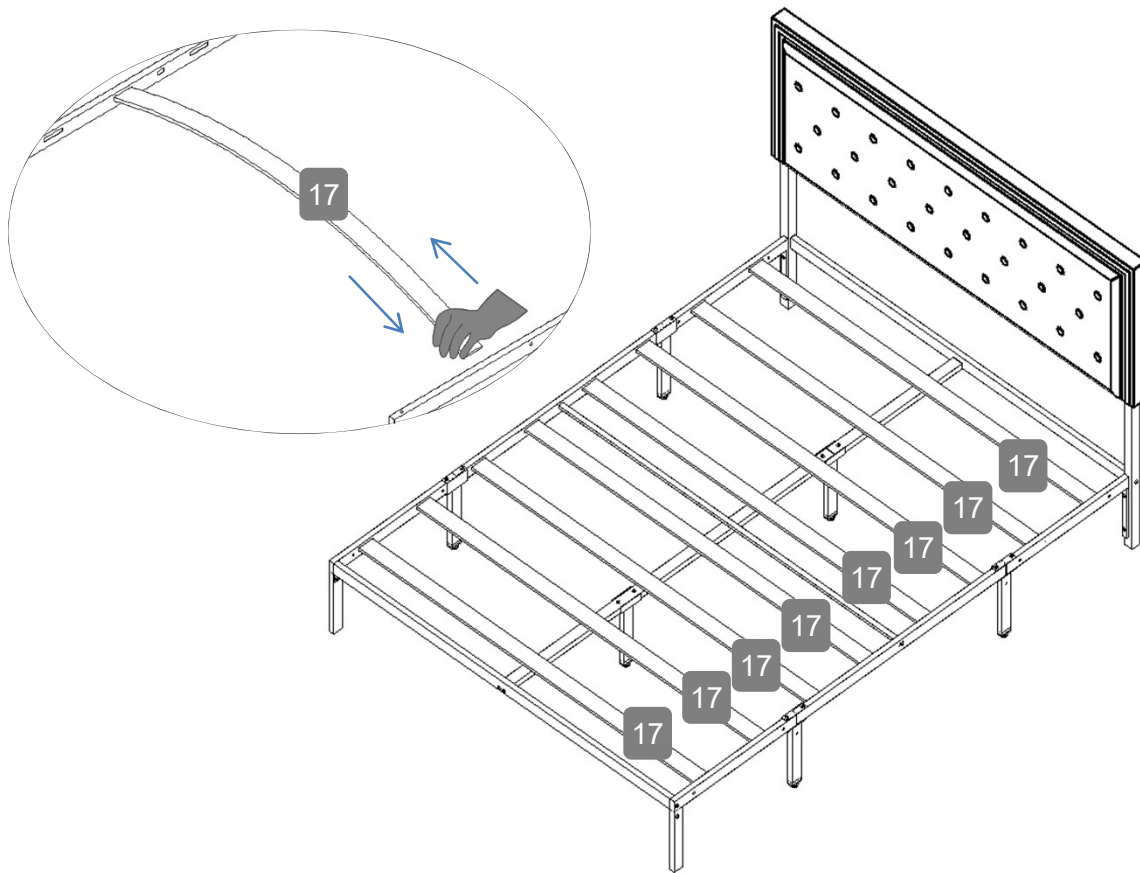


Step8


C




Bolt(M6X30mm) X8

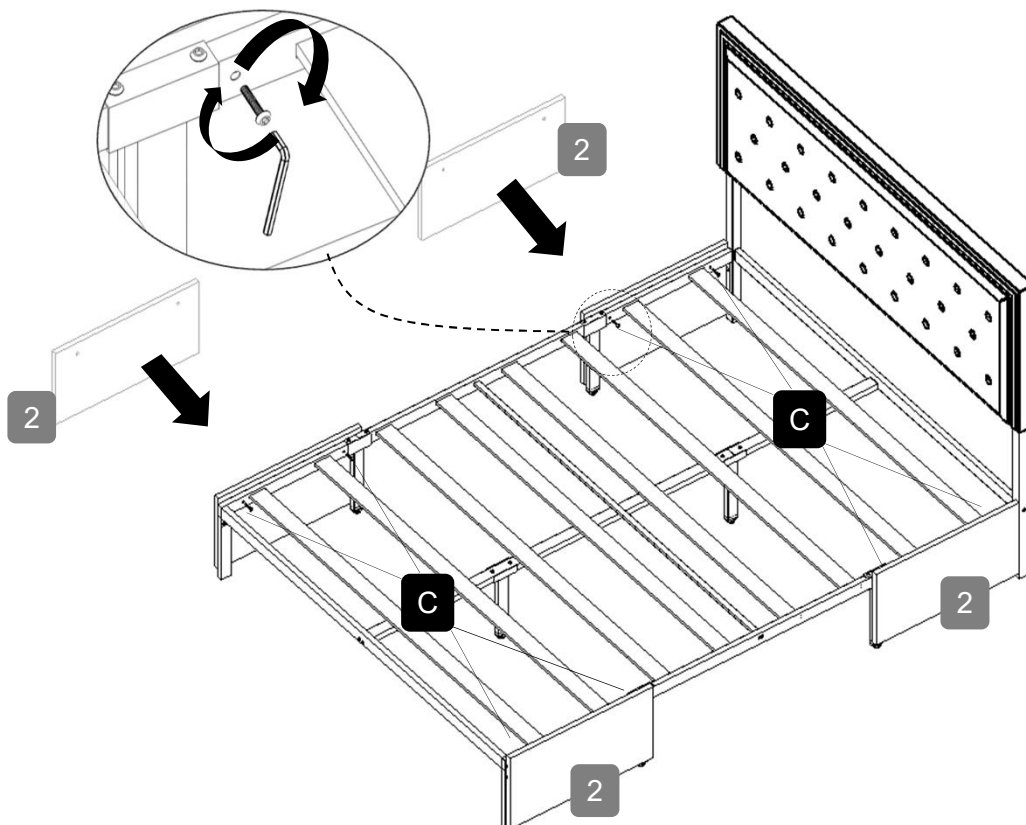


Step9

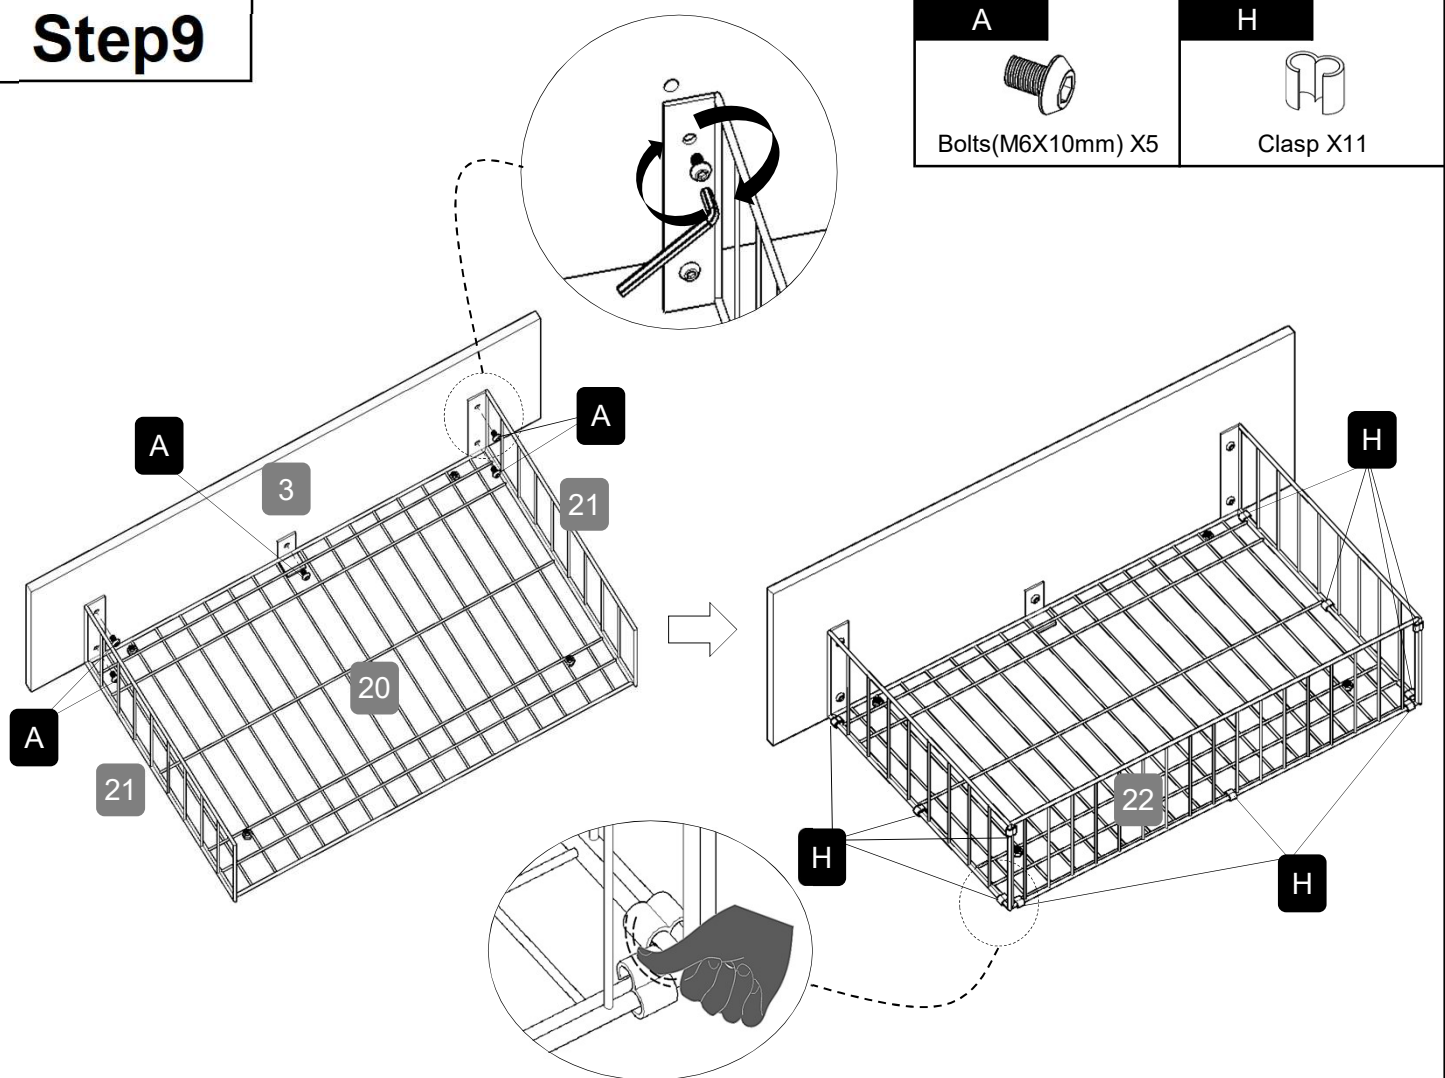




Step10

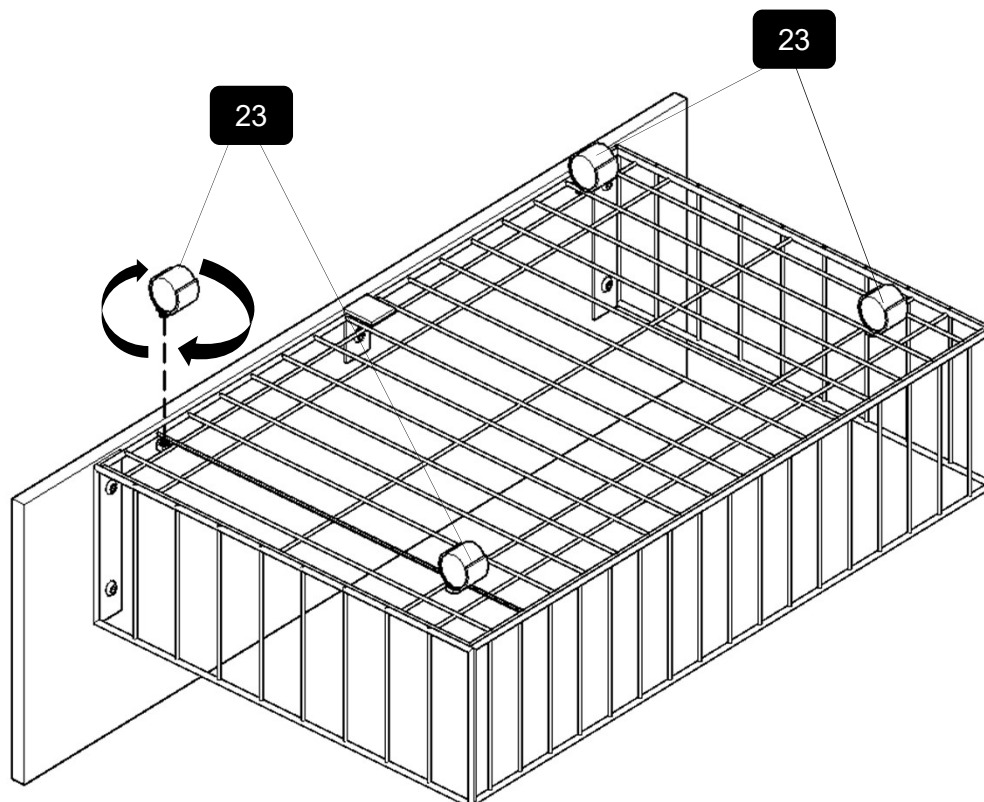

Step10

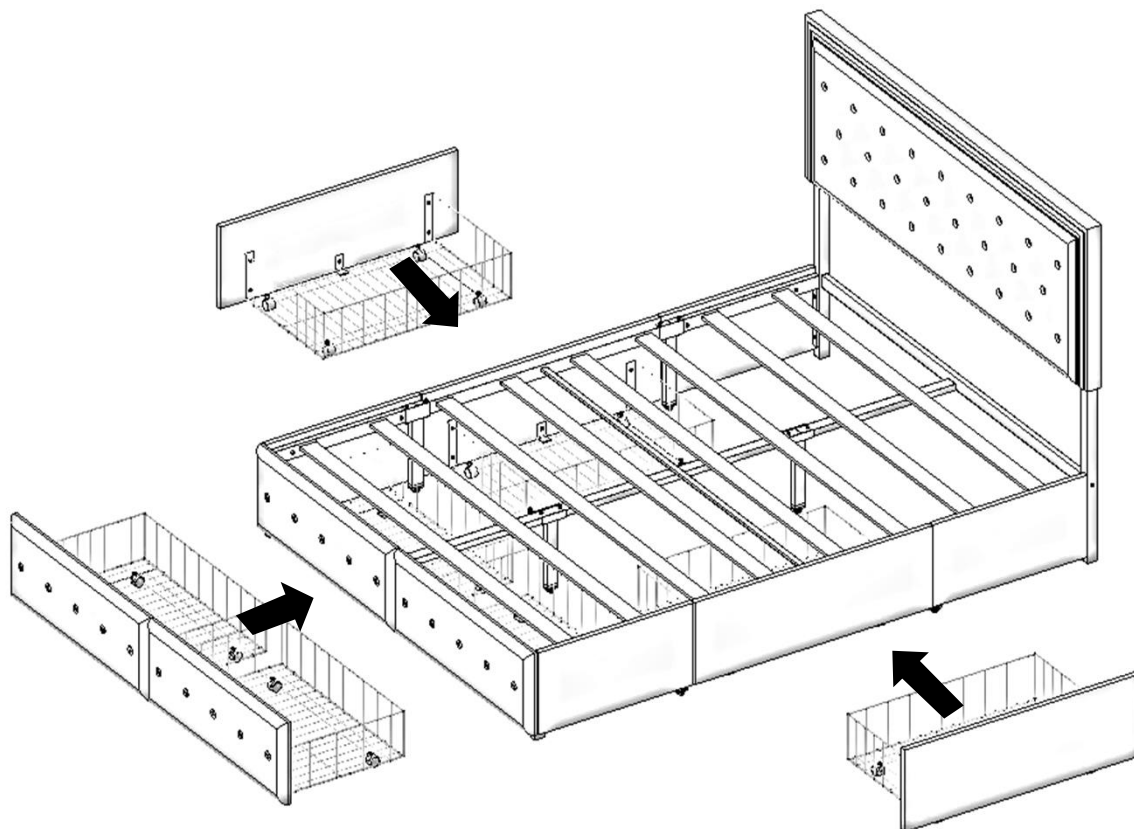

Step11

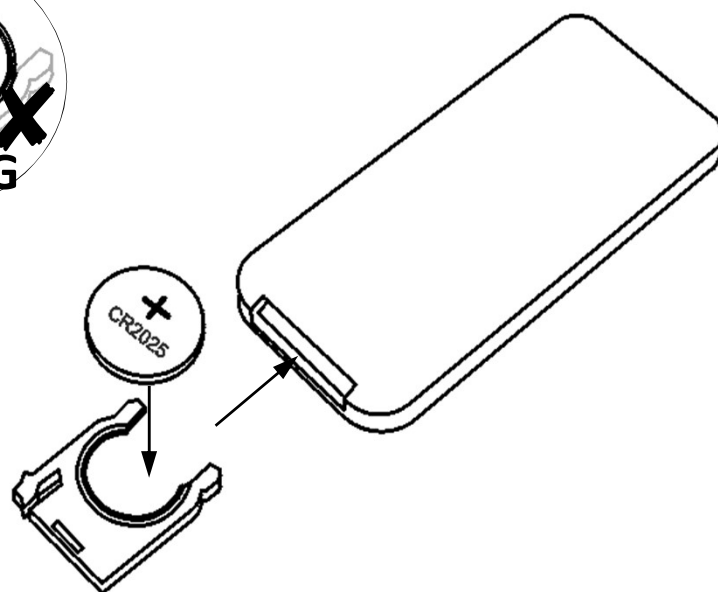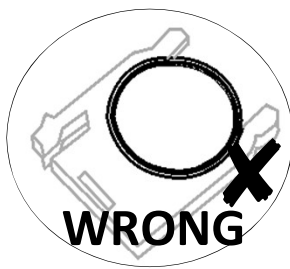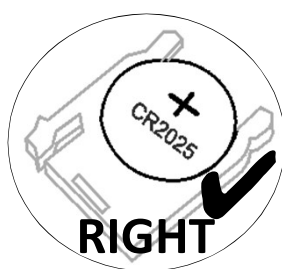

Remote control does not contain batteries, please buy your own a CR2025 button battery installed into the remote control