
## **ASSEMBLY INSTRUCTIONS**


WF 311489/WF 311490

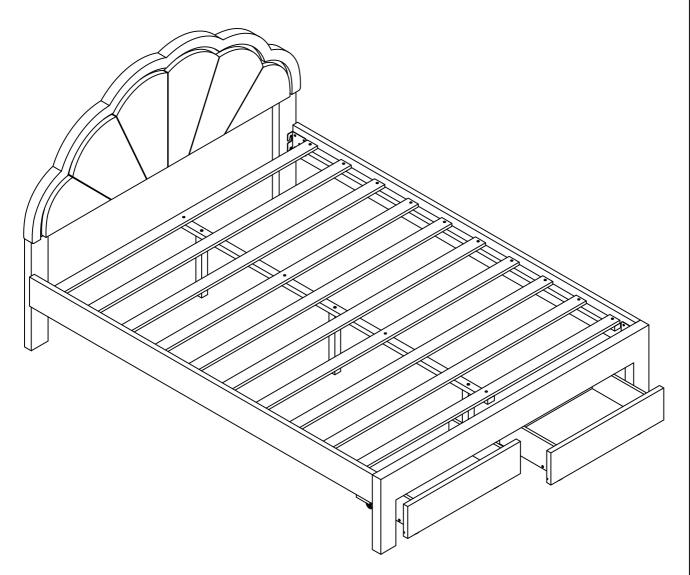

#### **IMPORTANT NOTE**


- \*\*PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- \*\* BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- \*\*DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

MADE IN VIETNAM

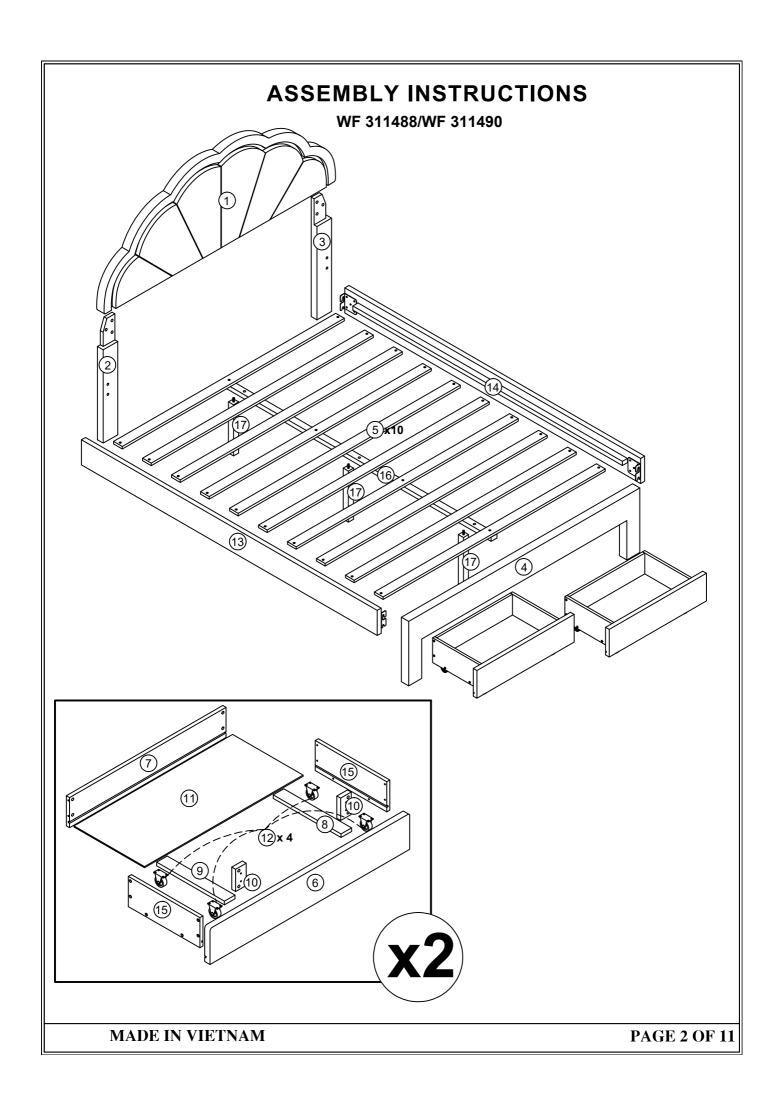

# **ASSEMBLY INSTRUCTION**

WF 311489/WF 311490

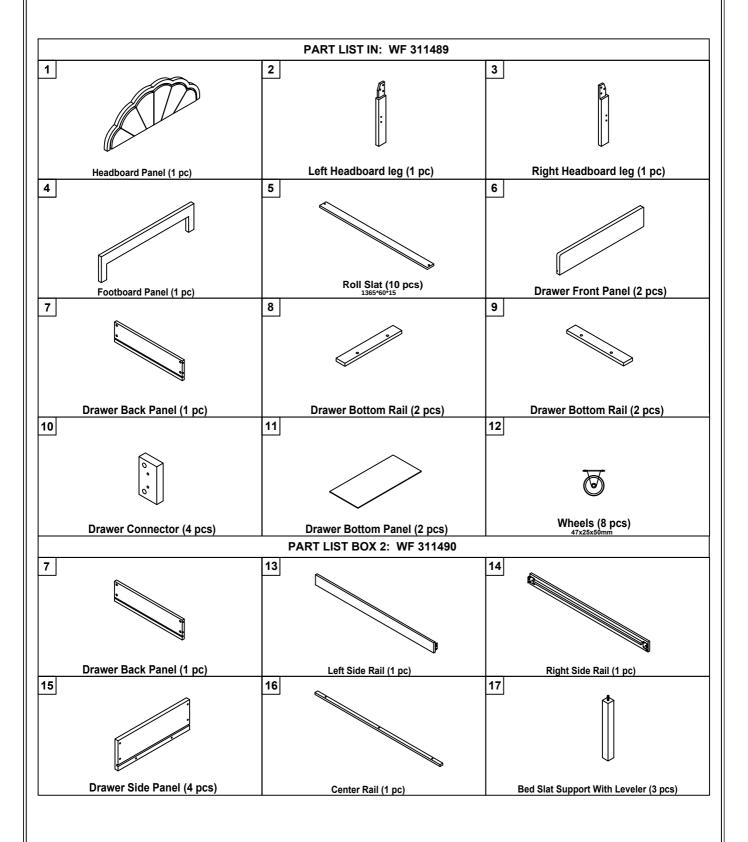


MADE IN VIETNAM


**PAGE 3 OF 11** 


## **ASSEMBLY INSTRUCTIONS**


WF 311489/WF 311490

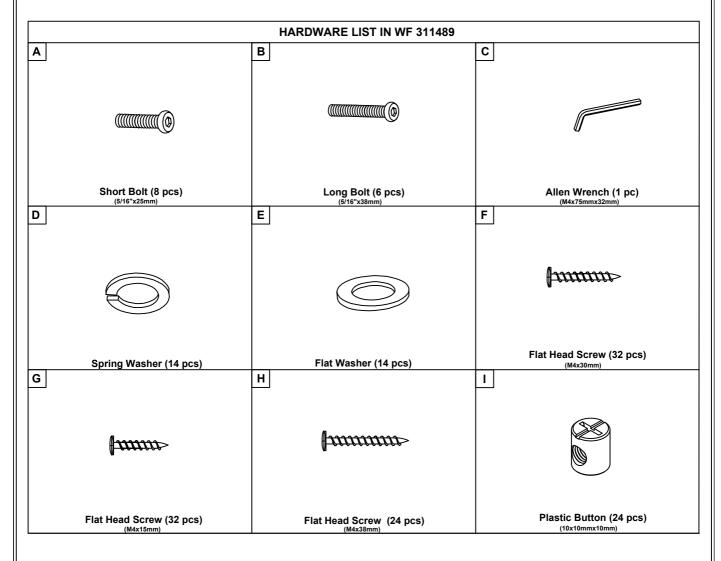


MADE IN VIETNAM PAGE 4 OF 11

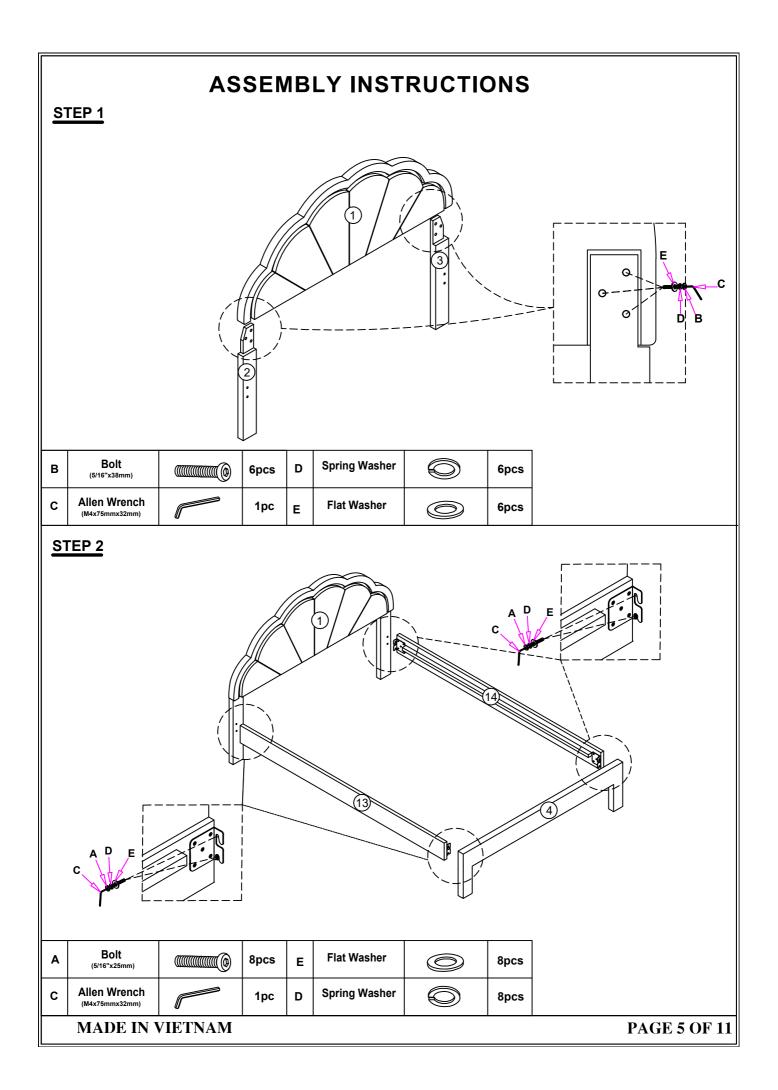

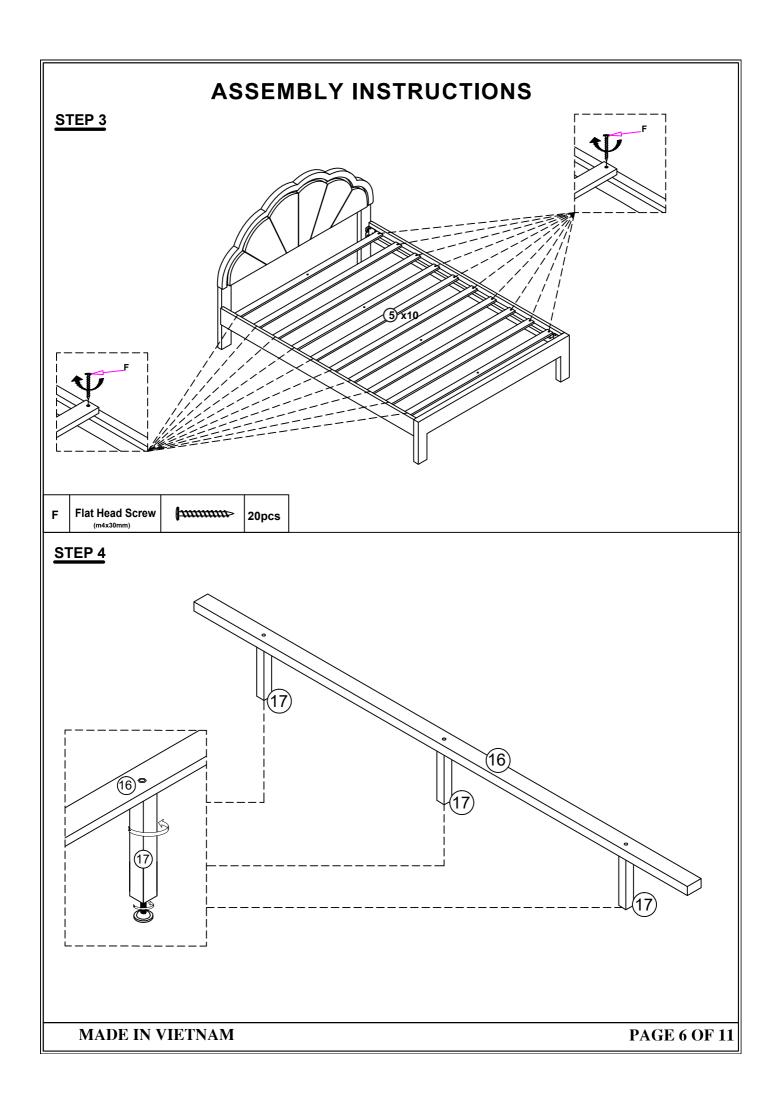


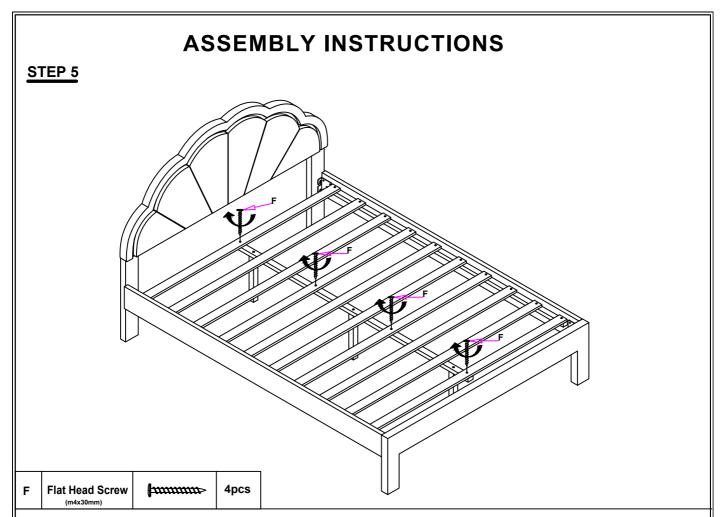


# STEP 6

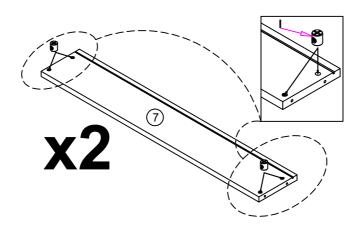


I Plastic Button (10x10mmx10mm) 8pcs

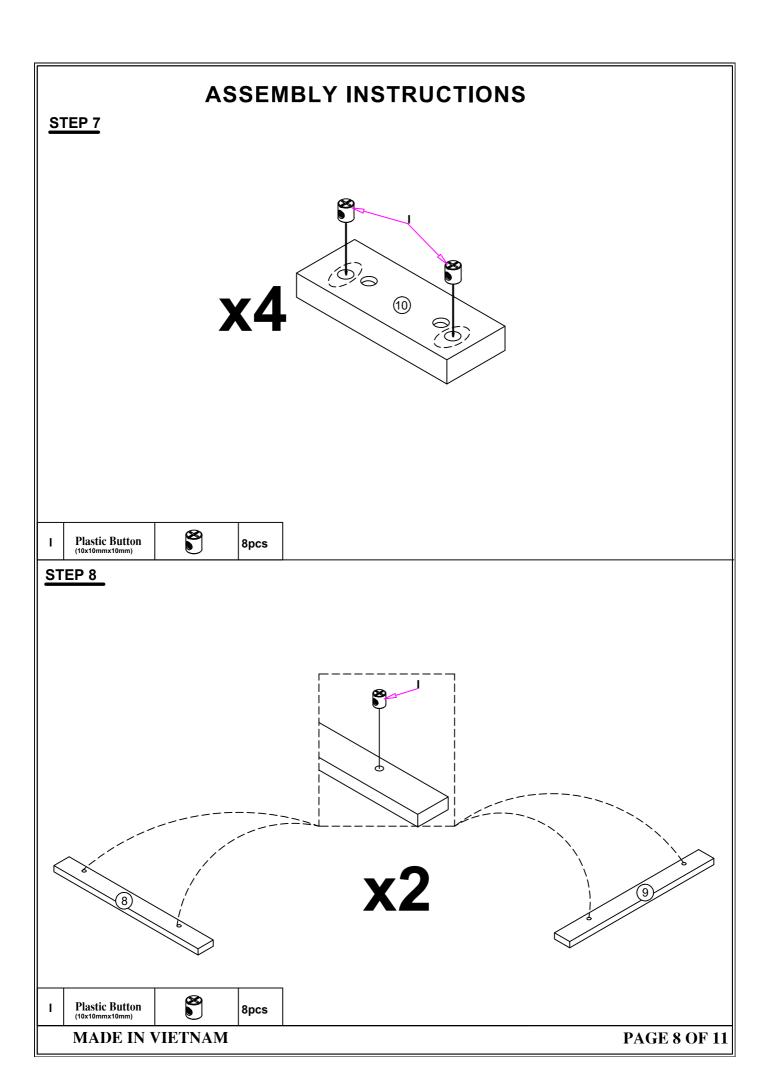

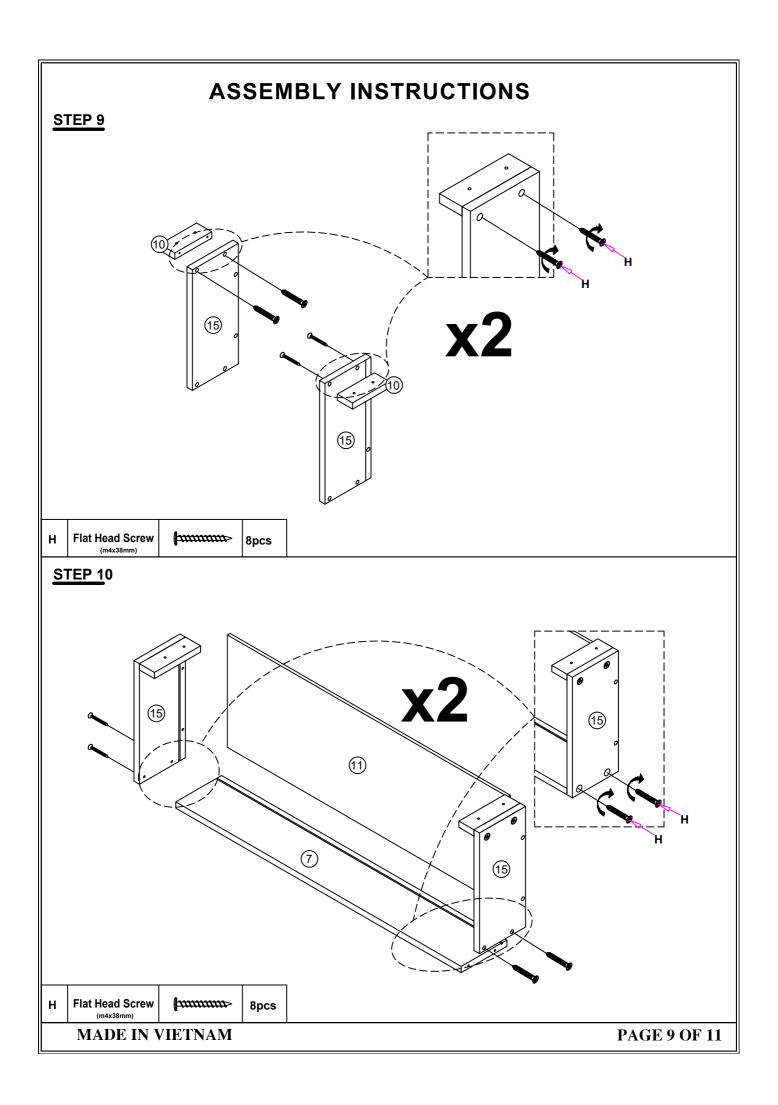



#### **STEP 1**1

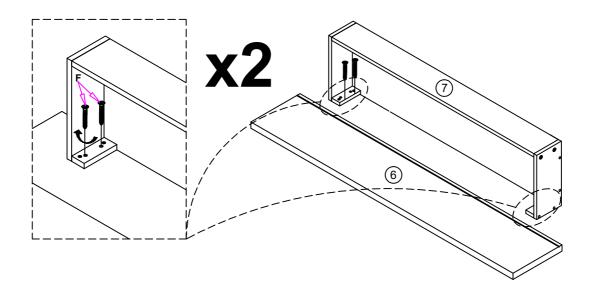


F Flat Head Screw (m4x30mm)

<del>| mmmm></del>

8pcs

## **STEP 12**

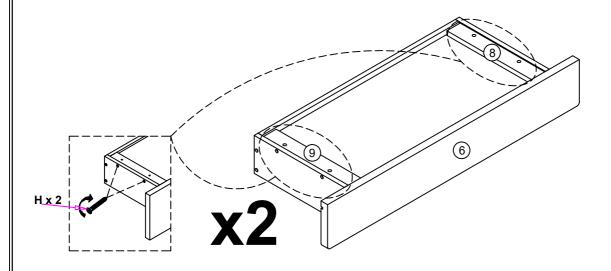


H Flat Head Screw


8pcs

MADE IN VIETNAM

**PAGE 10 OF 11** 

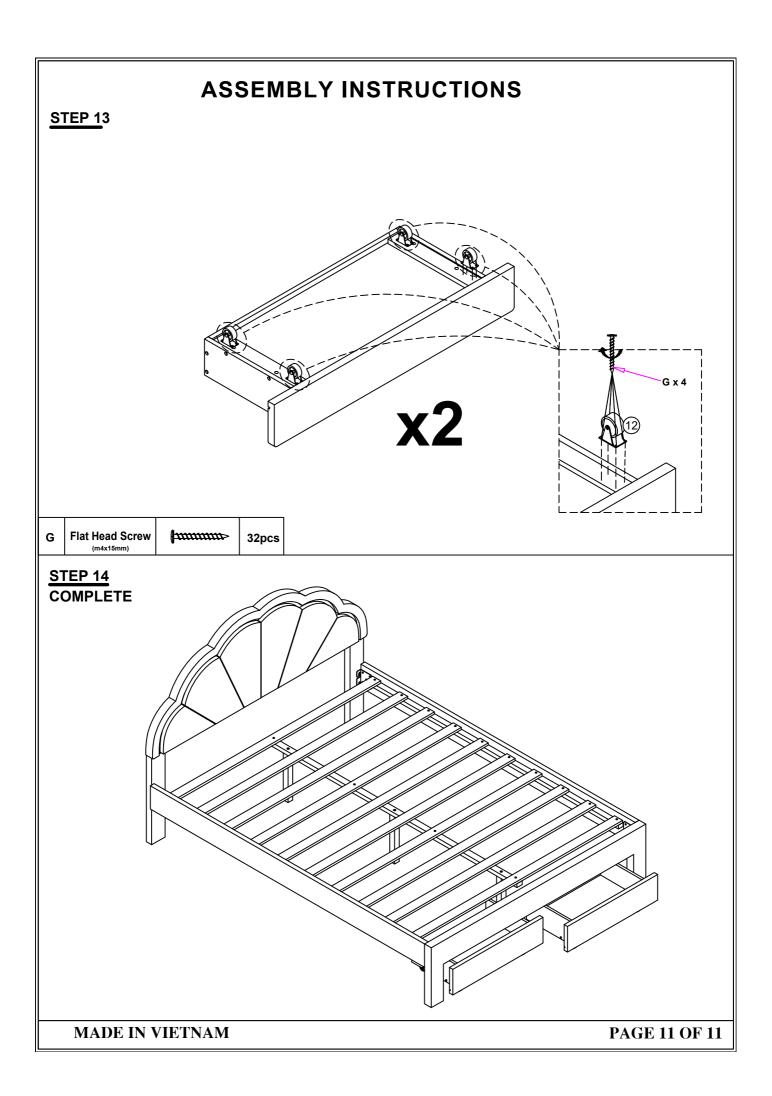

# **ASSEMBLY INSTRUCTIONS**

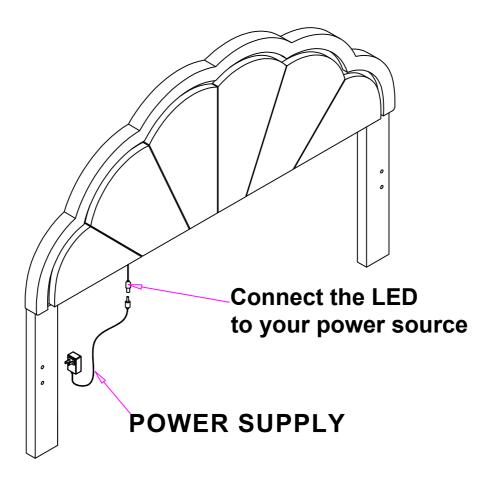

Remote to conntrol the led light on the Headboard

