


BP06P2

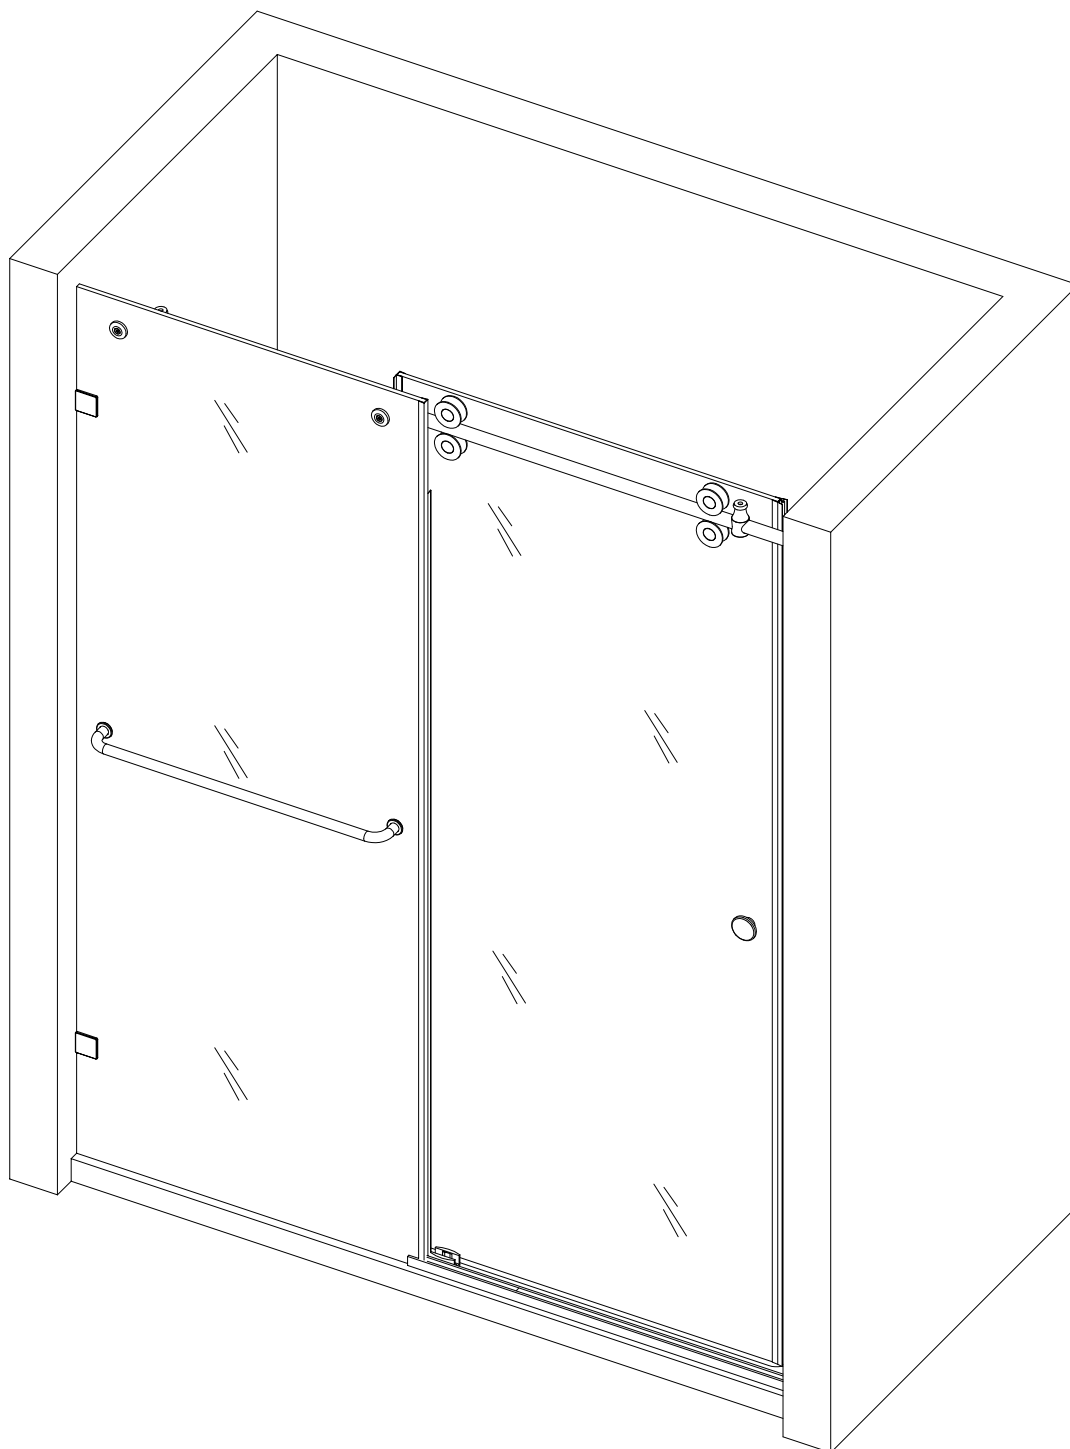

20.06.29 A01

◆ General information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.











Note: Safety glass can not be re-worked.

- Please read these instructions carefully before start of installation.
- Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.
- Note: this product is heavy and required two persons install.


Aftercare instructions

- After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.
- Cleaners of gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.
- Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.
- Please keep these instructions for aftercare and customer service details.





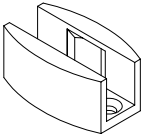
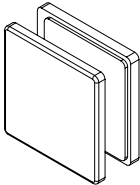
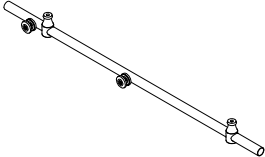


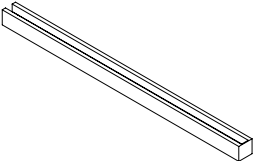
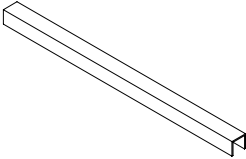
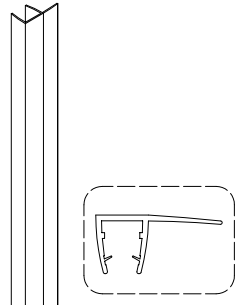
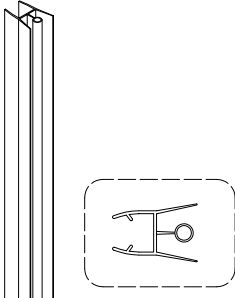




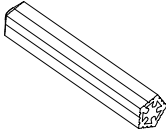

TOOLS REQUIRED

DESCRIPTION	PART IMAGE	DESCRIPTION	PART IMAGE
Tape measure		Drill	
Spirit level		Hammer	
Pencil		Cross head Screwdriver	
Ø6mm Drill bit		Inner hexagon Spanner	
Knife		Silicone Sealant	

ASSEMBLY INSTRUCTIONS-DRAWING

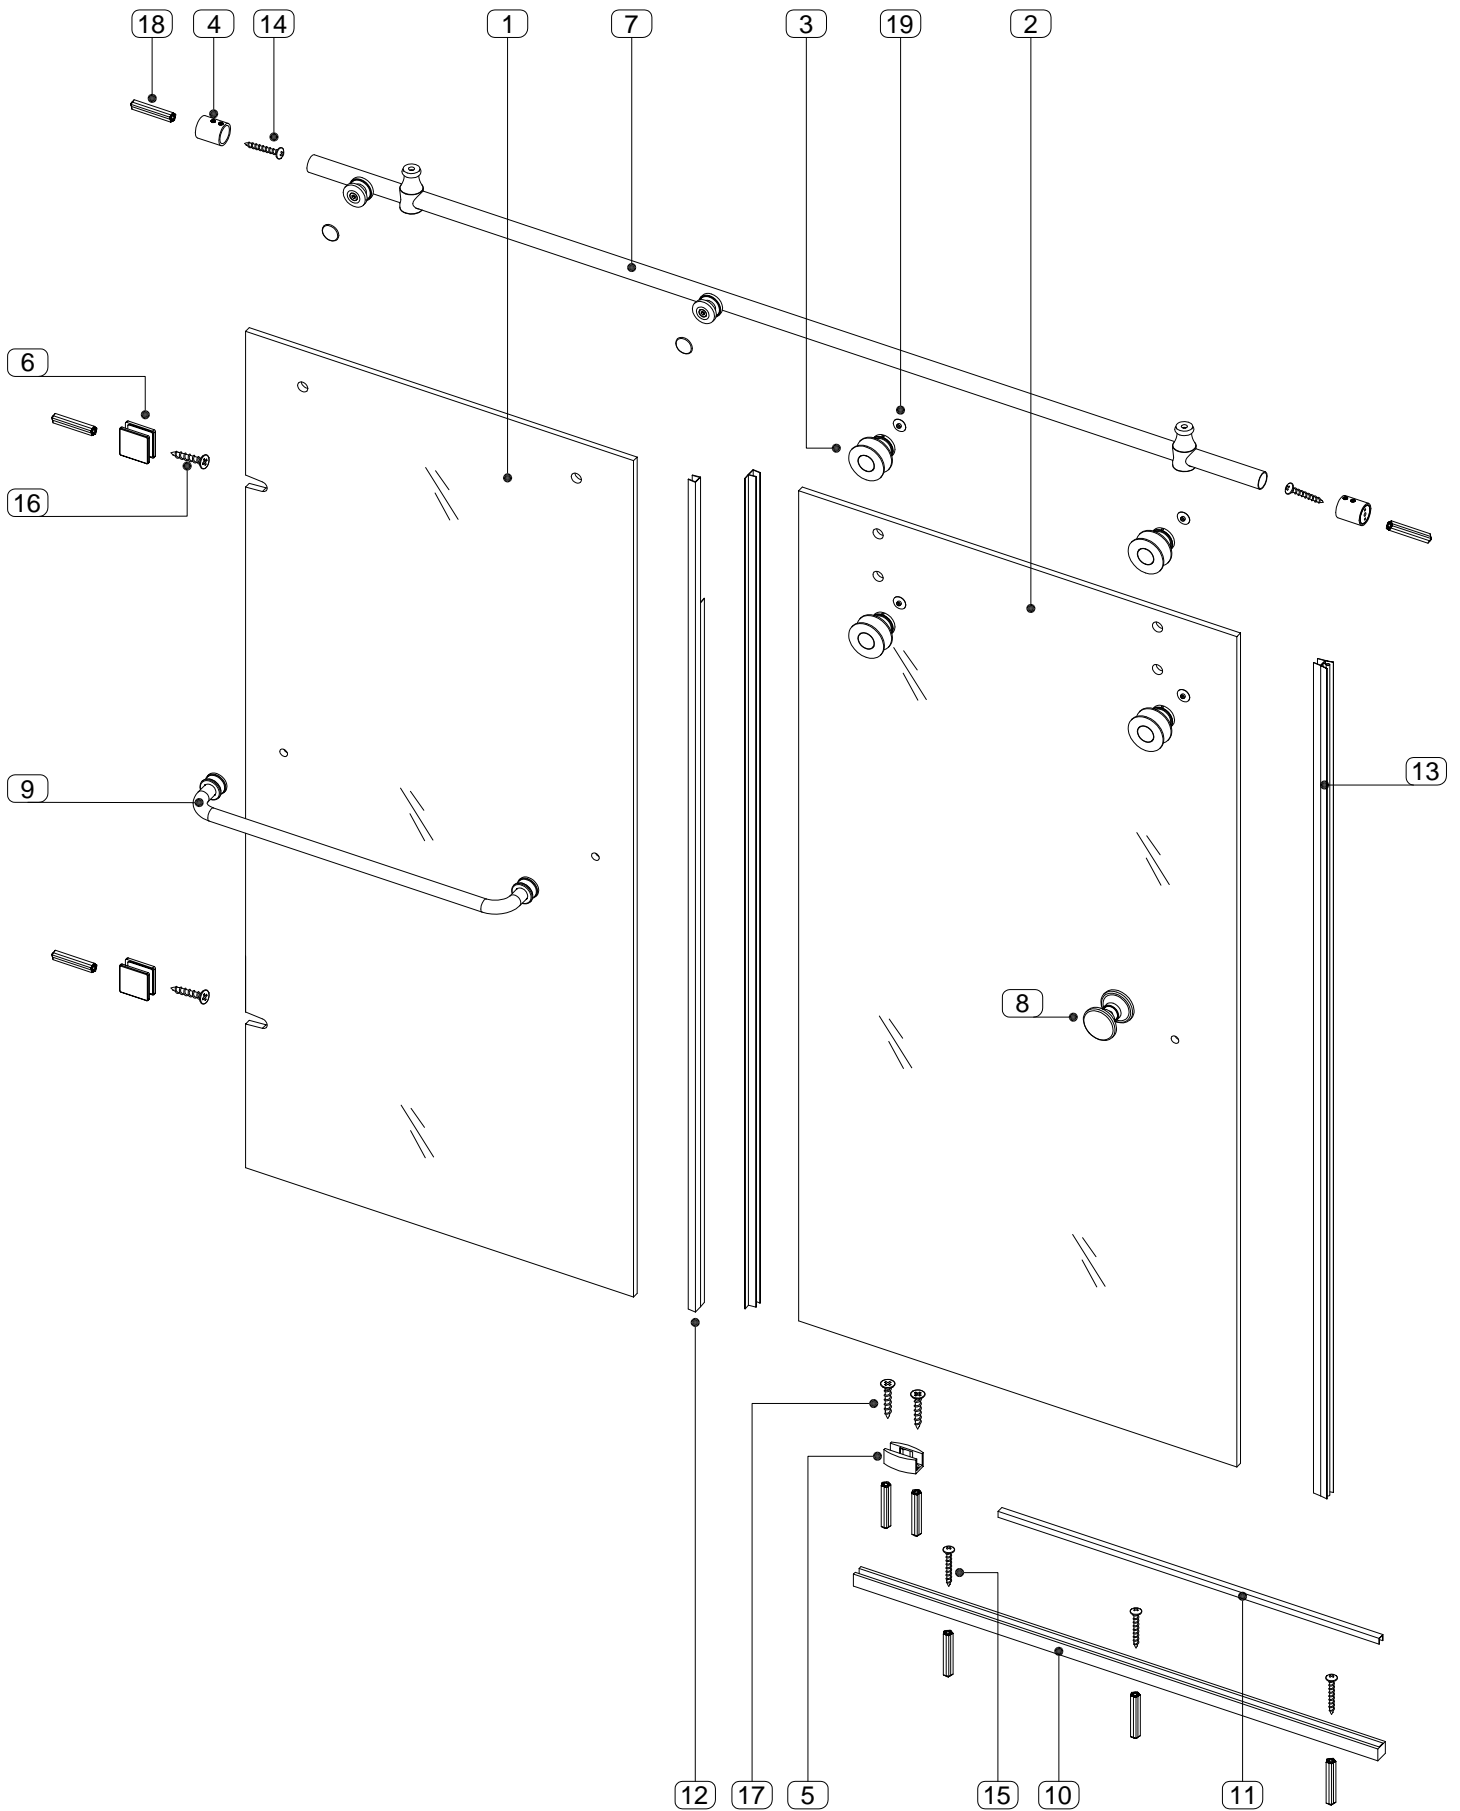


Parts list



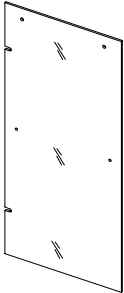
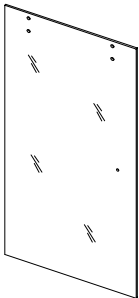
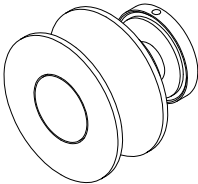
NO: 1 1PC 	NO: 2 1PC 	NO: 3 4PC 	NO: 4 2PC 	NO: .5 1PC 
NO: 6 2PC 	NO: 7 1PC 	NO: 8 1PC 	NO: 9 1PC 	NO: 10 1PC 
NO: 11 1PC 	NO: 12 2PC 	NO: 13 1PC 	NO: 14 2PC Screw ST3.9x30 	NO: 15 3PC Screw ST3.9x25 
NO: 16 2PC Screw ST3.9x30 	NO: 17 2PC Screw ST3.9x25 	NO: 18 9PC Wall plug Ø6 	NO: 19 6PC M8 	

ASSEMBLY INSTRUCTIONS


Step 1

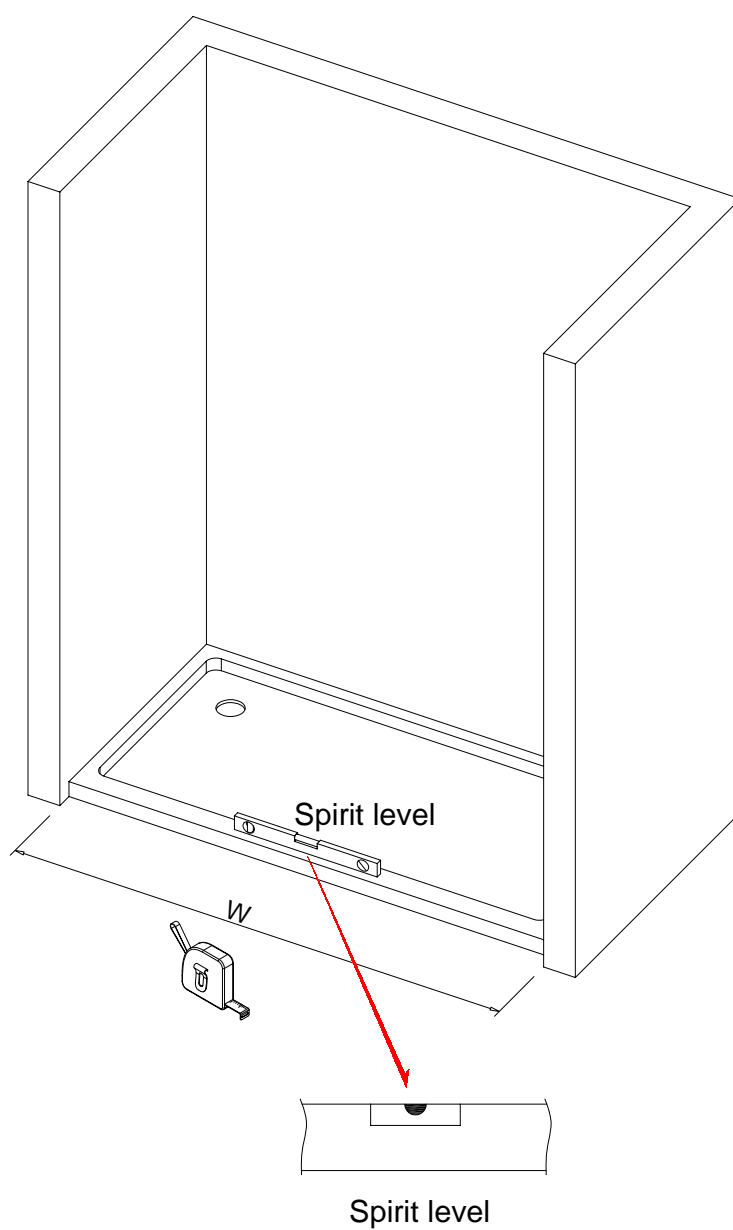






Step 2

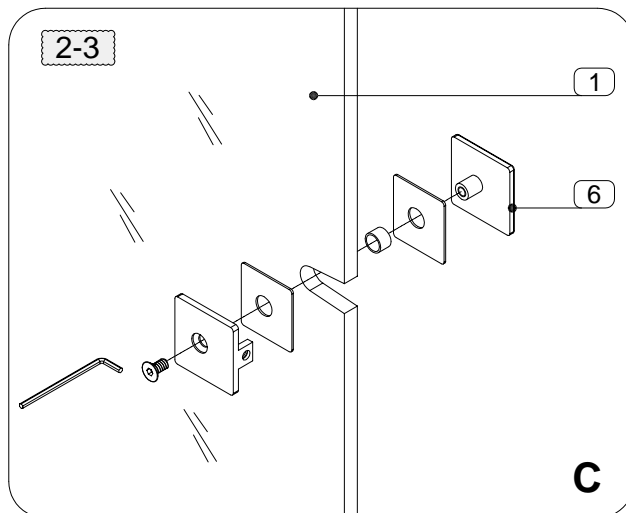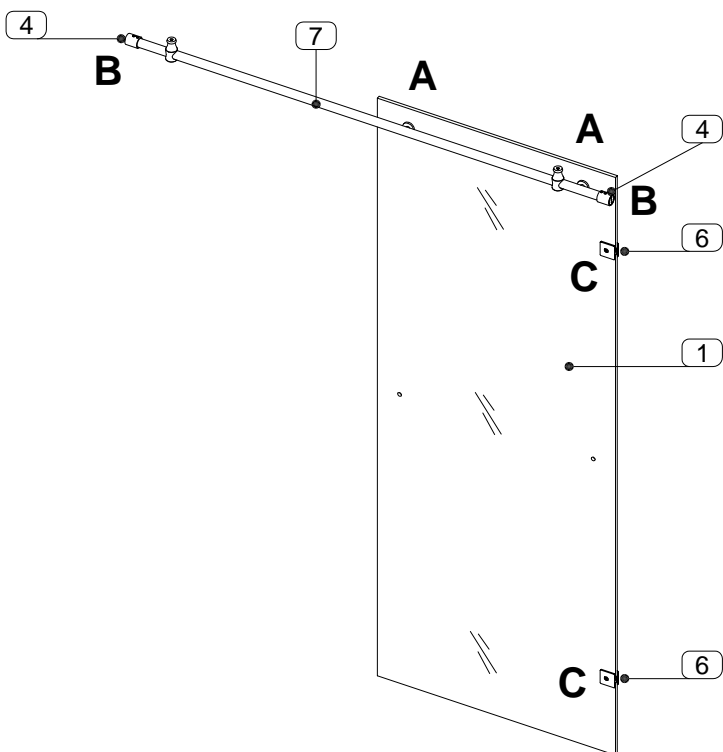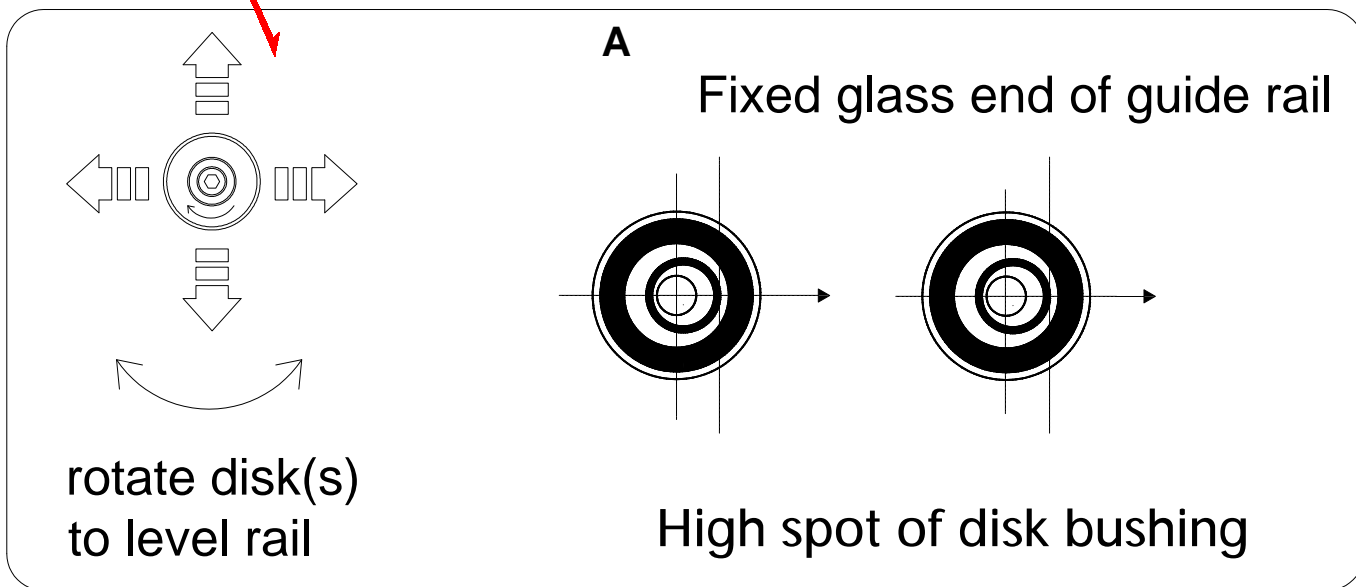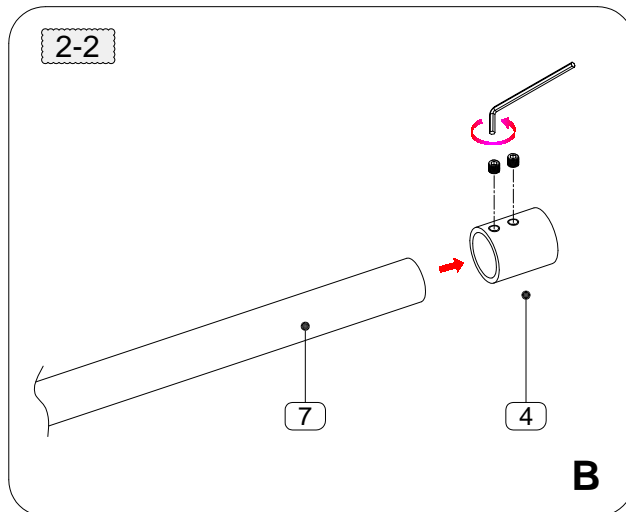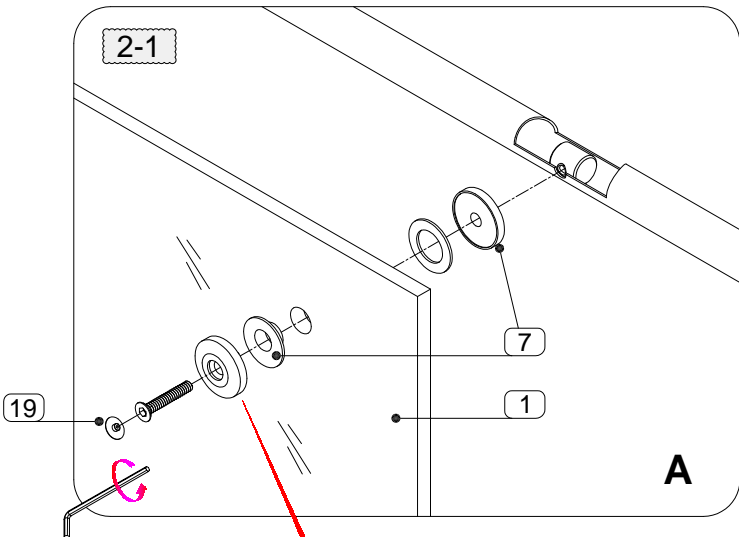









Step 3

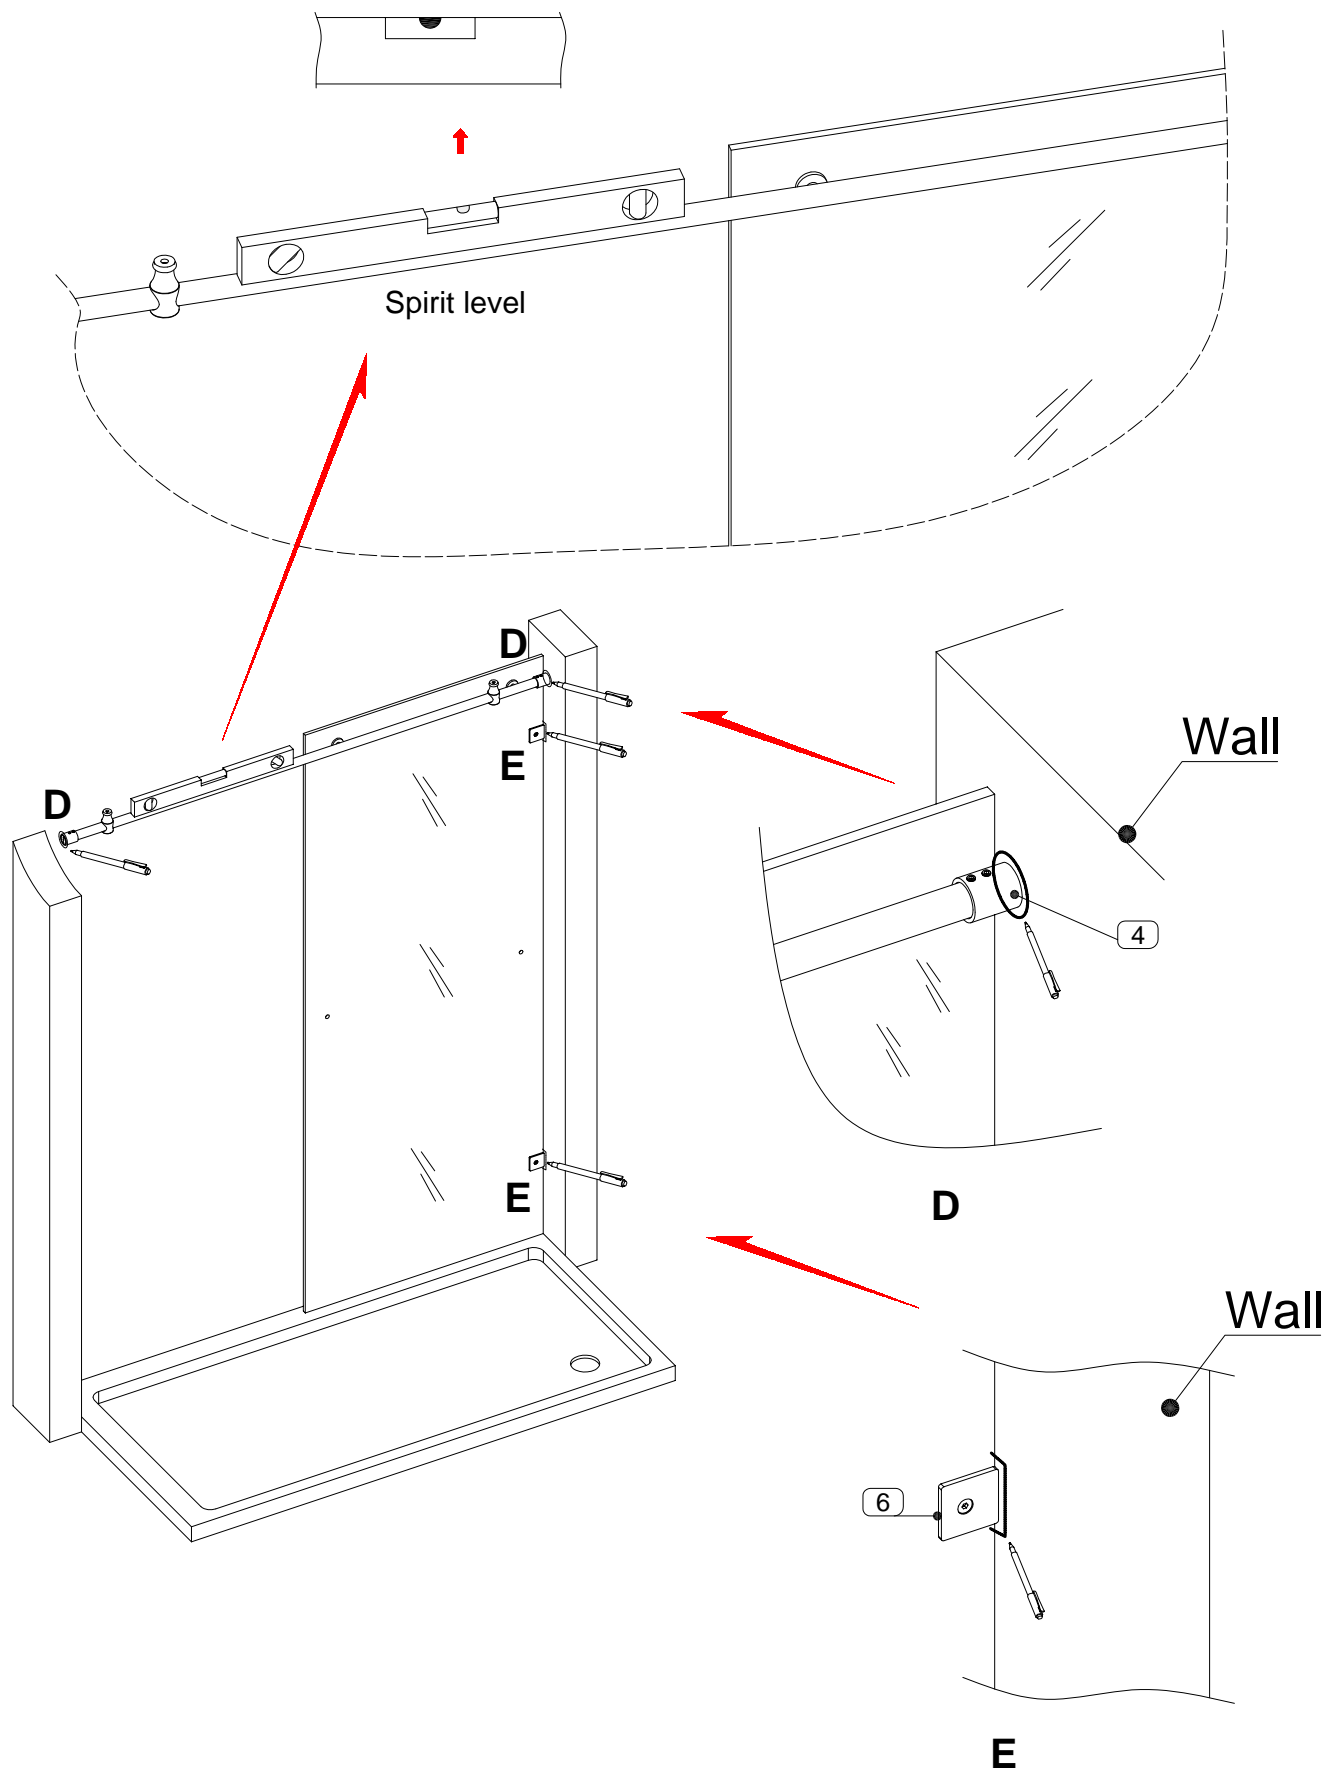


Step 4

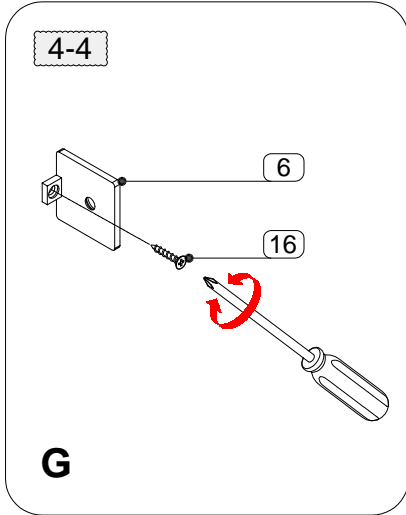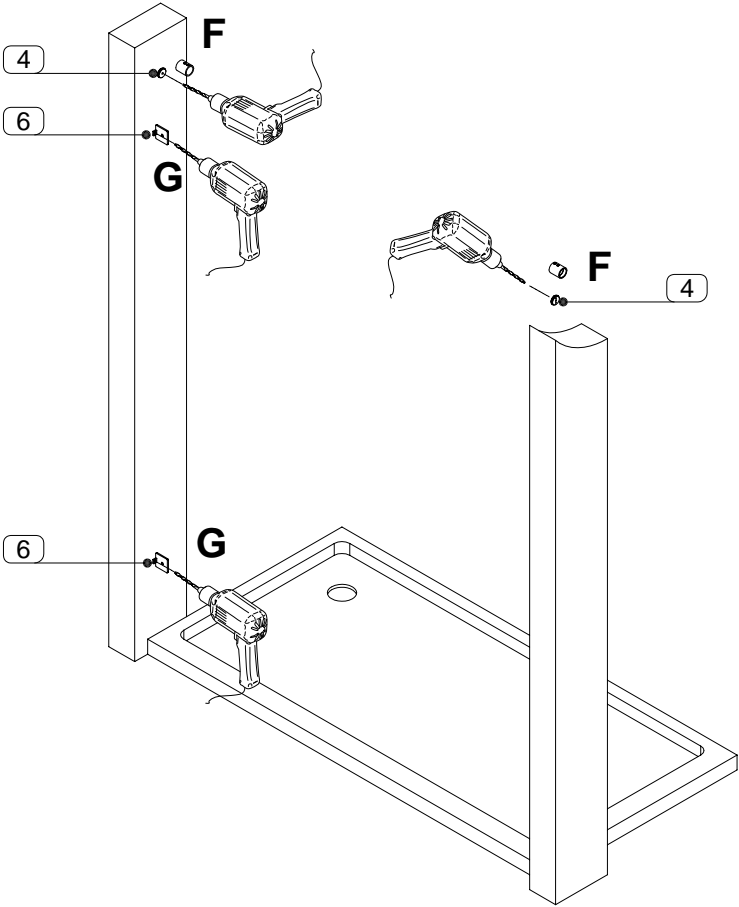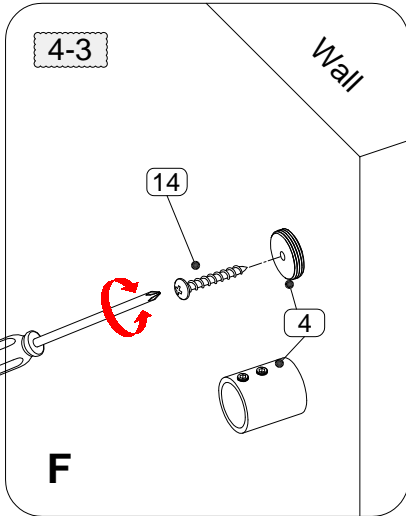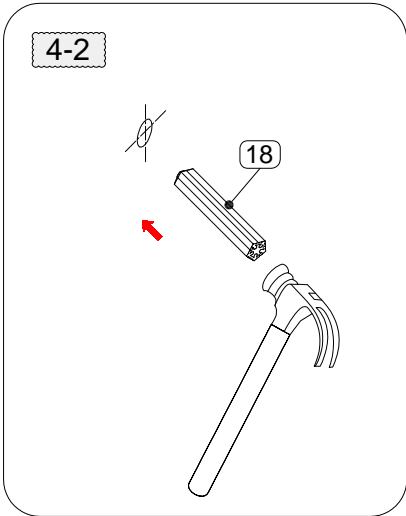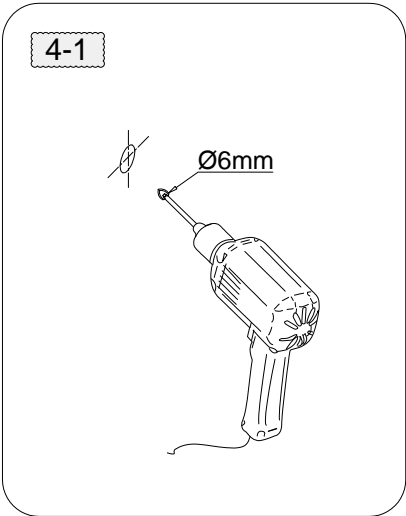




Step 5

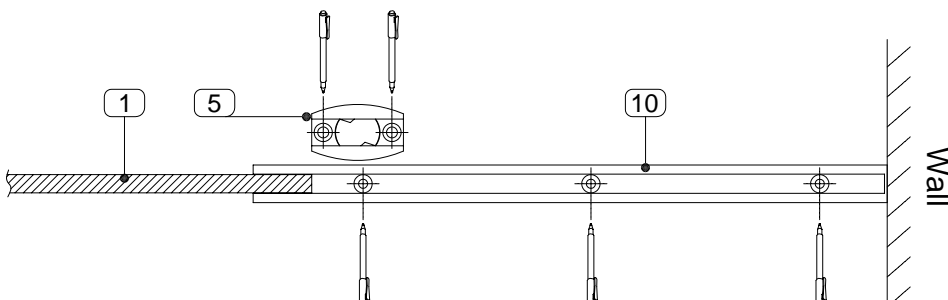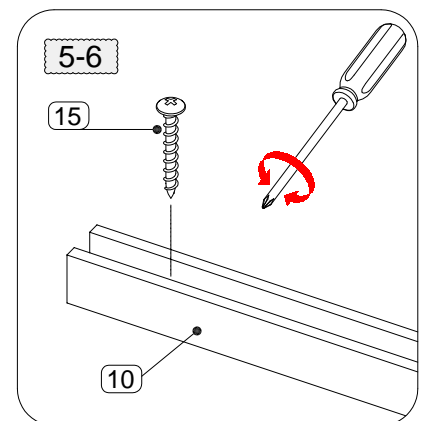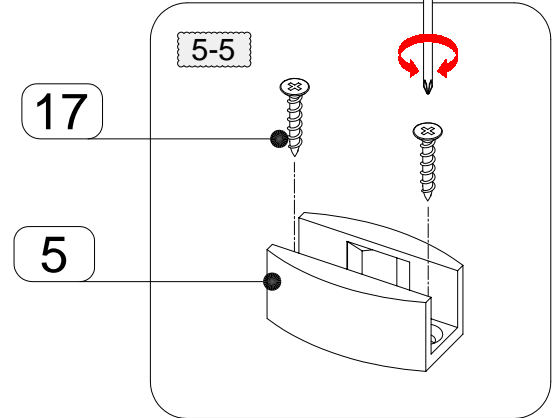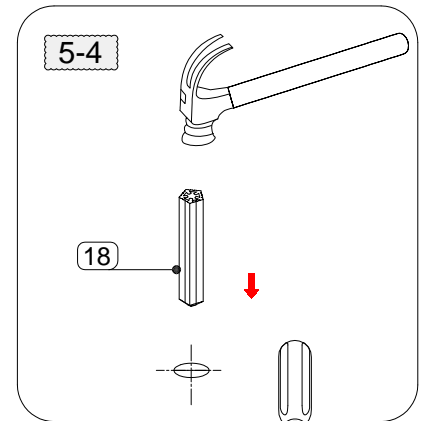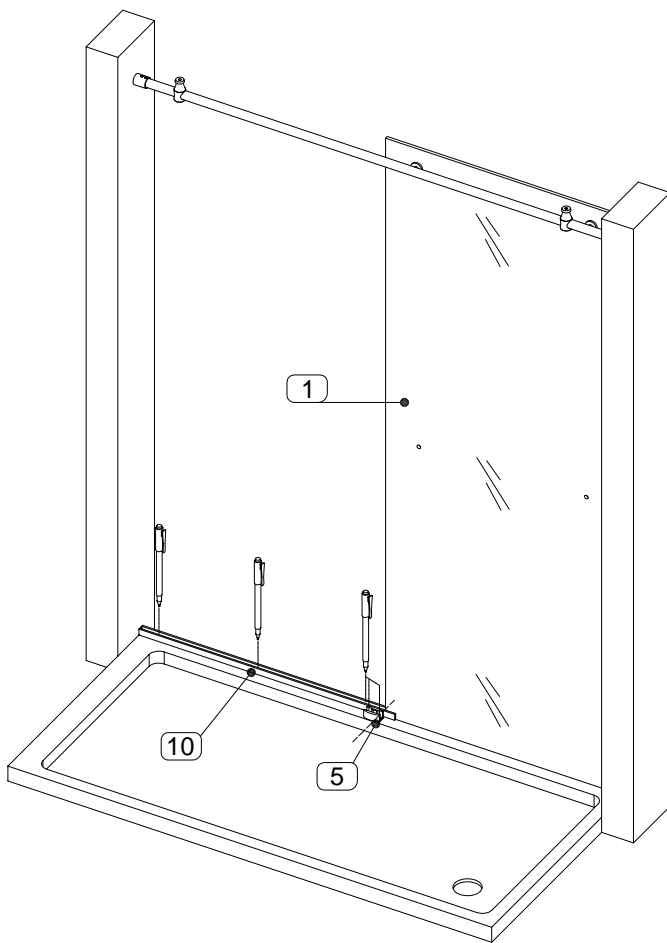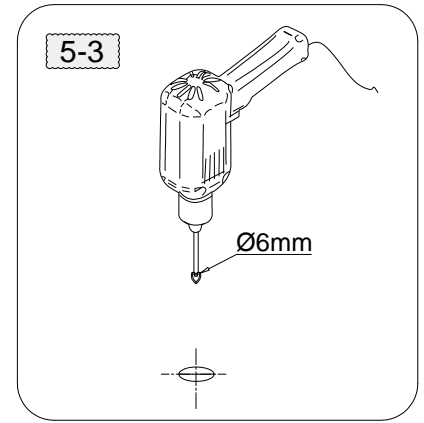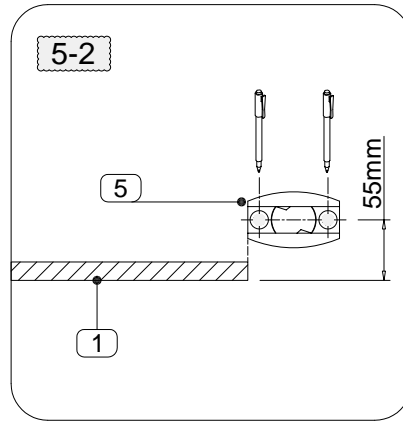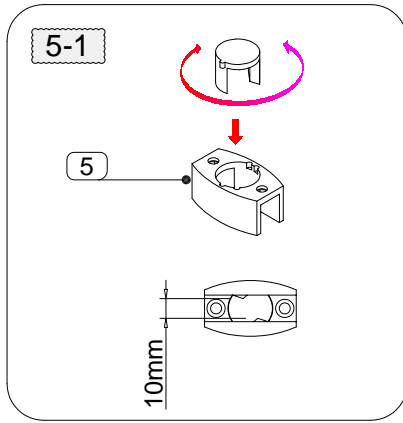

Step 6

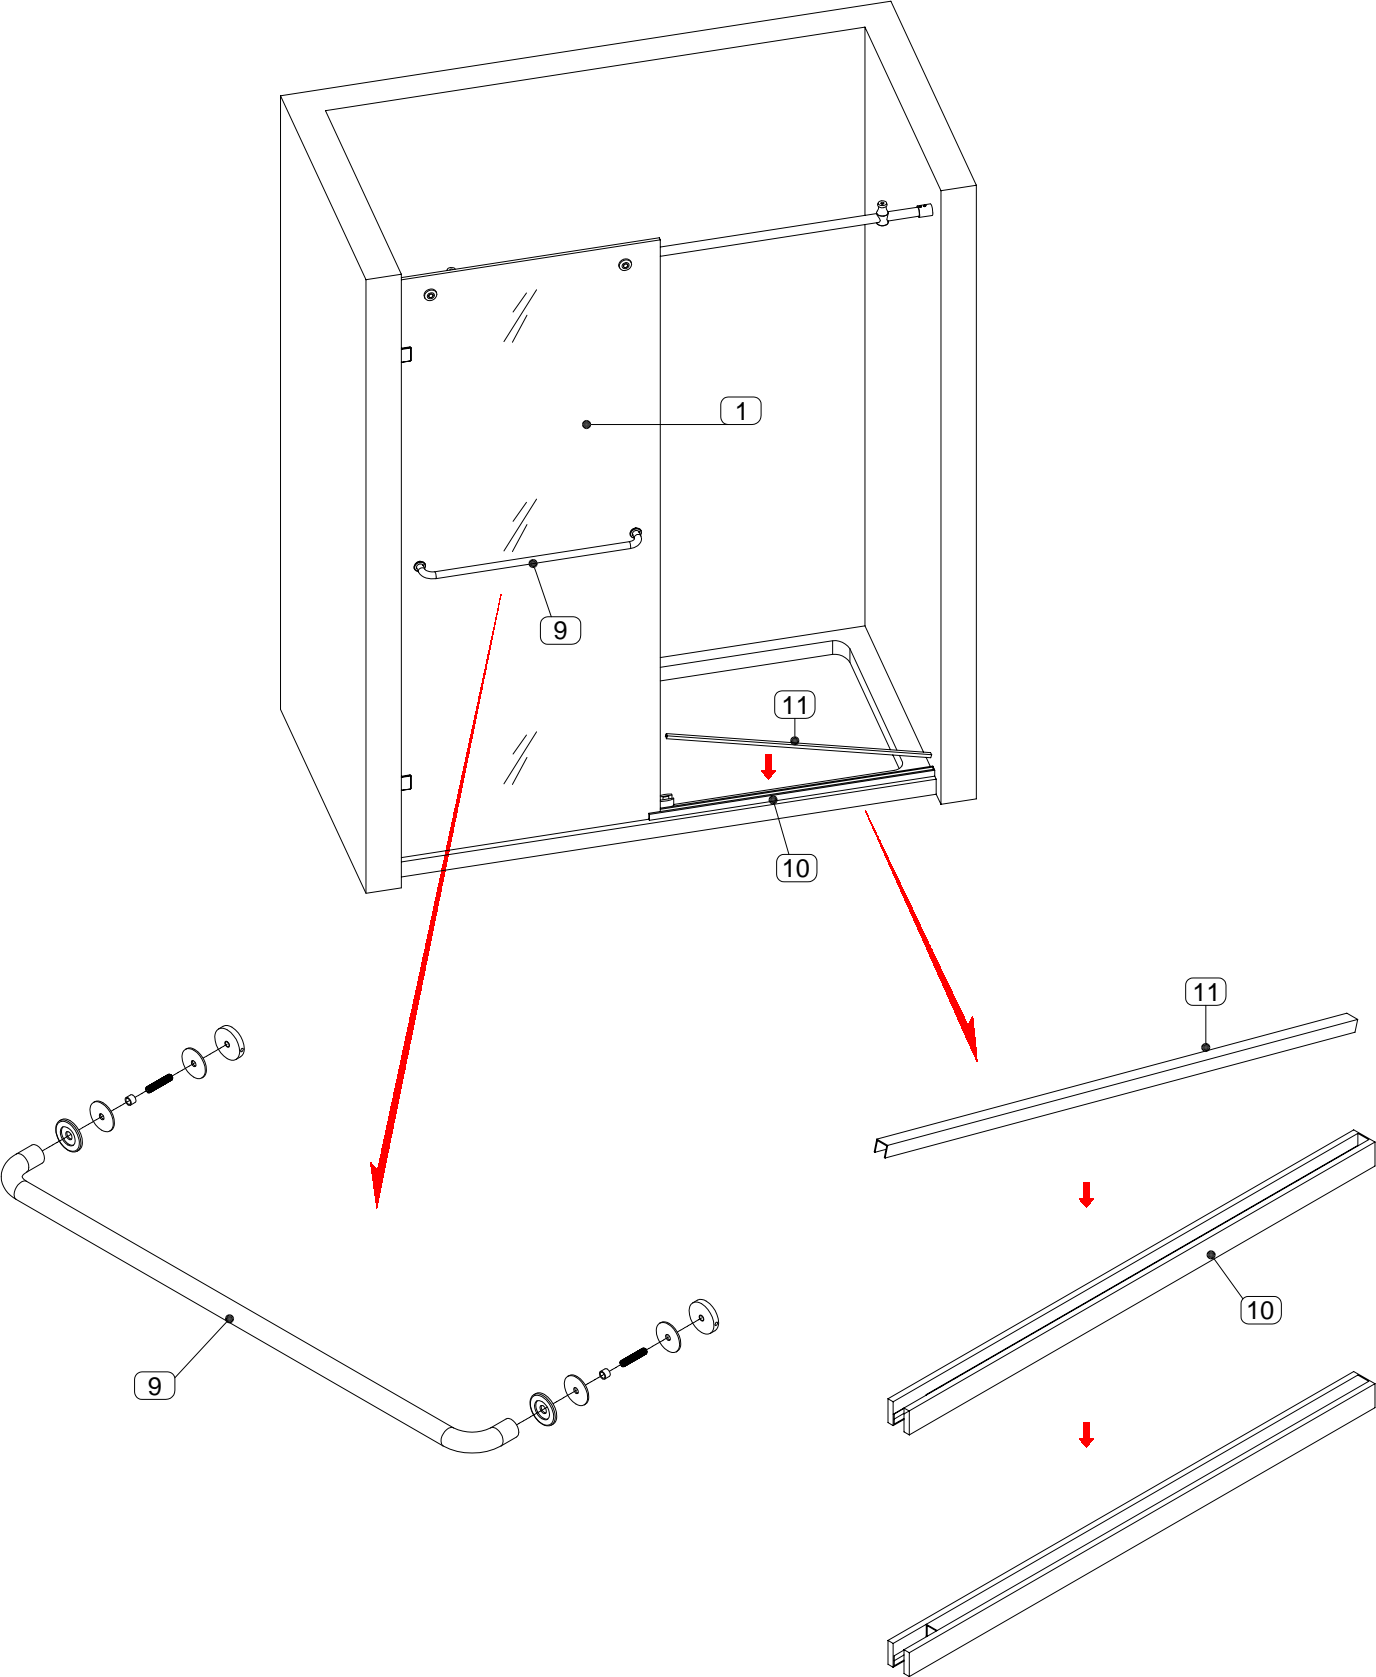


Step 7

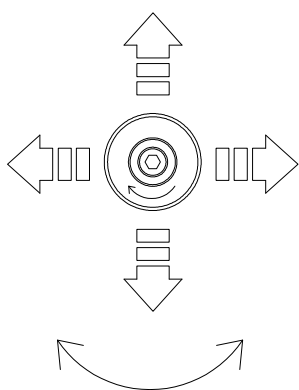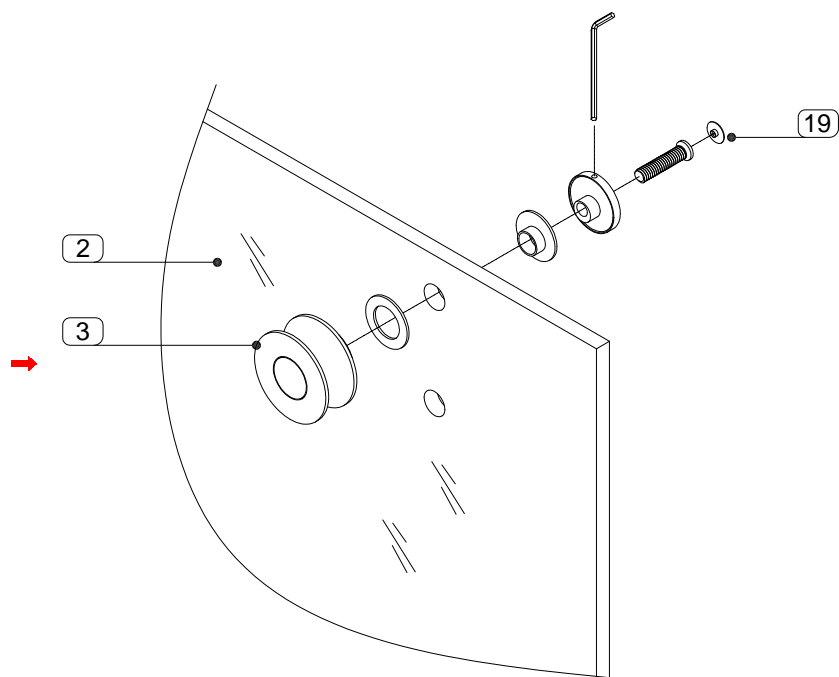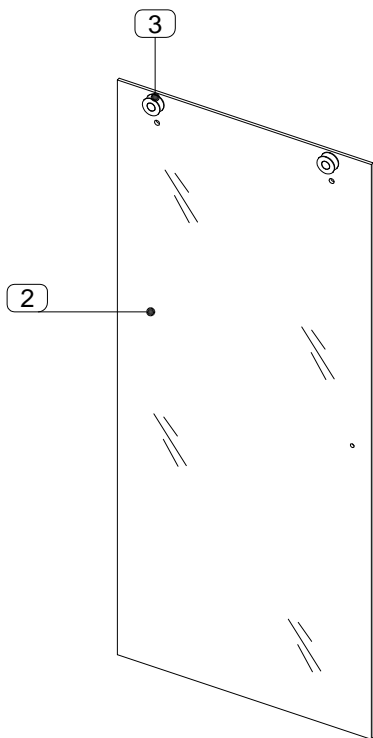


rotate disk(s)
to level rail

Door end of guide rail



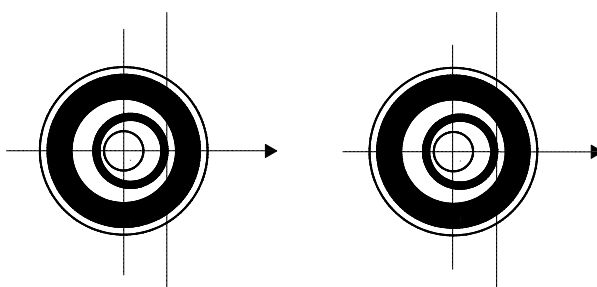


High spot of disk bushing


Step 8

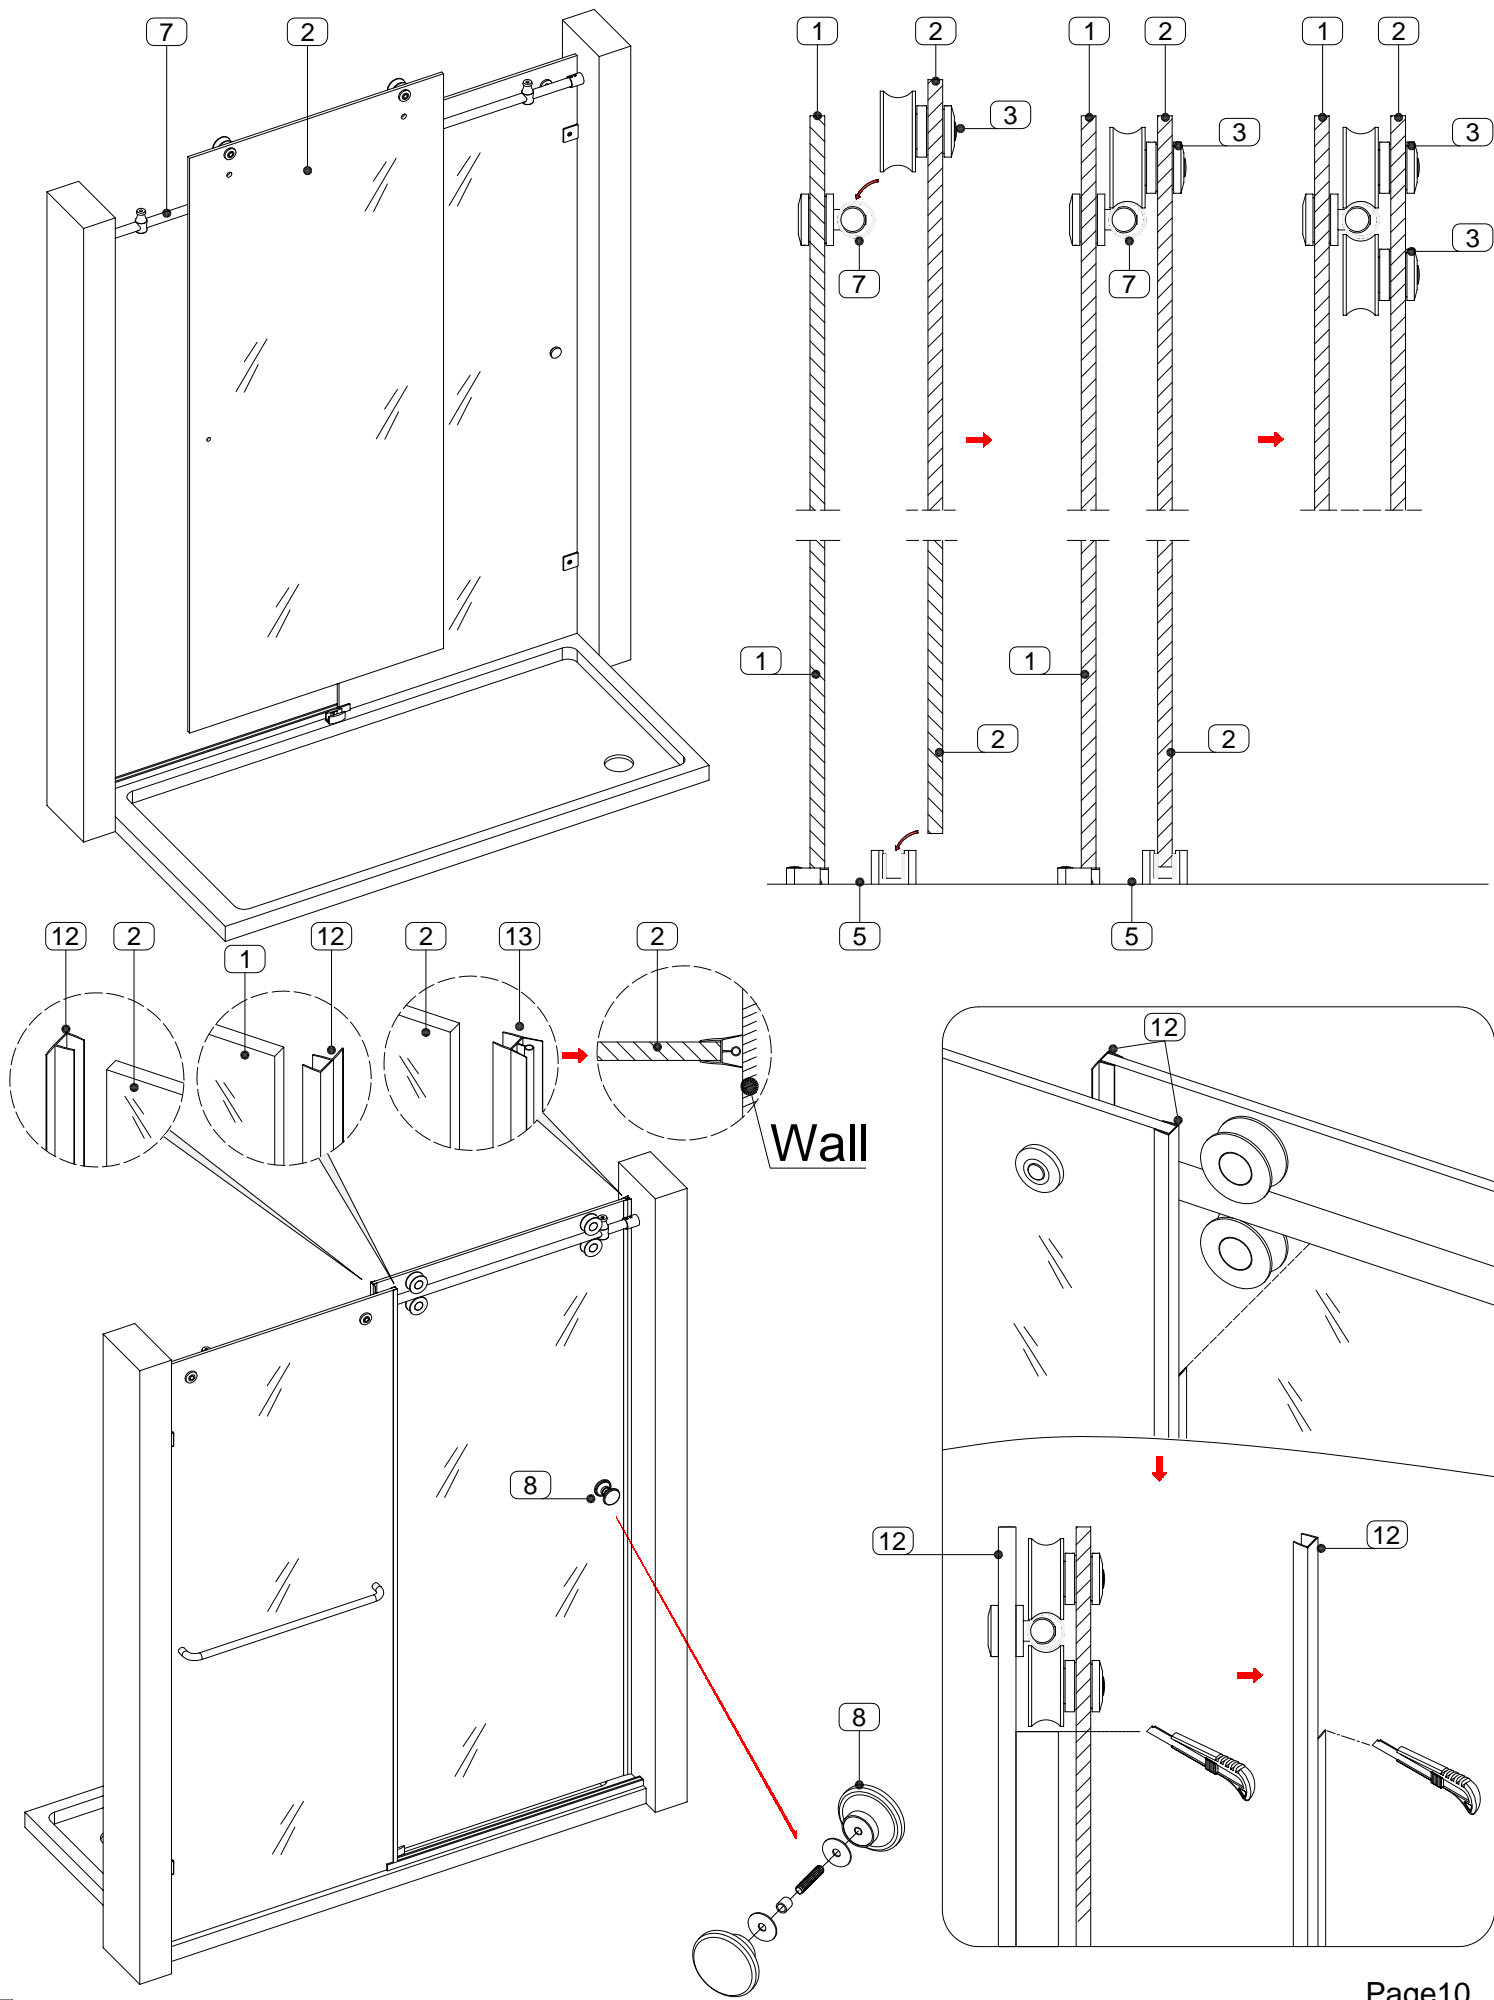

Step 9

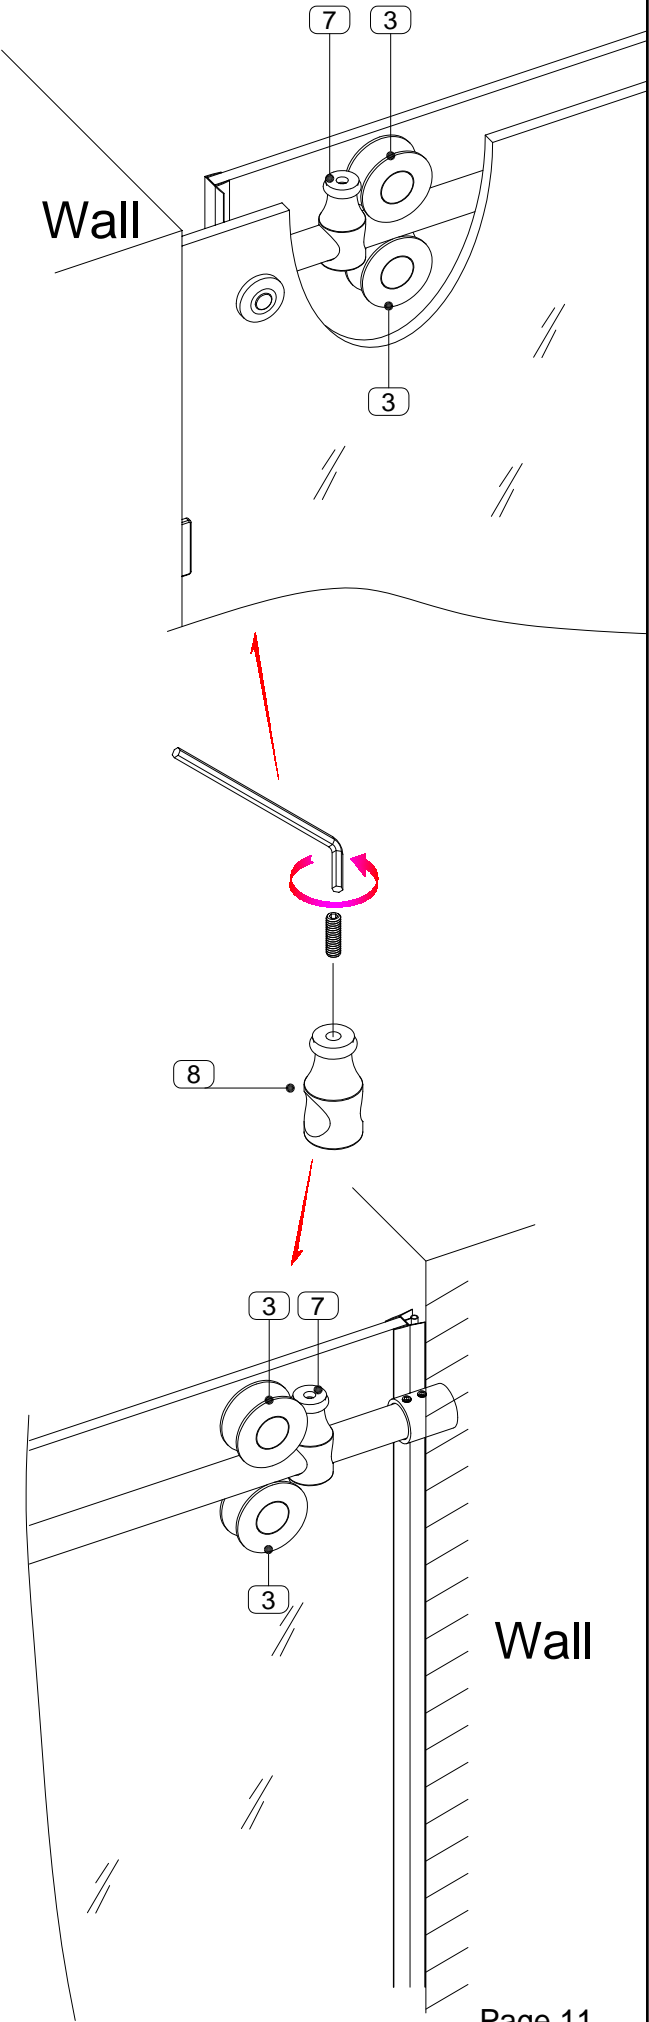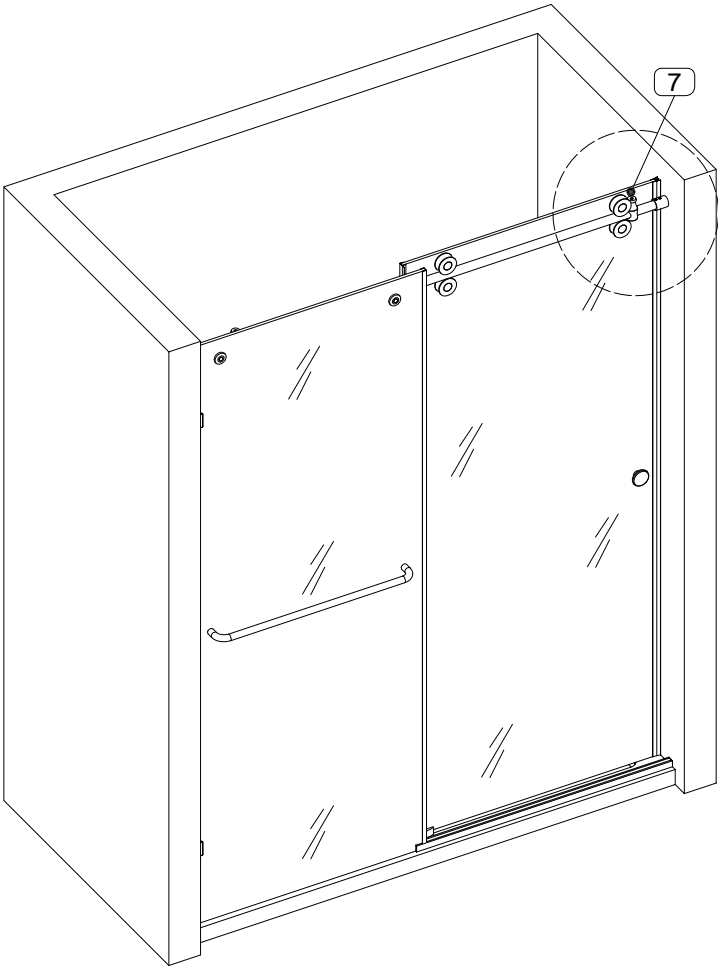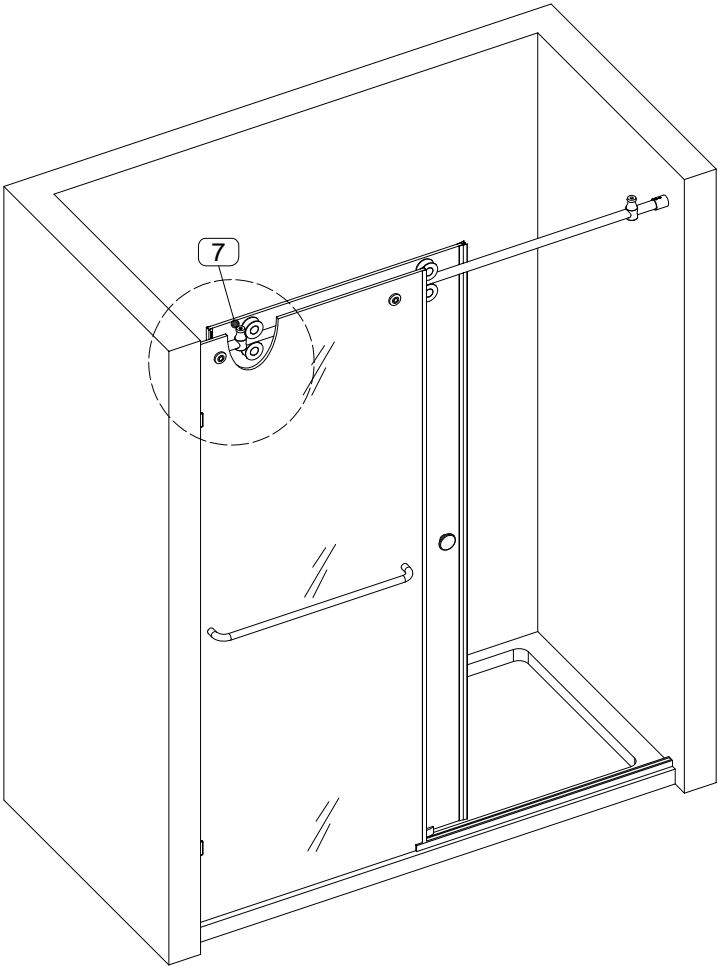

Step 10

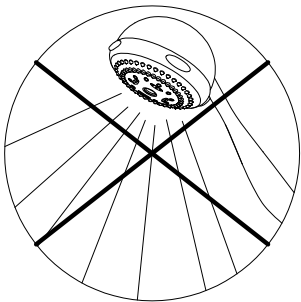

24H

