New Bee

NB-10

Active Noise Cancelling Bluetooth Headphone

Website: www.anewbee.com Email: support@anewbee.com

Contents

Welcome

Specifications

Package

Headphone Overview

Connect and Pair

Noise Cancellation

Charging

Troubleshooting

Headphone Maintenance

Battery Maintenance

Cautions

Technical Support

Welcome

Thank you for purchasing NB-10 active noise cancelling Bluetooth headphone. We recommend you to burn in it for some periods when first time use. Plaving music continuously for 10 hours or more, it will bring you fabulous quality sound.

This manual includes instructions and matters need attention when you use the NB-10.

Please read the following contents carefully before you set NB-10 up and use it.

Specifications

Bluetooth Headphone				
Bluetooth Version	V4.2	Talking Time	65H	
Speakers	32Ω 40mm 100±-3dB 20-20KHZ	Music Playing Time Max volume, with ANC off	60H	
Stand-by Time	800H	Music Playing Time Max volume, with ANC on	25H	
Frequency	2.4hz-2.48Khz	Charging Current	1A	
Mic	Sensibility: -38 ±3dB Frequency: 30-16 KHZ	Charging Voltage	5V	
Noise Cance ll ation	ANC - Active Noise Cancellation	Charging Time	2-3H	
Protocol supported	HSP HFP A2DP AVRCP APTX LL	Bluetooth Distance	10m/32.8ft	
Battery	1050 mAh	NFC	Yes	

Package

1. NB-10 Bluetooth Headphone







3. USB Charging Cable








5. Audio Adapter







Headphone Overview

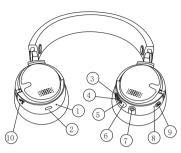

Key Function:				
NO.	Name	Introduction		
1	Battery Indicator	It glows red while charging, and glows blue when fully charged.		
2	Micro USB Charging Port	Headphone powers off while charging. Note: Do not use the headphone while charging.		
3	Volume+/Skip Forward	Press it to volume up. Press and hold it to skip to next track.		
4	MFB (Multifunction Button)	Power On/Off: Press and hold 2s to power on, press and hold 3s to power off. (Once power on, it enters pairing mode automatically after 5s.) Phone Call Control: Press to answer/hang up. Press and hold		
		to refuse. Voice Control: Press twice to activate Siri.		
5	Volume-/Skip Backward	Music Play Control: Press to play/pause. Press to volume down/press and hold to Play previous track.		
6	LED Indicator	Pairing: It blinks red and blue alternately.		
		Connected: It blinks blue quickly every 5 seconds.		
		Calling: It blinks blue slowly every 5 seconds		
		ANC (Active Noise Cancellation) Mode: It glows green.		
7	3.5mmEarphone Jack	While Audio cable plugged, Bluetooth turns off automatically and battery, controls, microphone stop working.		
8	Microphone	Microphone for calling		
9	Active Noise Cancellation Control	Press to open/close ANC Function.		
10	NFC Sensor Near Field Communication	NFC – Near Field Communication enables quick connection while two devices are in close distance.		

Connect and Pair

1. To put your headphone in pair mode, press and hold the MFB for 2 seconds until it powers on and enters pairing mode automatically after 5s. LED indicator flashes blue and red alternately.

(Headphone powers off after 10 minutes if no Bluetooth connected.)

2. Activate Bluetooth on your phone (or other devices) and set it to search for new devices. iPhone Settings > Bluetooth > On Android Settings > Bluetooth: On > Scan for devices NOTE: Menus may vary by device

3. Select "NB-10"

If necessary, enter four zeros (0000) for passcode or accept connection.

Once successfully paired, the headphone LED indicator flashes blue.

• Two Phone Connection: Your headphone can pair with two devices simultaneously. After connect Phone A, turn the headphone and Bluetooth on Phone A off. Then restart the headphone and pair with Phone B, and maintain the connection with Phone B. Finally, open Bluetooth on Phone A and select "NB-10" in the menu.

Note: The headphone can only play music on one Phone even two phones are successfully connected at the same time.

• NFC Connection: Open NFC function on your phone, and put phone back against the headphone. Please accept NFC pairing on your phone to get two Bluetooth connected. And Bluetooth connect with each other within 5s and LED indicator flashes blue. This function enables two devices with NFC function pair easily and quickly.

• TWS Pairing: Press "Volume up" button and "Volume down" button at the same time to enter into TWS paring mode, and the red indicator and blue indidator bink at the same time. Take the same action on the other headphone and the two devices will be connected. Press "Volume up" button and "Volume down" button at the same time for 3s again to close the TWS mode. This function enables two headset devices with TWS function play same Audio from one sound source. (Please kindly note: just the second connected headphone can close TWS mode).

• Wired connection : Use the included audio cable to connect. (Bluetooth turns off automatically, battery, buttons, microphone stop working when in AUX mode)

Noise Cancellation

ANC Button: Press the ANC button on the right of the headphone to activate the noise cancellation and the LED indicator turns green. Press ANC button again to close the noise cancellation and indicator turns off.

Charging

1. Wired Charging: Please plug Micro USB into headphone charging port and connect the other side with USB wall charging adapter or computer. LED indicator turns red while charging, and turns blue when fully charged. (Headphone reminds you battery low every 15 minutes when the battery power is below 10%.)

Troubleshooting

Problem	Remedy
1. The indicator blinks red	It means that the battery is low. Please charge the
quickly or continuously?	headphone as soon as possible!
2. Cannot boot?	Maybe the battery runs out. Please charge it
2. Calliot boot?	before starting!
3. No indicator when charging?	There may be no charge instructions for the first few minutes If the battery is completely exhausted or charged for the first time after not being used for a long period, but the indicator glows red to indicate the charging state after a while.
 Bluetooth headphone is without sound? 	Make sure Bluetooth headphone is switched on. Make sure the music sound output is the Bluetooth device (NB-10). Make sure the Bluetooth headphone and the phone are paired and connected successfully. Make sure the distance between Bluetooth headphone and cellphone is no more than 10 meters/ 32.8ft away. Make sure your phone is within the range of signal and without external interference. Make sure your phone is not connected to other devices.
5. There is no sound in the headphone when in wired connection?	 Make sure you insert correct 3.5mm audio cable and connect successfully. Note that the headphone buttons and microphones do not work when wire the headphone. Make sure cell phone is in normal working condition and without damage.
6. Bluetooth connection is not successful?	 Make sure both the headphone and cell phone Bluetooth devices are open. Make sure the headphone enters Bluetooth pairing mode (the indicator blinks red and blue.) Try to ignore the previous connected Bluetooth devices and empty the Bluetooth list. Search the device again.

Product Maintenance

Please do not use non-original accessories, because it may cause performance degradation, man-made destroy, electrical short circuit and warranty invalid.

Please do not disassemble the device by yourself, because it may cause headphone damaged and make the warranty invalid. Please do not put your Bluetooth headphone in a dusty environment. Please do not allow children under 3 years to play by themselves. Please do not place the product in an overheated or super-cooled environment; otherwise, it may not work temporarily or permanently. Please clean your Bluetooth headphone with clean, soft and dry cloth.

Please put your Bluetooth headphone in the original package or keep it carefully when you are not use it.

Battery Maintenance

Please go to a qualified repair center if you need to remove or replace the battery.

(Rechargeable batteries will last for a long time If you used it carefully.) The charging temperature of the rechargeable battery is from 10 to 45 centigrade degree.

Please charge it at least once a month if long-time no use. Battery usage time and standby time are related to specific using conditions. Usage time and standby time we provided are only for reference.

Notes

1. Other Bluetooth devices will automatically save the "NB-10" information after first-time connection. If you cannot connect again, please empty "NB-10" information (remove the matched device or ignore the connected device last time), then you can search and reconnect to NB-10 again after empty its information.

2. When the headphone cannot be started, the battery should be short of charge. Please get it charged.

- 3. Select the right volume and mind the playing time.
- 4. Please do not disassemble the headphone by yourself.
- 5. Don't let it squeezed by heavy objects.

Happy?

Thank you for choosing our products! We sincerely hope it will be vour new-found happiness.

If you are fully satisfied with your using experience, could you please kindly share to your friends?

We also engage with our fans to learn how we can do better by offering free pre-release products. If you are interested, do not hesitate to follow us on

Facebook: NewBeeBrand

@ Website: www.anewbee.com



If you are having any questions, concerns or just not satisfied with any regards, feel to contact us by e-mail at:

- Email: support@anewbee.com
- L Tel: 86-755-83219167
- Address: Room408, 4th FI, Unit B, Bldg B. Min'sheng Industry, Gao'feng Rd , Long'hua District, Shenzhen City, Guangdong Province, China