



200W Solar Blanket

AP200MS-B

USER MANUAL



ABOUT US

ATEM POWER, born in June 2017, as a synonym for exciting outdoor experience, is an Australian company with dedication and passion for the R&D of high quality products in the field of renewable energy products, batteries and related accessories.

Since the company was founded, we have committed to innovation that aims to make your life infinitely more convenient. And the belief in our conviction for quality and commitment allows us to innovate in developing products that are optimally tailored to the needs of our amazing customers.


We engineer and supply solar products for homes, 4x4s, recreational vehicles and virtually any application you can think of. And we also develop reliable, high performing deep-cycled batteries and lithium batteries for standby or daily power needs. Accessories include battery chargers and inverters that are ideal for RV's, commercial vehicles, boats, yachts and many more applications!

At ATEM POWER, we stay true to our DNA by prioritizing technological innovation designed to improve our products and striving to provide excellent customer care. Because we are motivated to explore the limits of solar power!


WARNINGS & SAFETY INFORMATION

- Please bear in mind that the solar panel, MPPT controller and battery should be kept away from liquids and chemical solvents.
- Keep the solar blanket and controller clean and check whether the connectors are clean before use.
- Children, adults with reduced physical or mental abilities, or those who are under the influence of drugs or alcohol are not allowed to use this product.
- This solar blanket is not intended to charge non-rechargeable batteries, which may cause injuries to the user or damage the blanket and the controller.
- Battery should be mounted in well-ventilated area without potential ignition sources, because lead acid batteries might produce harmful and explosive gases. And you are not allowed to smoke when the battery is charging.
- Any modifications to the product will void the warranty.
- Please store the solar blanket in a cool and dry place.
- Please keep the solar blanket away from sharp or heavy objects, which might cause damages to the blanket during transportation.
- This solar blanket is intended to charge 12v rechargeable batteries.
- The MPPT controller is only suitable for LiFePO4 batteries and lead-acid batteries: calcium, AGM & GEL. The controller should not be used with nickel metal hydride batteries.
- The MPPT controller is engineered to charge one battery only.
- Good ventilation is important for the controller, as it will generate much heat during operation.


PACKAGE LIST

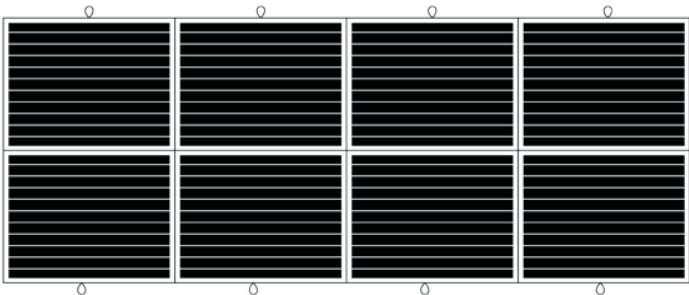


200W Solar Blanket

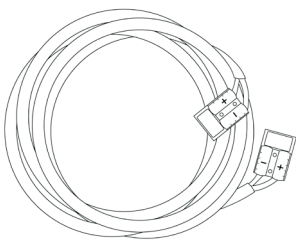

Extension Cable

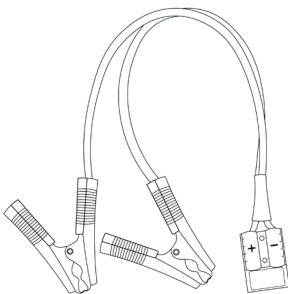

Alligator Clips

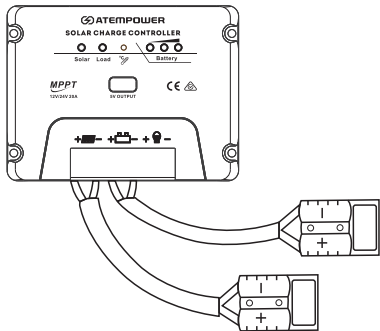

MPPT Controller

DIMENSIONS




380mm

480mm




60mm

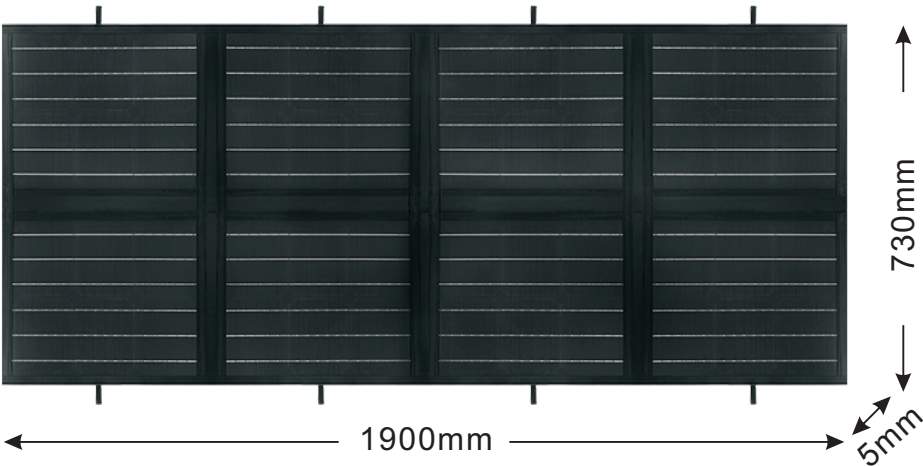

CONNECTING YOUR SOLAR PANEL


- Connect the Alligator Clips to the battery.
- Connect the controller to the battery with Anderson plugs. Use the extension cable if needed.
- Connect the solar blanket to the controller with Anderson plugs.

Note: When uninstalling, you are required to repeat the steps from last to first.

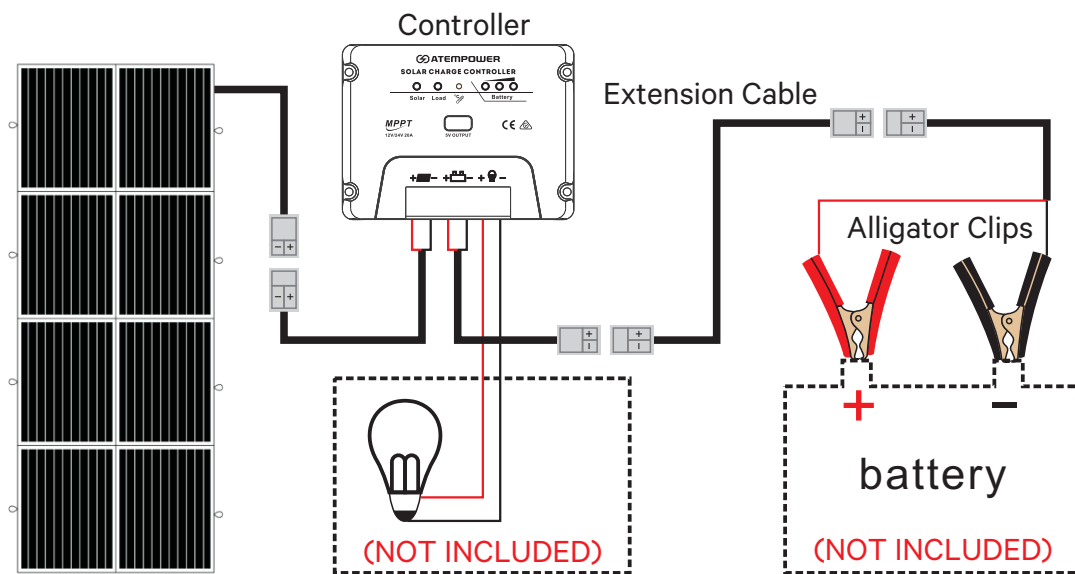

TIP

Solar panels should be installed in a location where there is no constant shading. In the northern hemisphere, panels should ideally face south, and in the southern hemisphere, panels should ideally face north.

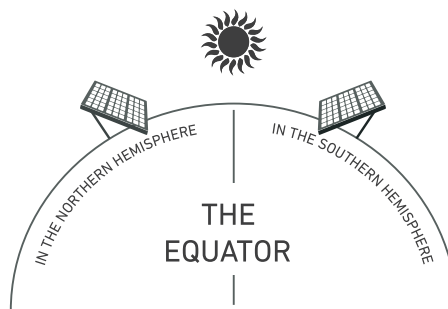

SOLAR BLANKET SPECIFICATIONS

Voltage at Pmax (Vmp)	18.2V
Current at Pmax (IMP)	10.99A
Open-Circuit Voltage (Voc)	22.4V
Short-Circuit Current (Isc)	11.75A
Panel Weight	7KG
Dimensions (Closed)	480*380*60 mm
Dimensions (Open)	1900*730*5 mm

CONTROLLER SPECIFICATIONS

Model	CY1220MT-AP
Rated Charge Current	20A
Rated Discharge Current	20A
Rated Voltage	12V/24V auto work
MPPT Efficiency	Max:99%
Over Load, Short Circuit Protection	≥ 1.5 rated current
No Load Current	$< 10\text{mA}$
Over Voltage Protection	16V; x2/24V
Voltage of Stop Charging	14.7V; x2/24V
Discharge Recovery Voltage	12.0V; x2/24V
Over Discharge Voltage	10.8V; x2/24V
USB Output	5V 1A
Working Temperature	-35°C~+55°C
Dimension of Controller	131 x 99.5 x 29.5(mm) (LxWxH)
Weight	300g

INDICATOR	STATUS	MEANING
SOLAR	Steady ON	Solar panel voltage is higher than the light control voltage
	OFF	Solar panel voltage is less than the light control voltage
BATTERY	Any status	Number of indicators steady on indicates battery power
	The left indicator is flashing	Battery is nearly or already empty.
LOAD	Steady ON	Load receiving power
	OFF	Battery voltage is abnormal.

TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Load icon is off	Battery is low, the load will start when the battery voltage is higher than 11.5V	Charge the battery
The MPPT controller will not turn on	Battery is insufficiently charged	Charge the battery
	Battery has been connected improperly	Check, and if necessary alter the battery's connection to the MPPT controller
	Battery fault	Change the battery
Solar panel doesn't work despite sufficient sunlight	Reverse polarity	Reconnect
	Loose connection	Reconnect
	Bad soldering of wires inside the junction box	Contact us
	Solar panel malfunction	Contact us
Low power output	Loose connection	Reconnect
	Wrong tilt angle	Adjust the angle to capture direct sunlight
	Shadow	Remove any shadow covering the panel
	Accumulation of dust	Clean, best on a regular basis
	High operating temperature	Ensure sufficient air circulation beneath the panels; add more panels in series to increase the string voltage



WARRANTY



WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects.

WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

1. Any defect in design or manufacture which results in its failure to perform correctly as described.
2. Damage or loss incurred in transit.
3. We will either replace the product or provide you with a refund at our discretion provided that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.
4. Shipping costs of returning the product for a proven defect.
5. The limited warranty is the only one that applies to this unit, and it sets forth all the responsibilities of ATEMPower.

THE WARRANTY DOES NOT COVER:

1. Travel and /or other expenses due to customer's location.
2. Damage caused by adverse weather, extreme temperature, accidents, negligence, daily wear and tear, alteration, incorrect installation, improper use including without limitation keeping the solar blanket near liquids and chemical solvents or making modifications to the solar blanket.
3. This unit is not intended for commercial use.



DC-DC CHARGER

AP20DC

USER MANUAL



ABOUT US

ATEM POWER, born in June 2017, as a synonym for exciting outdoor experience, is an Australian company with dedication and passion for the R&D of high quality products in the field of renewable energy products, batteries and related accessories.

Since the company was founded, we have committed to innovation that aims to make your life infinitely more convenient. And the belief in our conviction for quality and commitment allows us to innovate in developing products that are optimally tailored to the needs of our amazing customers.

We engineer and supply solar products for homes, 4x4s, recreational vehicles and virtually any application you can think of. And we also develop reliable, high performing deep-cycled batteries and lithium batteries for standby or daily power needs. Accessories include battery chargers and inverters that are ideal for RV's, commercial vehicles, boats, yachts and many more applications!

At ATEM POWER, we stay true to our DNA by prioritizing technological innovation designed to improve our products and striving to provide excellent customer care. Because we are motivated to explore the limits of solar power!

IMPOTANT SAFETY INSTRUCTIONS !

- Children or adults under the influence of alcohol or drug, or those who lack of experience or professional knowledge are not allowed to use this unit.
- The user must read and understand all of the warning and safety messages supplied with your product prior to installation or use.
- Do not use or store this charger near heat sources such as fire or heaters or expose it to flammable chemicals, vapors or corrosive gases.
- Please only use this product as intended.
- Do not strike, throw the charger.
- Do not mount the product in places where there is a risk of gas explosion.
- Inadequate ventilation may lead to overheat and inefficient charging.
- Please do not expose the charger to moisture or harsh environments.
- This product should be firmly fastened to prevent fall down or tip over.
- Please do not disassemble this charger as such action will not only cause potential damage to you and your unit, but also void the warranty.
- Please note that this DC-DC charger is not waterproof.
- Please disconnect the charger before maintenance or cleaning.
- This DC-DC charger can only be repaired by professional personnel.
- Before charging, please wear proper eye protections.
- Keep fresh water and soap on hand in the event battery acid comes in contact with eyes. If this occurs, cleanse right away with soap and water for a minimum of 15 minutes and seek medical attention.
- Do not smoke or have an open spark or fire near this unit.
- Avoid dropping any metal tool or object on the battery. Doing so could create a spark or short circuit which goes through the battery or another electrical tool that may create an explosion.
- Examine the battery charger regularly for damage. If the battery charger is damaged, it must not be used until it has been repaired.


KEY FEATURES

This DC-DC charger by ATEM POWER, which is ideal for 4WDs, caravans, RVs, trucks, campers, trailers, campervans, commercial vehicles and boats, offers an effective way to charge your auxiliary batteries from the alternator or solar panel (up to 20A) to charge AGM, Gel, calcium, LiFePO4 batteries. It also has a built-in MPPT regulator to maximize energy absorption, thus reducing the load on your engine. And over-charge, short circuit, over-temperature, thermal load, solar input overload, input/output reverse polarity protection have been integrated to offer an extra layer of protection. Furthermore, the charger allows you to re-select the battery during charging by long pressing "POWER", and LED indicator showing stage of charging. And memory function is integrated to make charging more convenient.



STAGE OF CHARGING

- | | |
|---------------------------------|---------------------------------|
| (1) Standby | (2) Pre-charge |
| (3) Constant current charging 1 | (4) Constant current charging 2 |
| (5) Constant voltage charging | (6) Fully charged |
| (7) Re-charge | |

PACKING LIST

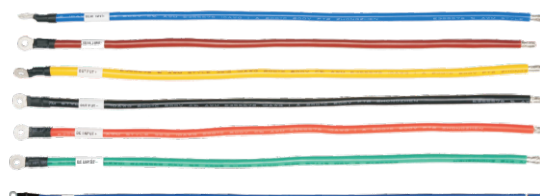

IDENTIFICATION OF PARTS

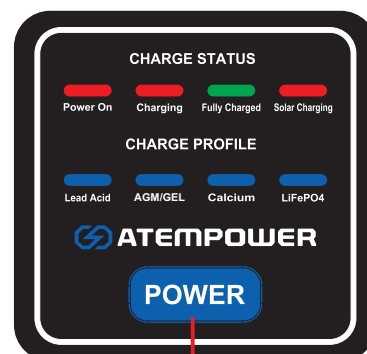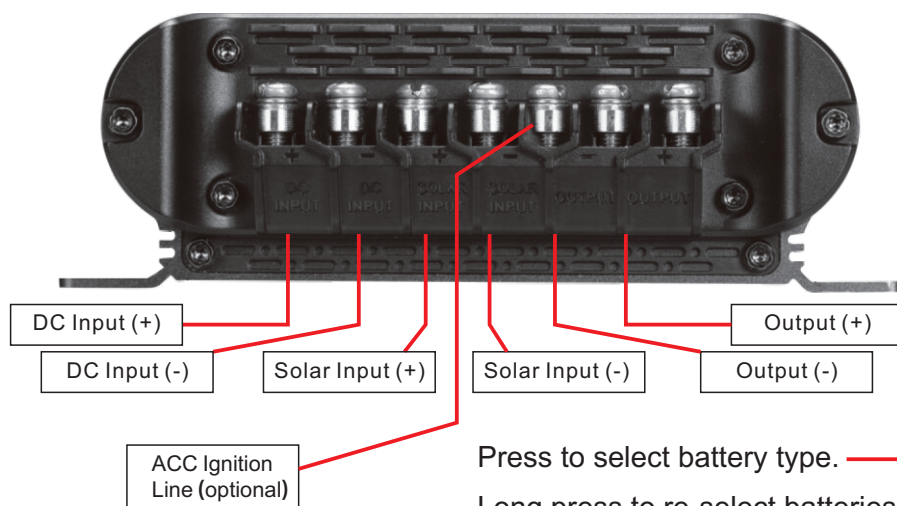


Press to select battery type.
Long press to re-select batteries during charging.

INSTALLATION INSTRUCTIONS


- Please check whether the specification of your cable is compatible with this DC-DC charger.
- This charger can be installed both horizontally and vertically.
- Please make sure that the charger is installed as close as possible to the battery you are going to charge, and you also need to make sure that the areas is not susceptible to moisture, water, dust or high temperatures.
- Please ensure that there is no heat source or flammable gas around the unit.
- Anderson plug is recommended when this charger is installed on a caravan or a campers (see picture below).
- Twin core cable will be used between the start battery and the charger, and you need to connect the common negative and common positive wires from the starter battery to the input of the DC-DC in the appropriate positive and negative terminals.
- It is highly recommended to install a 40 Amp circuit breaker (not included in this package) that should be installed near the starter battery.
- Check whether all connections are clean and tight.
- You can connect the optional ACC line to the ignition of your vehicle, then turn your key to the ACC position when engine starts, which will be detected by the DC-DC charger. And the main battery will start charging your auxiliary battery.

Note: the charger may discharge your main battery if the ACC line is connected but you key is not turned to the START position.

Suggested fitment to vehicle only

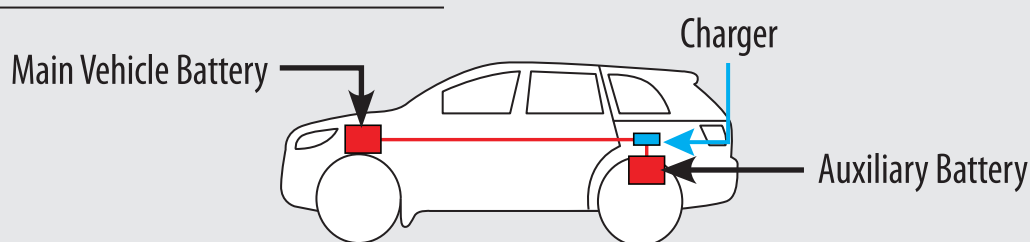

Suggested fitment to vehicle with caravan

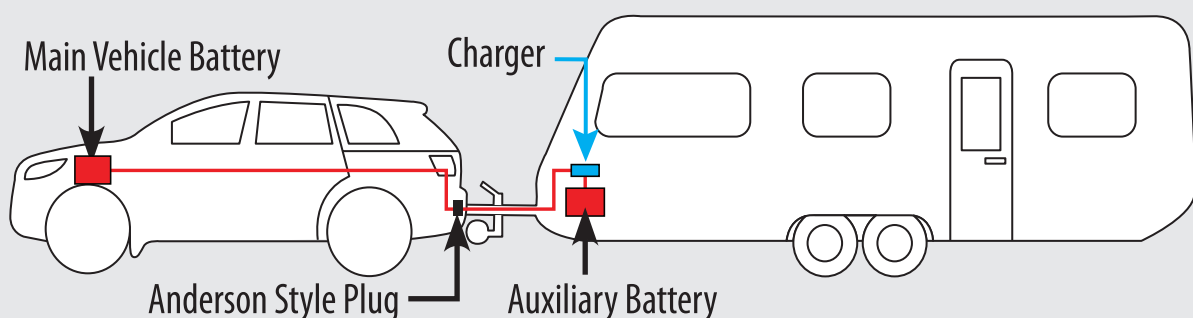

This charger can also be connected to the solar panel, see detailed wiring diagram at Page 5.

HOW TO USE

1. DC Battery

- Start your vehicle and let it idle.
- And the charger will recognize that there is a charge being applied to the main starting battery.
- The charger will charge the auxiliary battery when the main starting battery has reached 13V. The main battery will start charging the auxiliary battery when its voltage is or above 11.5V (ACC line connected).
- Press “POWER” to re-select batteries (The default setting is for lead acid battery, and your setting will be saved once selection is made).
- The charger will continue to operate even after the vehicle has been switched off, however when the main starting battery fall below 12.5 volts the charger will automatically shut off. The main battery will start charging the auxiliary battery when its voltage is or above 11.5V (ACC line connected); The main battery will start charging the auxiliary battery when its voltage is or above 13V (ACC line not connected).

2. Solar Input

- The charger will shift to solar charge mode when the input terminal is connected to the solar panel.
- Press “POWER” to select the corresponding battery type, and batteries can be re-selected during charging by long pressing the button.
- Charging begins when the output of solar panel reach 16V~25V, and the panel will stop to charge when its output is below 10V.

Note: this charger is not designed to charge your auxiliary battery with DC inputs and solar concurrently, DC enjoys input priority over solar. The recharge voltage for LiFePO4 battery is 13.2V, and for batteries including AGM, Gel and Calcium, the voltage is 12.3V.


Wake-up of Lithium-Ion Batteries in Sleep Mode: this DC-DC charger cannot charge a lithium-ion battery in sleep mode. To charge the lithium-ion battery, first make sure the DC-DC charger is correctly connected to the battery. Then select the “LiFePo4” mode, and long press “POWER” for 5s. The “charging” (red) indicator will flash for 10s. If the battery is successfully waken up, the “charging” (red) indicator will be constantly on and the DC-DC charger begins to charge the battery. Otherwise, the DC-DC charger will enter the standby state and the “Power On” indicator will be on.

DEEP CYCLE BATTERY MAINTENANCE

- This DC-DC charger by ATEM POWER will be used to charge your auxiliary battery, for example, deep cycle batteries that are designed to provide power for your fridges and light in caravan or camper.
- It is known that the lifespan of a deep cycle battery can be extended if it is not discharged below 50% of its full capacity. A fully charged battery (50 amp) can deliver 50 amp/hours without shortening its lifespan.
- Your fridge might use appropriately 24 amps per day. In this light, if your 100AH battery is only used to power your fridge while receiving no charge, and it would require charging after 48 hours.
- To replenish the capacity of the battery (100AH capacity, 50AH discharged), you may need to use a 40 amp DC-DC charger that would further require at least 1.25 hours of driving/solar charging. A 30 amp unit will require at least 1.67 hours of driving/solar charging to fully recharge the battery. A 20 amp unit will require at least 2.5 hours of driving/solar charging to fully recharge the battery. Undercharge the battery or discharge it by more than 50% will significantly shorten its lifespan.

BATTERY WIRING

This diagram is for a reference only. Local rules and regulations should be followed when installing this unit.

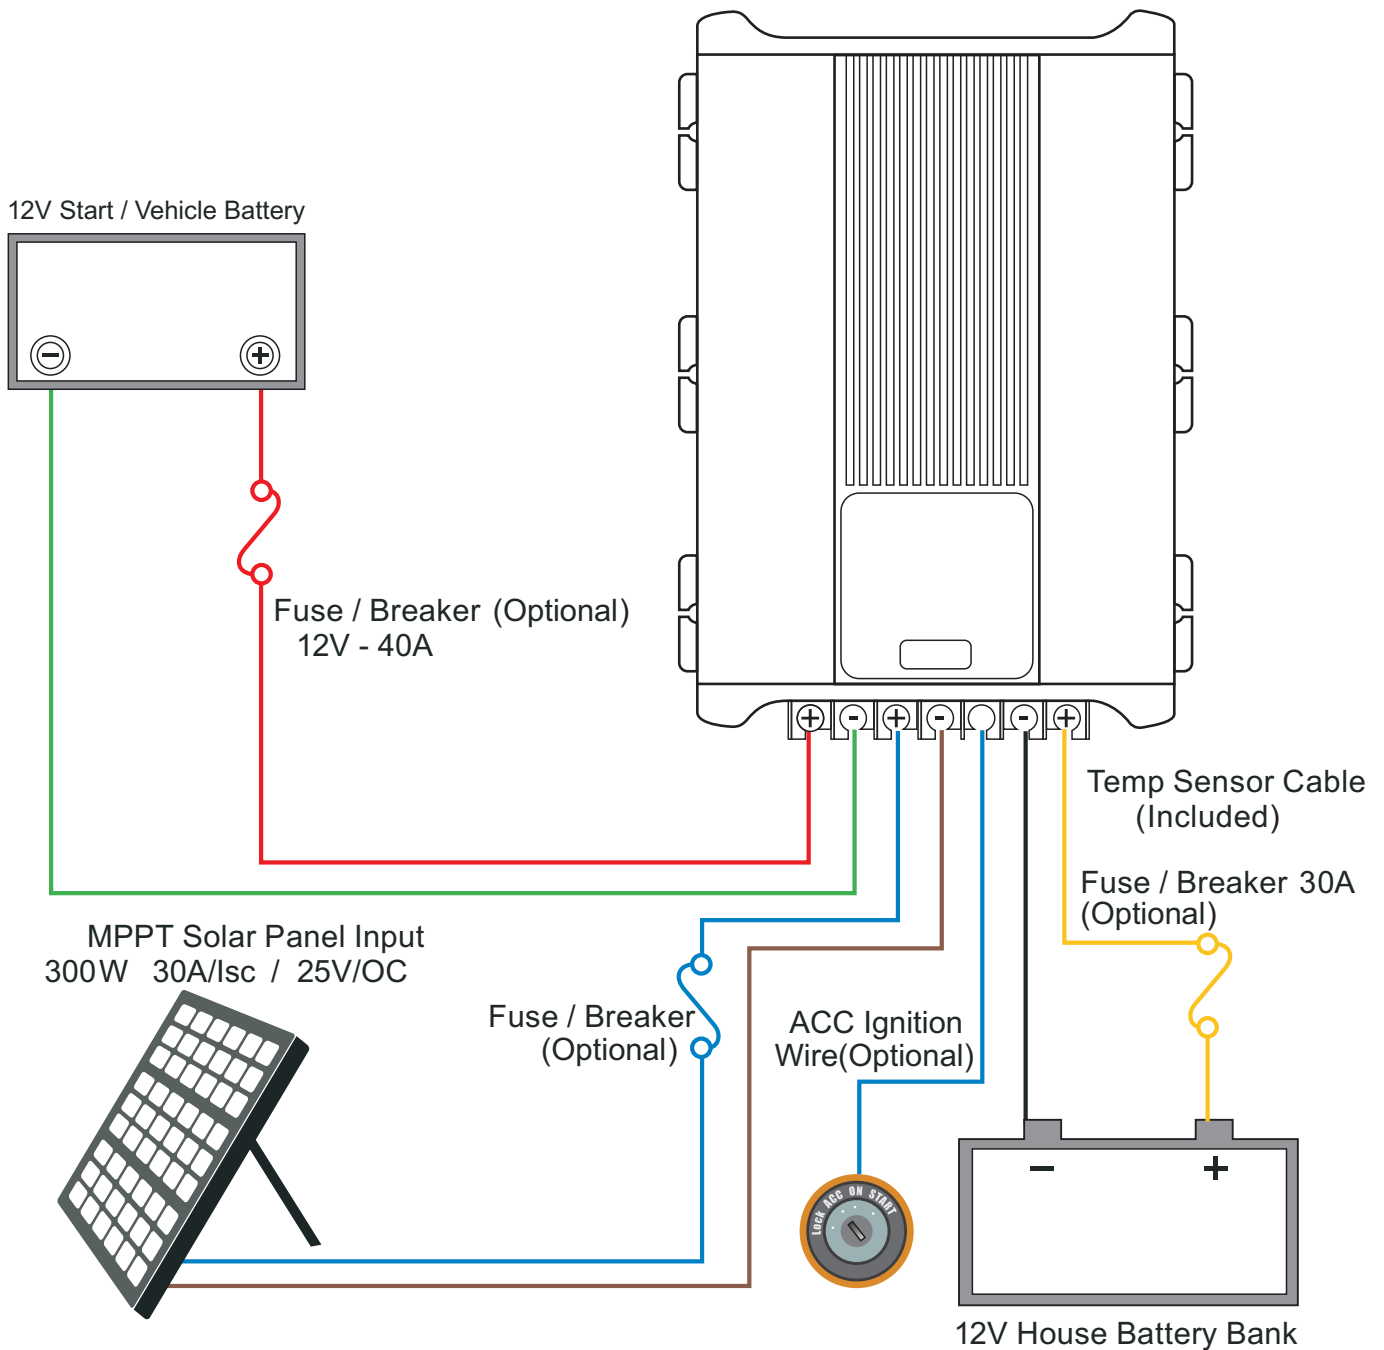

NOTE: First connect the ACC line to the ignition of your vehicle. Then turn your key to the ACC position when engine starts, which will be detected by the DC-DC charger. And your auxiliary battery will be charged via the main battery.

TROUBLESHOOTING

- Display shows that the charger is not charging: check where the battery is connected; check the terminals; check whether the battery is 12V.
- Battery is not charging: check whether all connections are connected correctly; check the status of the battery; check the status of your vehicle or solar panel.
- Battery cannot be fully charged or power cannot be maintained: please check whether your battery has been used for over 3 years; overheat; low in electrolyte; over-charging or battery vulcanized; You need to consult your battery manufacturer to check its condition or make a replacement.


TECHNICAL SPECIFICATIONS

Model:	AP20DC	
Type	Multi Stage	
Input	DC Battery:13.0 -16.0 Volts	Solar Input:16.0 - 25.0 Volts
Output / Charging Voltage	14.4 - 15.4 Volts (Stops charging when alternator output or vehicle battery below 12.5 Volts)	
Output Current	DC Output:20A	Solar Output:20A
Minimum Start Voltage	2.5 Volts - For battery being charged	
Charge Control		
Soft Start	YES	
Soft Charge Current	20A	
Bulk Charge Voltage	14.7V (AGM/Gel)14.4(Lead Acid)15.4(Calcium)14.4V(LiFePO4)	
Absorption	Constant voltage with automatic amperage control	
Equalisation	Automatic	
Float Charge Voltage	13.5 (AGM/Gel)13.5V(Lead Acid)13.5V(Calcium)	
Float Charge Current	0-20A	
Battery Range	60 to 600Ah	
Cable Length / Twin Core		
0 - 1 Metres	10AWG	
1 - 5 Metres	8 AWG	
5 Metres +	6 AWG	

CHARGING VOLTAGE

	AGM/GEL	LEAD ACID	CALCIUM	LiFePO4
BOOST	14.3 V	14.0 V	15.0 V	14.0 V
CHARGING	14.7V	14.4 V	15.4 V	14.4 V
MAINTENANCE	13.5 V	13.5 V	13.5 V	

CHARGING ALGORITHM

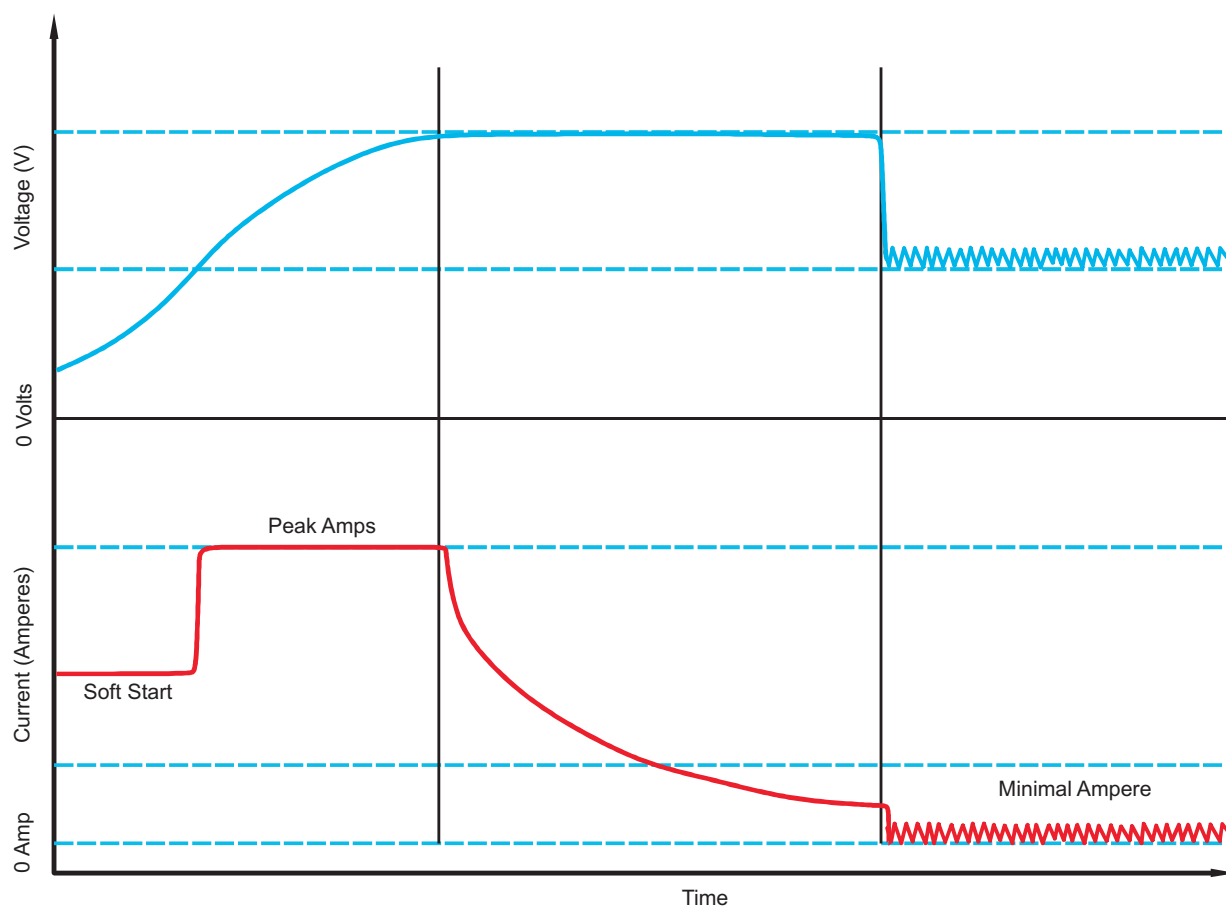

Charging algorithm will change according to battery type.

NOTE: Charging voltage is specified by your battery manufacturer. Non observance of instructions will void the warranty of your battery.



WARRANTY



WARRANTY PERIOD:

Full 12 months warranty from date of purchase against all manufacturing defects. This DC-DC charger by ATEM POWER comes with guarantees that cannot be excluded under the Australian Consumer Law.

WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- Any defect in design or manufacture which results in its failure to perform correctly as described.
- We will either repair or replace the product at our discretion provide that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.
- The limited warranty is the only one that applies to this unit, and it sets forth all the responsibilities of ATEM POWER.

THE WARRANTY DOES NOT COVER:

- Cost of removing and reinstalling the product.
- Travel and /or other expenses due to customer's location
- Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of repairing or replacing your product. If you want to send the product back we recommend that you insure against loss or damage.
- Any loss directly or indirectly associated with the product that fails to operate.
- Damage caused by mould, misuse, incorrect operation, adverse weather, accidents and daily wear and tear.
- The warranty does not extend to subsequent purchasers or users other than OEM applications.
- This unit is not intended for commercial use. This warranty does not apply to damage to units from misuse or incorrect installation/connection. Misuse includes wiring or connecting to improper polarity power sources.