



DJS70 JUMP STARTER



USER MANUAL

A Big Thank You

We're thrilled that you have chosen to purchase the S ZEVZO jump starter. At S ZEVZO, we're committed to providing you with products that enhance your daily life. We also aim to give our customers excellent support. Should you have any questions or feedback about your new product, simply get in touch with our customer support team at 1-888-381-1999, or by email at service@szevzoshop.com

Enjoy your new product!



NOTE

1. DO NOT start any engines that exceed the maximum displacement the jump starter can bear.
2. DO NOT crank the engine for more than 3 seconds.
3. Allow the jump starter to cool down for at least 1 minute between each start attempt.
4. Please ensure the device is at least 50% charged before use.

CONTENTS

Attention	02
Accessories	02
Specifications.....	03
At a glance	03
How to jump start your car.....	04
How to charge phones or tablets	07
How to use the LED light	08
How to recharge the device	08
Warnings and cautions when using the product	09

✉ service@szevzoshop.com

☎ 1-888-381-1999


ATTENTION

1. This device is suitable for petrol engines up to 7.0L and diesel engines up to 5.5L. Please don't attempt a vehicle with a higher engine capacity or it will cause serious damage to the device and could be dangerous to the user.
2. Don't crank the engine for more than 3 seconds. Allow the jump starter to cool down for at least 1 minute after each start.
3. Your jump starter will work best when it is fully charged. If less than 50% charged, it will not be able to start your engine.
4. Clear the dust on the electrodes of your car battery before jump starting.
5. If the instructions are followed correctly but your vehicle doesn't start instantly, please wait for 5-10 minutes and try again. But please don't make repeated attempts to jump start the engine without allowing time for the device to cool down.
6. Do not connect the positive and negative polarity clamps together when the device is powered on. Short circuit can cause electric shock and serious injury.
7. Disconnect the cables from the jump starter and car battery when not in use, remove the negative clamp from car battery first (or positive first for positive ground systems).
8. It is prohibited to charge the device immediately after a jump start. Please wait at least 30 minutes if you want to charge the device after a jump start.
9. To preserve lifespan, recharge the device at least once every 3 months.
10. Use original or certified cables.
11. Do not expose the jump starter to liquids. Do not disassemble.
12. Avoid dropping the device and exposing it to extreme temperatures.
13. It is recommended to charge the device with the accompanying charging cable or a 5V/2A charging cable.

ACCESSORIES



1 x Intelligent Jumper Clamps








1 x USB Cable





1 x User Manual

SPECIFICATIONS

 Capacity	47.36Wh
 Weight	313g/11oz
 Dimensions	146*86*26mm/5.7*3.4*1 inches
 In	5V/2A
 USB Output	5V/2.1A; 5V/1A
Peak Current	1000A
Starting Current	600A
Operating Temperature Range	-20°C- 60°C/ -4°F- 140°F


AT A GLANCE

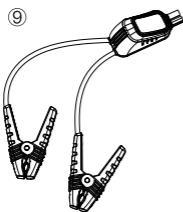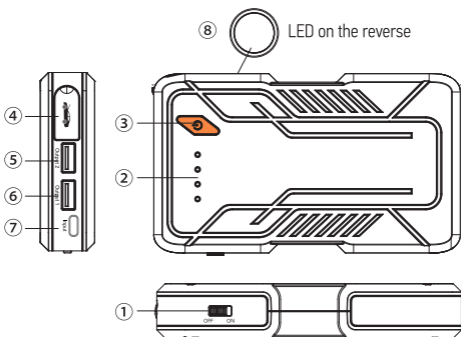


1. ON/OFF Button
2. Power Indication Light
3. Power Button
4. 12V/600A Jumping Port
5. 5V/1.0A USB Output
6. 5V/2.1A USB Output
7. In Type-C 5V/2A
8. LED Flashlight/SOS/Warning Light
9. Jumper Clamps

HOW TO JUMP START YOUR CAR

1. Press the power button on the Jump Starter. There should be at least 50% of battery level available (charge fully before initial use).

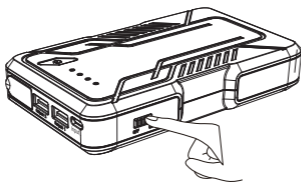

2. Insert jumper cables into the jumper cable socket. Fully insert the plug into the jump starter

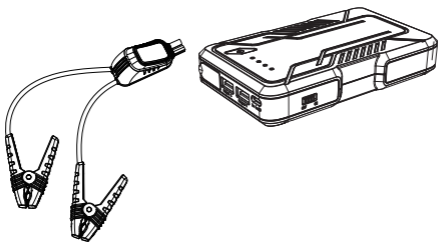

THE GREEN LIGHT IS BLINKING


This means that the jumper cable is correctly connected to the jump starter.

3. Connect the clamps to the vehicle battery. Red clamp is connected to the positive polarity (+), black clamp is connected to the negative polarity (-).




THE GREEN LIGHT IS ALWAYS ON

All connections are right, try to start the engine. (If there is no operation within 30 seconds after the connection is successful, the current is turned off, the green light is flashing, the jump start function is invalid, please reconnect to the car battery.)

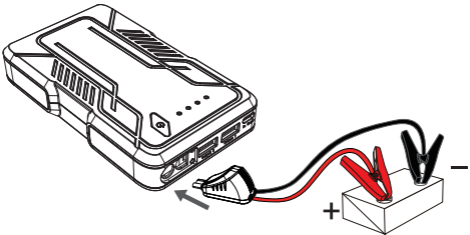

4. Press the car start button or turn the ignition switch to the START position
5. After the car has been started, the green light is strobing, please remove the jumper cable. Remove clamps and pack away.

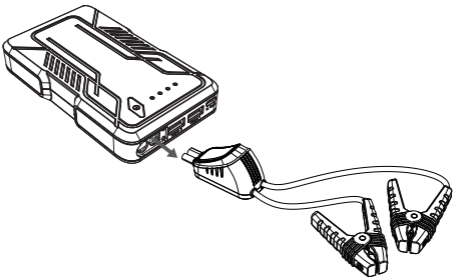

PROTECTION FUNCTION:

THE RED LIGHT IS ON, AND THE BEEPS WILL BE GOING ON FOR A LONG TIME.




- Jump starter power is low, please recharge.
- Reverse polarity connection, please reconnect correctly.
- The red and black clamps are short-circuited, please reconnect correctly. (It is strictly forbidden to short-circuit the positive and negative poles after the clamp is energized.)
- When the temperature of the jumper cable is high ($\geq 65 \pm 5^{\circ}\text{C}$), waiting to cool down ($\leq 55 \pm 5^{\circ}\text{C}$) before the next start.

PRECAUTIONS:

1. Please connect the jumper cable correctly according to the requirements of the manual.
2. Do not jump start the car at high frequency continuously.
3. This jumper cable is not allowed to be heated or used near fire.
4. This jumper cable is not allowed to be put into water or disassembled or modified without authorization.
5. The jumper cable needs to be connected to the jump starter first, and then connected to the car battery for ignition to avoid misjudgment.
6. When the car is not connected to the battery, the cable clip does not support the reverse connection protection; if you remove the power cord from the car battery, do not connect it in reverse when starting the car.


HOW TO CHARGE PHONES OR TABLETS

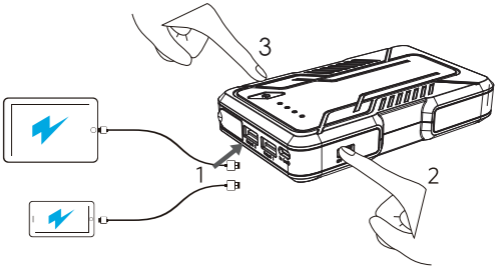

Please note that "Output 1" and "Output 2" cannot work together with "In" to charge other devices.

HOW TO USE THE LED LIGHT


1. Hold to turn on/off.

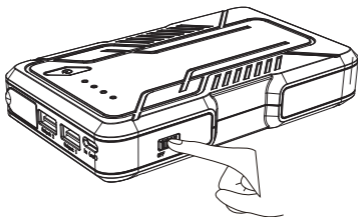

2. Press and hold down the Function button for 2 seconds to turn the LED light on/off.

3. Press once to toggle between light modes (high/SOS/strobe).

HOW TO RECHARGE THE DEVICE

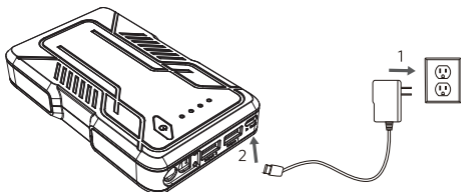

Note: Please switch the jump starter to "OFF" when you are not using it. The jump starter will discharge itself when it's switched to "ON". A wall plug adapter is not included, please use a 5V universal charging adapter to charge the device. It is recommended to charge the device with the accompanying charging cable or a 5V/2A charging cable.



WARNINGS AND CAUTIONS WHEN USING THE PRODUCT

1. Never short circuit the jump starter by connecting the Red and Black clamps.
2. Do not disassemble the jump starter.
3. When children use this product, please operate under the guidance of parents.
4. Store in a dry place, do not expose to damp conditions or near corrosive materials .
5. If the jump starter expands, leakage or peculiar smell is found, stop use immediately.
6. Please use this jump starter at normal temperature and be far away from too wet too hot and fire.
7. Do not start the vehicle continuously, between starting twice you should allow an interval of at least 1minute.
8. Do not start the car when the electric quantity of the product is less than 50%, otherwise it wil cause damage to the product .
9. Before first use, charging for 3 hours or more.
10. Please keep charge the jump starter atleast once every three months .
11. After starting the car , please wait atleast 30 minutes before charging the product.



✉ service@szevzoshop.com

☎ 1-888-381-1999



Made in China