

BABY WIPE WARMER




USER 'S MANUAL

Model:BWW-7200


Dear Customer, thank you for using our products. Please refer to the product manual before using the product. Please keep this manual after use, thank you!

2 Part description

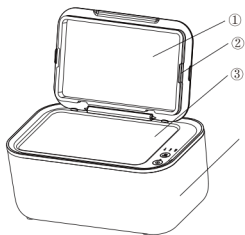

Item	Name	Material	Temperature	QTY
1	Upper cover	ABS	-20_80℃	1
2	Waterproof ring	Silica gel	-20_200℃	1
3	Main body	PP	-20_120℃	1
4	lower lid	PP	-20_120℃	1

3 Product instructions

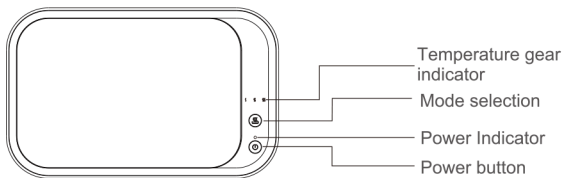

1. The product is equipped with two touch buttons: "⏻" on/off and "⏻" mode selection, as well as one power indicator and three temperature gear indicators, as shown in the figure below.
2. Put the baby wipe into the machine and plug in the power; press the power button, the power indicator will light up.
3. Press the mode selection key to select low, medium and high heating levels respectively, and the corresponding indicator lights will light up. The baby wipe temperature of low gear "S" is about 30-35 °C, middle gear "M" is about 40-45 °C, and high gear "H" is about 50-55 °C.

1 Product Specification

Product Name	Baby Wipe Warmer	Model	BWW-7200
Rated power	AC 110V 20W	Warranty	one year
Recommended room temperature humidity	10-25°C/30%~80%	Year of manufacture	See the color box

Caution:

Please read the instructions carefully before using this product.

Do not put the product into the water to wash it. Do not put it into the steam sterilizer for disinfection.

Do not place the product in a place where infants and young children can reach it; please turn off the power if it is not used for a long time.

If the product is damaged, do not disassemble it by yourself. It should be repaired or replaced by the manufacturer or professional.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential and breakfast type environments.

CAUTION: Insure that the appliance is switched off before removing it from its stand.

Daily Questions :

The Baby Wipe Warmer is not heated or does not display ?

Please check that the power plug is plugged in or not.

Will the Baby wipes dry out after long-term heating?

This product uses peripheral heating to evenly heat the temperature of each layer of baby wipe. It is normal for the long-term use of baby wipe to dry out. It is recommended to replace a pack of paper towels every 10 days.

Warm tips: when the paper towel becomes dry, add appropriate pure water to the wet tissue.

How long does it take to heat a wet tissue?

Plug in the power supply, select the required gear, and heat to the set temperature in four hours.

*What size of baby wipe is suitable for?

*This product is suitable for 80 pumping baby wipes, which are less than 18*20cm.

4 Warranty Card

Thank you for purchasing our products, All Chefhandy products enjoy 1-year guarantee. If there is any matter, please contact Chefhandy office technical support service via email: **support@chefhandy.com**



More product? Visit
<http://www.chefhandy.net>



Any issue? contact us
<http://www.chefhandy.net>

Do not return this product
to the place of purchase.

