


# **3PCS WIRELESS BATTERY LED PAR**

Thank you for purchasing the APP par from our company. Every product has been well tested and has shipped in perfect operating condition. When receiving our products carefully check the shipping carton for damage that may have happen during transport. In case of the damage inspect the fixture for the damages or missing accessories necessary to operate. If parts are missing or fixture has been damage please report this by Product.

## 1、 Key operation:

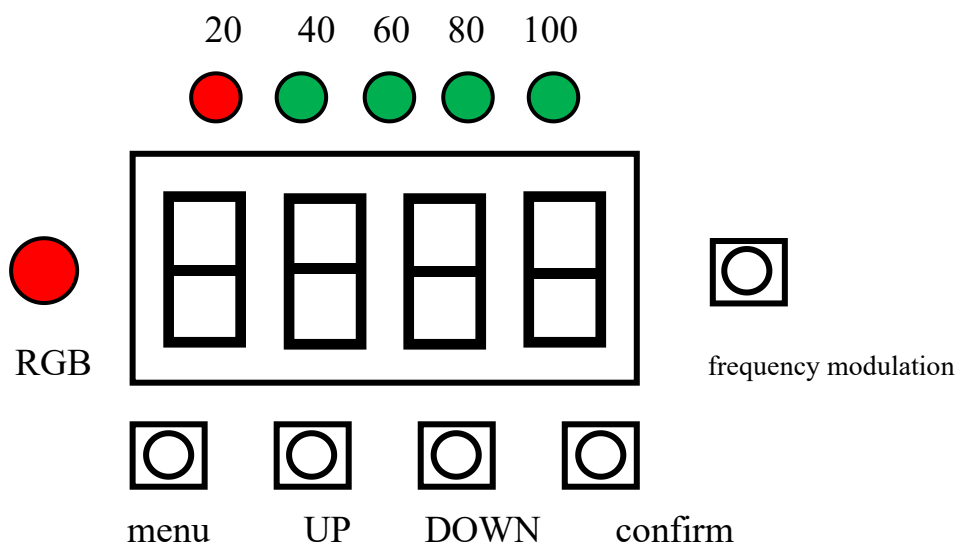

## 2、 Menu operation function:

display mode		Function description of display mode
<b>A001</b>	A001—A512)	Address code
<b>Chnd</b>	6CH	6-channel mode
	8CH	8-channel mode
	10CH	10-channel mode
<b>FAIL</b>	BLND	DMX512 data not held (black field)
	HOLD	DMX512 data retention
<b>CL01</b>	CL01—CL32	32 kinds of static color mixing mode, up and down key color selection  After confirmation, stroboscopic mode st00-st16, up and down key adjustment
<b>AUT0</b>	<b>AUT0</b>	All effect modes, speed mode sp01-sp16 after confirmation, up and down key adjustment
	<b>AUT1</b>	Change color self-propelled mode, confirm the speed mode sp01-sp16, up and down key adjustment
	<b>AUT2</b>	Gradient self-propelled mode, confirm the speed mode sp01-sp16, up and down key adjustment
	<b>AUT3</b>	Mutation self-propelled mode, confirmed speed mode sp01-sp16, up and down key adjustment
	<b>AUT4</b>	Change color stroboscopic self-propelled mode, confirm the speed mode sp01-sp16, up and down key adjustment
<b>SOU0</b>	<b>SOU0</b>	All voice control modes
	<b>SOU1</b>	Color changing voice control mode
	<b>SOU2</b>	Mutation voice control mode
	<b>SoOU3</b>	Color changing stroboscopic voice control mode
<b>WIFI</b>	<b>LED-XXX</b>	WiFi address

<b>NANU</b>	D000-255	Manual total dimming	
	R000-255	Manual red dimming	
	G000-255	Manual green dimming	
	B000-255	Manual blue dimming	
	W000-255	Manual white dimming	
	A000-255	Manual amber tone light	
	P000-255	Manual purple dimming	
	S000-255	Manual stroboscopic speed regulation	
<b>TEST</b>		Color self check	
<b>LED</b>	ON	Digital display on	
	OFF	Digital display off	
<b>IRCL</b>	ON	Infrared remote control on	
	OFF	Infrared remote control off	
<b>2.4G</b>	ON	Wireless 2.4G on	1、 1. Press the confirm key for 3 seconds to enter the radio FM mode: ID - 1 2、 3、 (1 red, 2 green, 3 yellow, 4 blue, 5 purple, 6 light blue, 7 white) 4、 5、 2. The red light flashes slowly when the host sends, and the green light flashes slowly when the slave receives 6、 7、 Error report notes
	OFF	Wireless 2.4G off	
<b>POUR</b>	ON	Switch on and off with one key, turn on	In any menu mode, press the menu key for 3 seconds to turn on or off the lamp
	OFF	Switch on and off with one key	
<b>VER</b>	V1.0	Software version number	

**3、 Advanced parameter setting: (in A001 mode, press the confirm key for 3 seconds to enter)**

R	000-255	Red current regulation
G	000-255	Green current regulation
B	000-255	Blue current regulation
W	000-255	White current regulation
A	000-255	Amber current regulation
P	000-255	Purple current regulation
L	LON	Current regulation mode all on
	LOFF	Current regulation mode monochrome
F	F006	600Hz refresh rate

	F012	1.2k refresh rate
	F020	2K refresh rate
	F040	4K refresh rate
	F120	12K refresh rate
	F240	24K refresh rate
T	T000	Temperature display (centigrade)
N	NOFF	Intelligent temperature control off
	N040-095	Intelligent temperature control on (power reduction parameter setting from 40 to 95 degrees, lights off above 95 degrees)
D	DON	Dimming delay on
	DOFF	Dimming delay off
C	C 0	Linear curve
	C 1	Square curve
	C 2	Logarithmic curve
	C 3	S-curve

#### 4、 Function of the channel:

Number of channels	6-channel mode	8-channel mode	10-channel mode
CH1	0 - 255 red dimming	0 closed light, 1-255 total dimming	0 - 255 total dimming
CH2	0 - 255 green dimming	0-10 closed light, 11-255 strobe (slow to fast)	0 - 255 red dimming
CH3	0 - 255 blue dimming	0 - 255 red dimming	0 - 255 green dimming
CH4	0 - 255 white dimming	0 - 255 green dimming	0 - 255 blue dimming
CH5	0 - 255 amber tone light	0 - 255 blue dimming	0 - 255 white dimming
CH6	0 - 255 purple dimming	0 - 255 white dimming	0 - 255 amber tone light
CH7		0 - 255 amber tone light	0 - 255 purple dimming
CH8		0 - 255 purple dimming	0-10 closed light, 11-255 strobe (slow to fast)
CH9			0-9 closed light  10-50 color mixing mode (with 10 channel color selection and mixing)  51-100 jump mode (with 10 channel speed regulation)

			101-150 gradient mode (with 10 channel speed adjustment) 151-200 mutation mode (with 10 channel speed regulation) 201-220 console jump voice control 221-240 console color changing stroboscopic voice control 241-255 console mutation voice control
CH10			0 - 255 speed (slow to fast)

The WiFi control operation steps of connecting mobile phone are as follows:

Step 1: install the app (LED lamp) of the software on the mobile phone first

Step 2: switch the lamp display function to WiFi mode, and led-xxx will appear after confirmation (XXX represents 3 digits)

Step 3: click the setting icon on the mobile phone, open WiFi and search the WiFi address, and LED will appear. For example, "led-xxx", click the link to exit this interface after successful connection.

Step 4: click the LED lamp icon on the mobile phone to display the successful link. (this lamp app control software can only be used

LED light control software)

Features: 1. Support advanced parameter setting of master-slave connection

2. Support standard DMX512 and wired RDM

3. Support software online upgrade

4. Support temperature control settings

5. Support wireless 2.4G connection

6. Support mobile app control (Android and apple)

## 5、 Infrared remote control function:



1. Dimming and speed, up key
2. Dimming and speed, next key
3. Off light off
4. On switch on
5. R, G, B, W, a, UV bond for 6 kinds of monochrome
6. 9 number keys for 9 kinds of static mixed color (AC 1 AC 9)
7. 0 key is A001 mode, receive mode, up and down key select address
8. Auto key for color change mode, up and down key selection speed
9. Strobe key for color selection strobe mode (32 options), up and down key selection speed
10. Fade key for gradient mode, up and down key selection speed
11. Sound key for voice control mode, up and down key selection mode

