

封面

Operation

1. Preparation: Connect one end of the USB cable to the main unit, and the other end to a power bank, PC or AC adapter.

2. Power On: Press and hold the Power Button to turn on the device. The indicator light will turn red (default heat level is high).

3. Heat Settings:

Press the Power Button to change heat level to:

High – Red light, 50°C (default)

Medium – Green light, 45°C

Low – Blue light, 40°C

4. Default Time: The default duration is 15 minutes. When time is up, the device will automatically turn off.

5. Power Off: Press and hold the Power button to manually turn off the device. The indicator light will also turn off.

Troubleshooting

When operational problems occur, please refer to the chart below. Do not disassemble the device or try to repair it yourself.

Problem	Possible Reason	Possible Solution
Power-On Failure OR Does Not Warm Up	USB cable is loose	Make sure the USB cable is properly connected on both ends
	Battery pack is low / out of charge	Charge battery pack
	AC adapter is defective	Change AC adapter

Storage

1. If left unused, checking the product and turning the power on every 3 months is recommended.

2. Do not place heavy objects on top of the device.

3. Do not store near the floor, wall or roof.

4. Maintain good ventilation and keep away from direct sunlight and corrosive gases.

Transportation

This product has a shockproof design and can be transported by air, railway, highway, or ship. Avoid exposure to rain, snow, and extreme heat.

Disposal and Recycling

This product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling or disposal of electrical equipment.

Technical information

Product Name: Breo iMask Graphene Heated Eye Mask

Model: HC D181

Voltage: 5V 

Power: 3.5W

Default Time: 15min

N.W.: 0.05lb (without USB cable)

Dimensions: L9.9×W3.6×H0.4 (in)




Body Source Technology (ShenZhen) Co., Ltd

19/F, Hisense Southern Building, No.1777 Chuangye Road, Yuehai Street, Nanshan District, Shenzhen 518054, China

Made in China

iMask

Graphene Heated Eye Mask

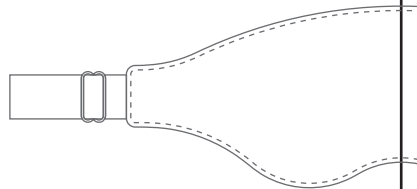

breo.

breo.

Thank you for choosing Breo.

Please read this manual carefully before use and keep it for future reference.

Precautions

Please read this user manual carefully and operate the heated eye mask accordingly.

1. Do not use the product under the following conditions:

a. In a location with extremely high temperature or humidity

b. If you suffer from swelling, inflammation or poor blood circulation of the eyes, or have had eye surgery

c. If you suffer from apoplexy, high blood pressure, or hypoglycemia

d. On very young children (parental supervision for children under 12 years old is also recommended)

2. People with impaired motor skills or suffer from physical and/or mental disorder should use this product under close supervision.

3. When you are ill, use this product with discretion.

4. This product features heat compression. Individuals who are incapable of or do not ordinarily feel heat/cold sensation should use this device with caution.

5. This device does not substitute health care professionals' advise and treatment. It is not for diagnosis, therapy or other medical purposes.

6. Use only the USB cable provided, use it with caution and according to electrical specifications.

7. Do not plug or unplug with wet hands.


8. Turn off and unplug the device before cleaning or washing.

9. To clean, lightly wipe with aseptic cotton and alcohol, or damp cloth, and air dry.

10. This product is NOT machine washable. Gentle hand wash and air dry only. Do not rub, wring or twist.

Inside the Package

The package includes 1 Main Unit, 1 Travel Pouch, 1 USB Cable, 1 User Manual

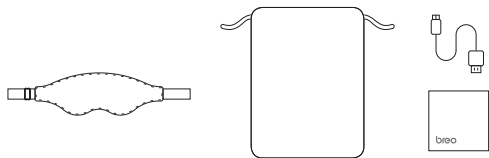

Features at a Glance



Blocks Out Light



Far Infrared



Ultimate Comfort and Fit

SIMPLY RELAX



封底