


## Indoor Refrigeration Chiller Unit

Model: COMP-IRCU-110400

Rev. A

## Operation Manual

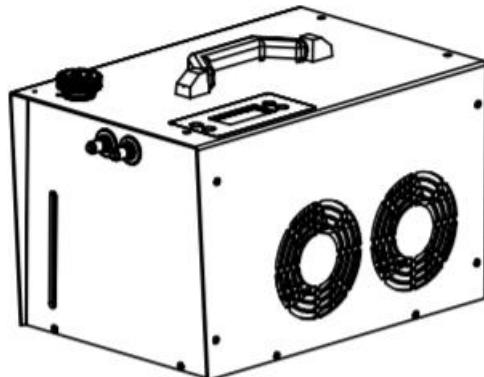

Compcooler, keep your body cool and comfortable in harsh conditions.

## COMPCOOLER Introduction:

Compcooler Technology specializes in working for personal cooling & heating systems for harsh conditions. Compcooler has established its resume as a manufacturer for Military, Electronic, Medical cooling equipment. The employees at Compcooler's state of the art manufacturing facility have been producing liquid heating & cooling systems over 15 years. Quality system: ISO9001 and AS9100 registered facility. Certifications for major items: CE, FCC, UL, PSE, CB, FDA.


## Product Categories

1. ICE Water Circulation Systems
2. Micro Refrigeration Chiller Units
3. Liquid Heating Systems
4. Liquid Cooling & Heating Garment and Pad
5. Customized Cooling Systems
6. Industrial Chiller or Cooling Module

## Certifications for major items



## Quality System for facility

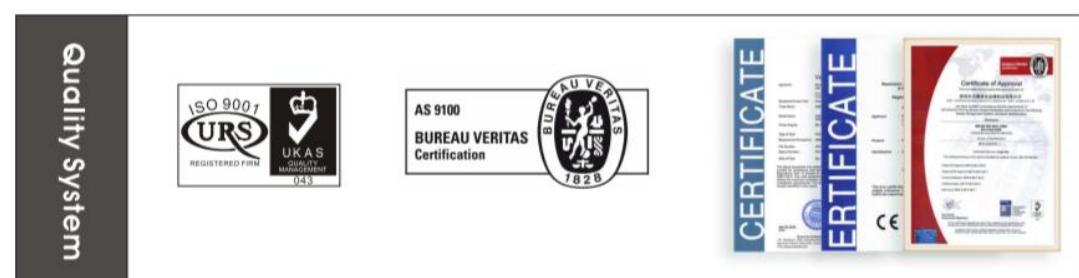


Compcooler, keep your body cool and comfortable in harsh conditions.

## Indoor Refrigeration Chiller Unit

Model: COMP-IRC-110400

### Description:

Compcooler Indoor Refrigeration Chiller Unit (IRC-110400) was designed for indoor cooling application, powered by connect 110V or 220V wall inlet plug. IRCU uses AC compressor refrigeration system to cool the liquid, pump circulates the cold liquid to cooling vest and continuously flow around the body, it will keep user's body temperature at a comfortable range to against heat stress. IRCU delivers 400W cooling capacity. User can set up the temperature from -5°C to 30°C (23°F to 86°F), main board will control the ON/OFF operation of refrigeration once circulation liquid reaches to set point temperature. User may pre-cool the unit and get the lowest temperature as he needs, iceless cooling unit, maintain free, quiet operation. This model is good for indoor body cooling by connect with cooling garment or cooling pad.

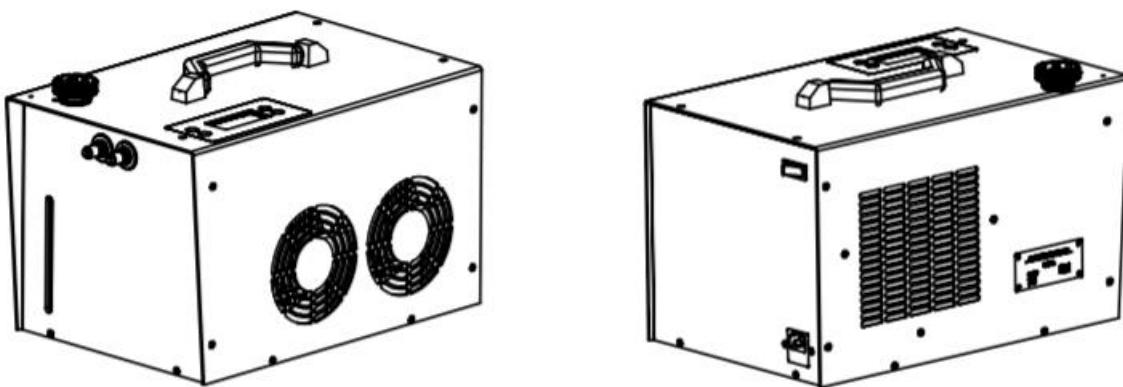

### Components List:

Item	Part number	Description	Quantity
1	COMP-IRC-110400	Micro Refrigeration Chiller Unit	1
		Power Cord	1
2	COMP-ET2M	Extension Tubing 2 meters	1
3		Operation Manual	1


Compcooler, keep your body cool and comfortable in harsh conditions.

## Chiller Unit Technical Datasheet

Cooling Capacity (Ambient Temp. 40°C)	W	400
Cooling Capacity (Ambient Temp. 104°F)	Btu	1364
Max Cooling Capacity	W	500
Power Supply	V AC	110 or 220
Operation Current	A	1-2
Max Current	A	3
Max Power Consumption	W	250
Refrigerant	Type	R134a
Compressor Operation		ON/OFF
Temp Control	°C	-5 to 30
	°F	23-86
Coolant	Anti-freeze liquid	Yes
Rotary Compressor	Qty	PC
	Voltage	V AC
	Discharge	CC
Fan	Qty	PC
	Voltage	V AC
	Air Flow	CFM
Pump	Voltage	V DC
	Water flow	L/Min
	Lift	M
Power Connector	Type	3 pins
Operation Ambient	Max	°C
Storage Temp		°C
Noise	Max	dBA
Color		Silver
Dimension	L x W x H	mm
		inch
Weight	KGS	11
	LBS	24.2

Compcooler, keep your body cool and comfortable in harsh conditions.

## Dimension of Chiller Unit

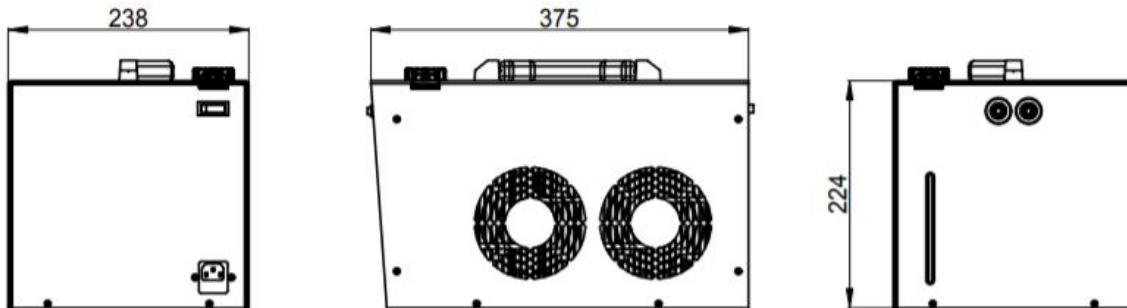

## **Operation processes**


### Preparation

#### Chiller Unit Installation:

Unit could be installed on the flat surface, make sure it is a well-ventilated area, no blocks for fresh air inlet and outlet.

#### Power Connection

One power cord was provided with chiller, user may connect it with wall inlet plug 110V or 220V.  
**Please make sure the unit voltage before operation!**

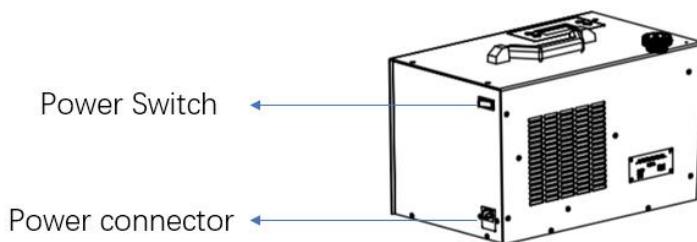

#### Cooling Garment Connection

User may connect the chiller with Compcooler Cooling Vest or Cooling pad by quick release fittings. One extension tubing was provided with chiller.

Chiller unit is compatible with all Compcooler garment, if you want to try other brand garment, please remove the quick fitting from extension hose and replace the new fittings to compatible with other cooling garment.


#### Circulation Liquid

User needs to fill circulation liquid by twice.

**Compcooler, keep your body cool and comfortable in harsh conditions.**

The first time, remove the filler cap from top side, add liquid to full by funnel, connect the cooling garment, turn on the pump and circulates the liquid from reservoir to cooling garment.

The second time, keep running and allow the liquid cooling garment fill with water for 30-60 seconds (without cooling), refill again to full (maybe couple times, be patient), then tight the filler cap.

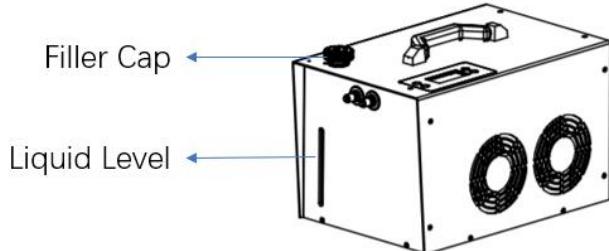

Clean or distilled water is fine if ambient more than 1°C

Deionized water for isolation request.

Anti-freeze liquid for ambient below 0°C.


**DO NOT** use salt water, caustic, corrosive or flammable fluids!

#### Refrigeration or Pre-cool Testing

User may turn on the system and start refrigeration, no pump circulation, temperature will down in minutes. Cooling unit will be in standby mode once liquid temperature reaches to setting point.

## Operation Processes

- Garment or Pad connection: Connect the extension tubing with liquid heating unit. Connect the liquid cooling garment or pad at the other end.  
Once you hear a click, it's in position.

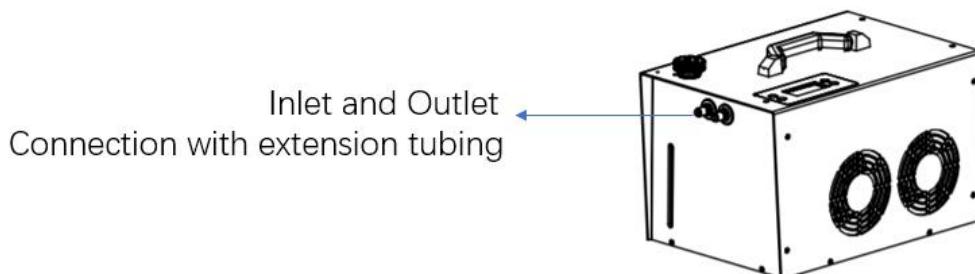


- Power connection: turn on power switch and light the front panel.

The cooling unit will be in standby mode.

- Start cooling: user may press ON/OFF to start chiller, liquid temperature will go down to set point in minutes.  
pump is not working at this time.

**Compcooler, keep your body cool and comfortable in harsh conditions.**

4. Temp setting: user may press up and down to set up the temp for circulation liquid as need.
5. Start circulation:  
User may press the pump to start or stop circulation. Please make sure the tubing is connected (no kinks) before circulation.

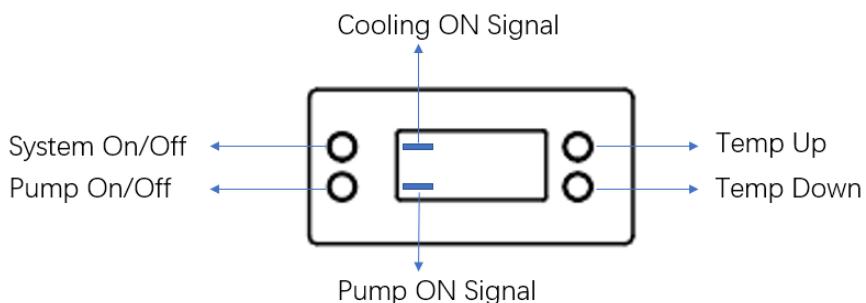

## Clean and Maintenance

### Chiller Unit:

Unplugged the power, use a clean damp cloth to clean the outside of chiller unit.  
Use compressed air to remove dust and debris.

### Reservoir cleaning

Please disconnect the extension tubing from chiller unit.  
Empty the remain water or liquid from drain cap on the bottom, and open for dry.

### Condenser clean

To keep the system at optimum cooling capacity, the condenser should be kept free of dust and dirt, user may check and clean it if necessary.  
Open the side panel and remove the fans, use 50-100psi compressed air to clean the contamination.

### Charging Refrigerant

(not recommend for uncertified operator)

If cooling capacity was decreased because of lack of refrigerant, user may vacuum the unit and recharge 2000g R134a refrigerant.

### Liquid Heating & Cooling Pad or garment:

Machine wash, wash liquid heating and cooling pad using a front-loading wash machine with cold water on a gentle/delicate cycle, secure the connection tubes to minimize risk of it flailing in the spin cycle and damaging connector and tubing sewing.

Note: DO NOT BLEACH, NO IRON, NO DRYER, TUMBLE DRY ON LOW

**Compcooler, keep your body cool and comfortable in harsh conditions.**

## Chiller Unit Storage:

1. Turn off chiller unit, disconnect the power cord.
2. Disconnect the extension tubing.
3. Empty the circulation water from chiller unit by open bottom drain cap, then clean and disinfect the reservoir, then tight the cap after open dry.
4. Pack the unit for storage.

Restart: after long term storage, please fill in clean water with less degerming agent, run system over 10 minutes with cooling vest connection. Then empty the system and re-fill in the liquid as need.

## Trouble shoot and Fault Code

Item	Code	Description
1	E1	Wrong Polarity or reverse connection from power input
2	E2	Low voltage protection, less than 18V
3	E3	High voltage protection, more than 32V
4	P1	No liquid temp signal from sensor

## Cautions:

1. Please confirm chiller voltage is 110V or 220V before connect power.
2. Please do not turn ON/OFF to run to stops system frequently within a short period, it may affect the refrigeration system, and significant enhance power consumption.
3. Please do not block air inlet and outlet, it may cause the problem of compressor overheat or less cooling capacity.
4. Please make sure cooling garments or vest be connected before start pump circulation, it may cause unit leak because of pump pressure.
5. Please use anti-freeze liquid if temperature setting lower than 0°C
6. Please do not run the system close to fire or under water.
7. Max operation temp is 45°C, unit could be overheated protection in hot ambient.
8. Please stop operation and disconnect the power if high vibration or abnormal noise.

Compcooler, keep your body cool and comfortable in harsh conditions.

**Safety:**

It is important to become thoroughly familiar with the manual and operating characteristics of the unit. It is the owner's responsibility to assure proper operator training, installation, operation and maintenance of the unit. Observe all warning can result in injury to the operator and severe mechanical damage to the unit.

**Warranty:**

Compcooler Warrants to the original Purchaser that products sold shall be free from defects material and workmanship for warranty period not exceed one year from the date of shipment. Compcooler agrees to correct for the original user of this product, either by repair, or at the manufacturer's election by replacement. This warranty shall not apply if the defect or malfunction was caused by accident, neglect, unreasonable use, improper service, or other causes not arising out of defects in material or workmanship. The manufacturer's sole obligation under this warranty is limited to the repair or replacement of a defective product and shall not in any event be liable for any incidental or consequential damages of any kind resulting from use or possession of this product.



Personal Thermal Technology,  
Keep you body cool and comfortable in harsh conditions!

**Compcooler, keep your body cool and comfortable in harsh conditions.**