

WARRANTY

If your product does not work properly because of a defect in materials or workmanship, our Company (referred to as "the warrantor") will , for the length of the period indicated as below, **(Parts(2)Year ,Labor(90) Days)** which starts with the date of original purchase ("Limited Warranty period"), at its option either(a) repair your product with new or refurbished parts, or (b) replace it with a new of a refurbished product. The decision to repair or replace will be made by the warrantor.

During the "Labor" Limited Warranty period there will be no charge for labor.

During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of original purchase date is required for Limited Warranty service.

Mail-In Service

When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone and/or email address where you can be reached.

LIMITED WARRANTY LIMITS AND EXCLUSIONS

1) This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, maladjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or service by anyone other than a Factory Service center or other Authorized Service, or damage that is attributable to acts of God.

2) THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANT. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the service, loss of or damage to media or images, data or other recorded content. The items listed are not exclusive, but are for illustration only.)

3) PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

4-PORT 4K HDMI KVM Switch

OPERATION MANUAL

The device supports switching four computer's HDMI video and USB signals to one monitor and USB signals' device.

Apply to bank, transportation, education, home, conference, hotel, etc.



Dear Customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

FEATURES

- Computer: HDMI input maximum support 4K2K60Hz RGB4:4:4, 8 Bit with Downscale
- Display: HDMI input maximum support 4K2K60Hz YUV 4:4:4, 8 Bit
- Supports HDCP2.2 and HDCP1.4;
- The Four USB-TYPE B interface pass through four USB interface to the corresponding host of HDMI signal channel.
- Support analog audio extraction, uncompressed audio PCM.
- Supports pass-through of audio formats including LPCM 2.0/5.1/7.1, Bitstream, and HD Bitstream
- Operating system support WindowsXP/WIN7/WIN10/Apple/Ubuntu,etc
- Support hot plug, connect or disconnect devices to the KVM switch in any time and without turn off devices.
- Support auto switching (monitor the devices in a specified time interval.)
- Support keyboard's hot keys to control the KVM switch.
- Available to use keyboard and mouse without any delay after switching the host devices.
- With mounting ears

PACKING CONTENTS

- 1) HDMI KVM switch, 1 user manual.
- 2) 12VDC Power Supply.
- 3) Operating Instructions.
- 4) Mounting ear 1 pair.

NOTICE

Our company reserves the right to make changes in the hardware, packaging and any accompanying documentation without prior written notice.


MAINTENANCE

Clean this unit with a soft, dry cloth. Never use alcohol, paint thinner or benzene to clean this unit.

PRODUCT SERVICE

- 1) **Damage requiring service:** The unit should be serviced by qualified service personnel if:
 - (a)The DC power supply cord or AC adaptor has been damaged;
 - (b)Objects or liquids have gotten into the unit;
 - (c)The unit has been exposed to rain;
 - (d)The unit does not operate normally or exhibits a marked change in performance;
 - (e)The unit has been dropped or the cabinet damaged.
- 2) **Servicing Personnel:** Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.
- 3) **Replacement parts:** When parts need replacing ensure the service uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
- 4) **Safety check:** After repairs or service, ask the service to perform safety checks to confirm that the unit is in proper working condition.

CONNECTION DIAGRAM

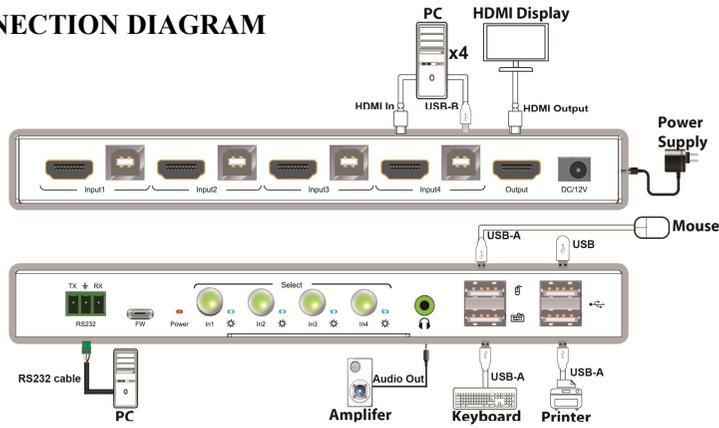

HOW TO USE KEYBOARD HOT KEYS:

To enter Hotkey mode, press Scroll lock twice quickly, the buzzer beeps once. Input any Hotkey combination that follows; the buzzer beeps once when input is completed. (CTRL = Scroll Lock in the chart below, double clicking Scroll Lock also has the effect of double clicking CTRL)

Hotkey Combination	Function
1.Ctrl + Ctrl + Page Up	Previous port
2.Ctrl + Ctrl + Page Down	Next port
3.Ctrl + Ctrl +space	Automatic switching.The default switching time is 6 seconds.Adjustable switching time.And the minimum switching time is 6S.
4.Ctrl + Ctrl + +\-	Adjust the auto-switch time.
5.Ctrl + Ctrl + F12	Enable/Disable buzzer,Non-volatile Memory
6.Ctrl + Ctrl + 9	automatic switch:Double click mouse wheel + mouse left click
7.Ctrl + Ctrl + 1~2	Select PC port directly (1-2 ports can be selected directly)
8.Ctrl + Ctrl + f+l+a+s+h+Space	Factory Settings

SPECIFICATIONS


1). Input resolution list

Resolution	I/P	Resolution	Color Space(RGB,Y UV444,YUV4 22.YUV420)	Support
50Hz	I	576i	√	√
	P	576P	√	√
	P	720P	√	√
	P	1080P	√	√
	I	1080i	√	√
59.97/60Hz	I	480i	√	√
	P	480P	√	√
	P	720P	√	√
	P	1080P	√	√
29.97/30Hz	P	4K2K	√	√
	P	720P	√	√
	P	1080P	√	√
25Hz	P	720P	√	√
	P	1080P	√	√
	P	4K2K	√	√
24Hz	P	720P	√	√
	P	1080P	√	√
	P	4K2K	√	√


2). VESA Resolution (RGB8bit)

Resolution	Resolution	Support
60Hz	800×600	√
	1024×768	√
	1280×768	√
	1280×1024	√
	1600×1200	√
	1680×1050	√
	1920×1080	√
	1280×720	√
	1360×768	√
	1920×1200	√
	3840×2160	√

PANEL DESCRIPTIONS

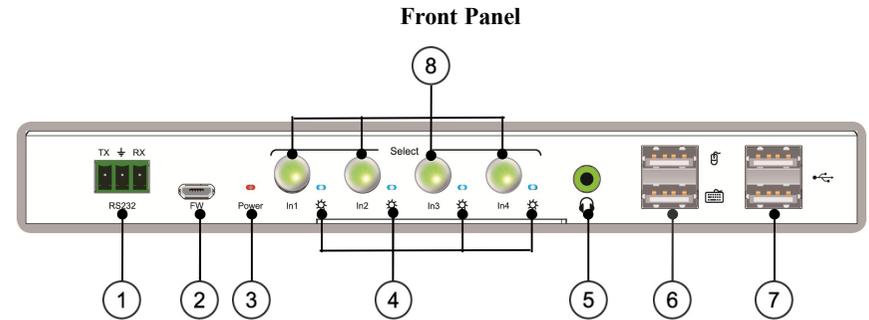

- 1).RS232 port
- 2).FW port
- 3).Red Status = power connected
- 4).Blue Status = USB connected
- 5).Analog audio.
- 6).USB keyboard and mouse output ports.
- 7).USB2.0 port(Connect U disk and the printer)
- 8).Switch button

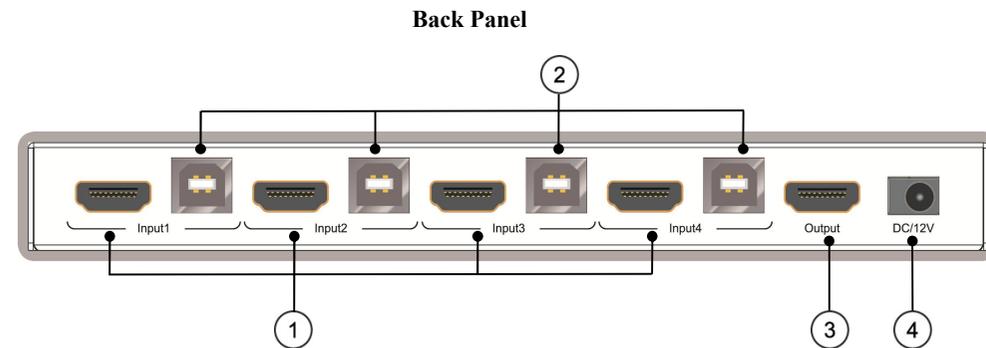

- 1).HDMI input.
- 2).USB host ports.
- 3).HDMI output.
- 4).12V DC power input.

Connecting and Operating

- (1) Connect all the PCs to the HDMI KVM switch by HDMI cable and USB A-B cable, then start all the PCs.
- (2) After all the PCs are started in step 1, then you can switch to any PC by keyboard hot key or the key pad on the KVM panel. (For example, if you want to control the PC connected to HDMI IN 2 just press the key under the PORT 2 LED indicator, or the keyboard hot key commands described following).