
MOMAN



User Manual

Thank you for choosing MOMAN product. Please read this manual carefully before use and follow all instructions mentioned herein.

Caring For Your MOMAN Product


- Please keep the product in a dry, clean, dust-free environment.
- Keep corrosive chemicals, liquids and heat source away from the product to prevent mechanics damage.
- Use only a soft and dry cloth for cleaning the product.
- Malfunction may be caused by dropping, impact of external force.
- Do not attempt to disassemble the product. Doing so voids warranty.
- Please have the product checked or repaired by authorized technicians if any malfunctions happened.
- Failure to follow all the instructions may result in mechanics damage.
- Warranty does not apply to human errors.

Package List



EMR Microphone *1 Type-C to USB Cable *1 Type-C to Type-C Cable *1

Product Introduction

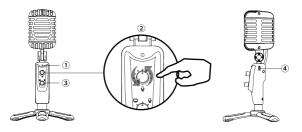

Working Indicator

Power On, Normal Recording Power Off	Green Light On	Light Off
	Power On, Normal Recording	Power Off


② Volume Control

Rotate clockwise:increase mic volume
Rotate anticlockwise: decrease mic volume

Monitoring Adjustment

Rotate toward left: Mic Output -, Computer Output + Rotate toward right: Mic Output +, Computer Output -


4 Type-C Output

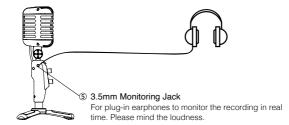


Operations

1. The Use of Desktop


Microphone Stand

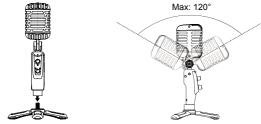

2. Adjustable Microphone Angle

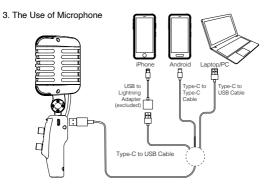

Specifications

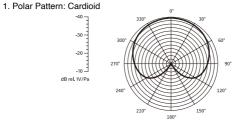

2. Performance Parameter

Transducer	Electret Condenser
Frequency Response	20Hz-20KHz
Headphone Output Power	125mW
Sensitivity	-38±3dB (0dB=1V/Pa,at 1KHz)
Sampling Rate	192KHz/24bit
Max. SPL	132dB(at 1KHz≤1% T.H.D)
S/N Ratio	85dB
Equivalent Noise Level	-82dBFS
Power Supply	DC 5V
Dimensions	57.5mm*64.5mm*220mm
Output	Type-C
Net Weight	129g

Moman (UK) Limited

- 9 Unit 25 Basepoint Business Centre, Aviation Park, West Christchurch, United Kingdom BH23 6NX

- https://moman.co/youtube