




Smart Life


Thank you for using smart camera

1.Product Introduction


Packing list: Smart Camera × 1, Manual × 1, USB Power Cord × 1, Power Adapter × 1, Screw Accessories Package x 1

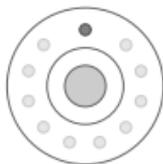


Smart Camera

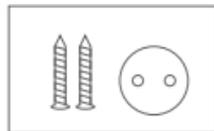


Screw Accessories Package



USB Power Cord

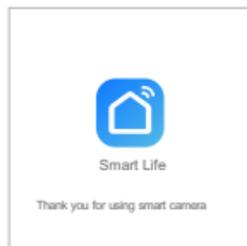

Manual

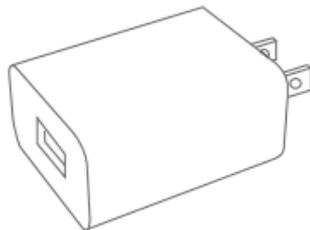

Power Adapter

Basic Parameters

Product Name: Smart Camera

Lens: 110°wide angle

Pixel: 1.0Mp/2.0MP

Video Compression: H.264 High Profile

Image Enhancement: Digital Wide Dynamic 3D Noise Reduction

Local Storage: MicroSD card

Wireless Encryption: WEP/WPA/WPA2 Encryption

Power Input: 5V 1.6A

Total Power Consumption: 3.5W (Max)

WirelessStandard: 2.4G 802.11 b/g/n

Support Platform: Android/iOS

Component Description:

Reset Button: Long press "reset" hole 5sec, there's voice prompt, Restore factory setting", reset success.

It is recommended to insert 8-64GB high-speed Micro SD card, otherwise it will not be able to store, view historical video and support Important functions such as firmware upgrading.

2.Install APP

Download APP: scan the QR code below to download and install.

Register and login: open the " Smart Life" APP to register and login according to the prompts.






3. Add The Device

Please make sure that there is a available Wi-Fi and the Internet is connected. Find the USB interface at the bottom of the device and insert the power cord to connect with power, then there's voice prompts "camera start up " . " please configure the network. "

Then go to APP home page, click the "+" on the main screen, and click the "smart camera".

Select the "QR code configuration " in the upper right corner, click confirm and add according to the mobile phone prompt.

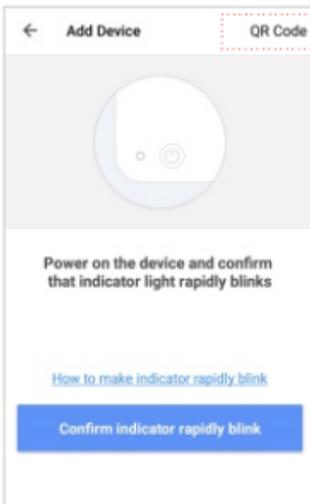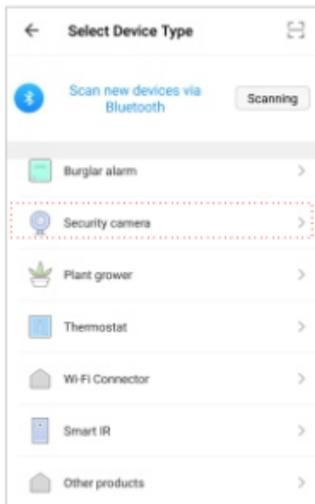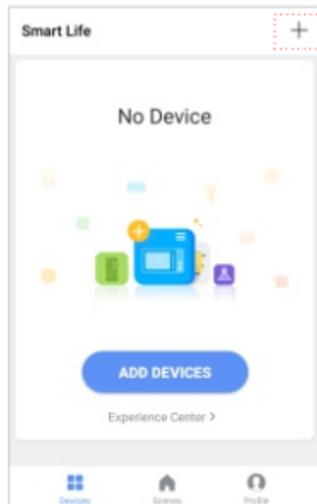

4.APP Video Browsing Details



5.Matters Need Attention

Try to keep away from the metal space ;

Avoid the furniture , microwave oven blocked;

Avoid the space where the audio, video and data lines are wound, and keep the space away from them as large as possible;

Ensure that as close as possible to the coverage of wireless Wi-Fi signals. Switching network environment;

In the new network environment, please press the reset hole about 5 seconds, After hearing the voice prompt "restore the factory settings" and then connect to the network.

The name and content of the harmful substances in the product

Part Name	Harmful Substance					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
shell	○	○	○	○	○	○
Board	X	○	○	○	○	○
charger	○	○	○	○	○	○
annex	○	○	○	○	○	○
This form is based on the provisions of SJ/T 11364.						

This product conforms to RoHS environmental protection requirements. At present, there is no mature technology in the world to replace or reduce the lead content in the electronic ceramics, porcelain, optical glass, steel and copper alloy.

Maintenance records: _____

Maintenance time: _____

Fault conditions: _____

Fault cause: _____

Troubleshooting: _____

Return and exchange proof: _____

Date of validity: _____

Original device ID: _____

New device ID: _____

maintenance personnel signature: _____

Maintenance Department seal: _____

Maintenance voucher of intelligent

Customer: _____ Mobile: _____

Address: _____

Model: _____ Camera ID: _____

Device store: _____ Date of purchase: _____

Store address: _____

Store contact number: _____

Maintenance voucher of intelligent

Customer: _____ Mobile: _____

Address: _____

Model: _____ Camera ID: _____

Device store: _____ Date of purchase: _____

Store address: _____

Store contact number: _____