



LincPlus SSD and Windows 10 OS Installation Guide

Published: February 2021

Version 1.1



Content

About this guide.....	3
How to install SSD.....	3
How to install Windows 10 OS.....	8



About this guide

This guide is designed to install SSD and how to install windows 10. For more information, see the content below in this guide.

How to install SSD

Please check the model of your notebook, and choose the correct steps as below:

LincPlus P1&P2 SSD installation steps:

Note: the notebook must be shut down before installing the SSD

Compatible SSD: M.2 2280;B+M type;SATA interface(Don't support NVMe and PCIe)

Friendly Tips: You can find LincPlus' SSD in Amazon.de and it can be delivered to UK and France. We suggest you choose LincPlus' SSD so that we can provide better technical support service and one year warranty service.



1. Find the SSD cover on the back of the laptop. Twist the SSD cover screw and remove the cover.
2. Insert the SSD into the interface, and screw it to fix the SSD. *(PS: You should twist the screw on the left of the SSD, so that the SSD can be fixed well.)*

NOTE: please place the SSD face up on the P1 and face down on the P2, make no mistake, this is very important:



3. After assembly finished, close the SSD cover and tighten the screws.



LincPlus P3 SSD installation steps:

Note: the notebook must be shut down before installing the SSD

Compatible SSD: 2.5";SATA interface(Don't support NVMe and PCIe),like this:



1. Find the SSD cover on the back of the laptop. Twist the SSD cover screw and remove the cover.


2. Insert the SSD into the interface, and screw it to fix the SSD:







3. After assembly finished, close the SSD cover and tighten the screws.

Now, the installation of SSD has finished, please turn on the notebook:


1. Find the Windows icon,  (in the bottom left corner) right click it, and choose **"Disk Management"** to manage the new disk. Please see the following picture:

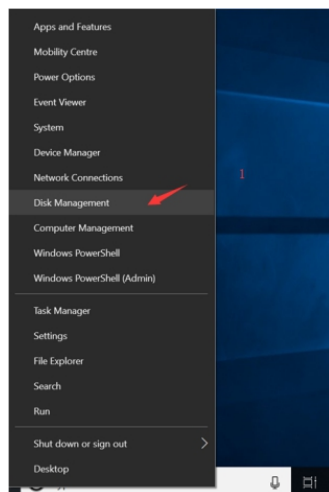

2. And then you can see the following picture appearing on the screen. Please click **"OK"**:

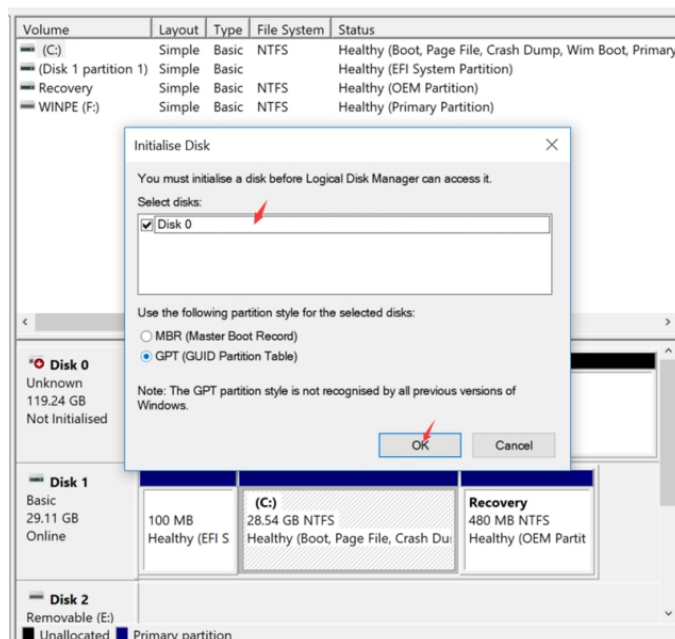

3. Right Click the New Disk(see the left picture), and choose **"New Simple Volume..."**:

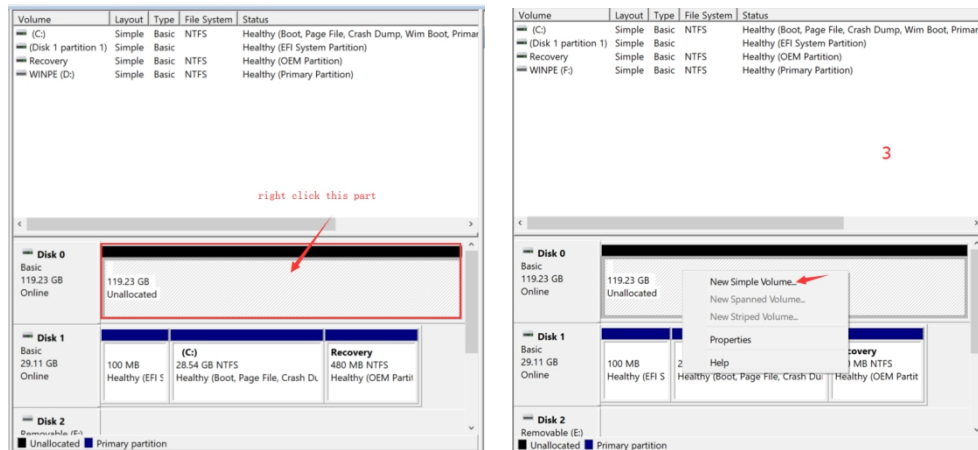

4. Keep clicking **"Next"** until you see **"Finish"**.

5. Last you will see the SSD at **"This PC"**.

How to install Windows 10 OS


NOTE: Please backup your important files to prevent them from being lost before installing Windows.

1. You need to prepare a USB flash drive of 8G or more. (Because the size of the OS files may more than 7GB)


PS: The USB flash drive should be empty, because during you fixing the Windows, the files in the laptop may lose.

2. Surf the internet and download the windows update tool as below:


<https://www.microsoft.com/en-us/software-download/windows10>

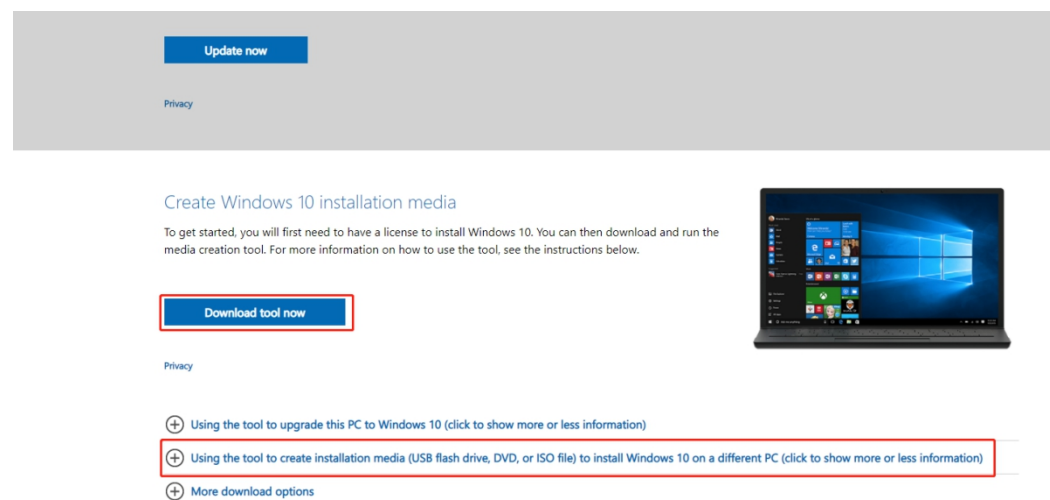


3. Save and run the tool, and insert the USB flash drive:

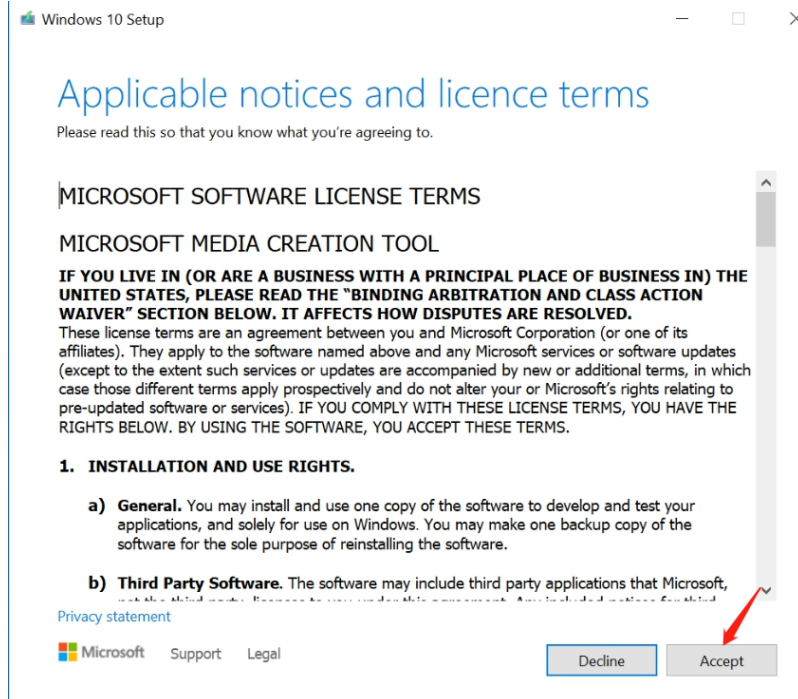

4. choose the second option:

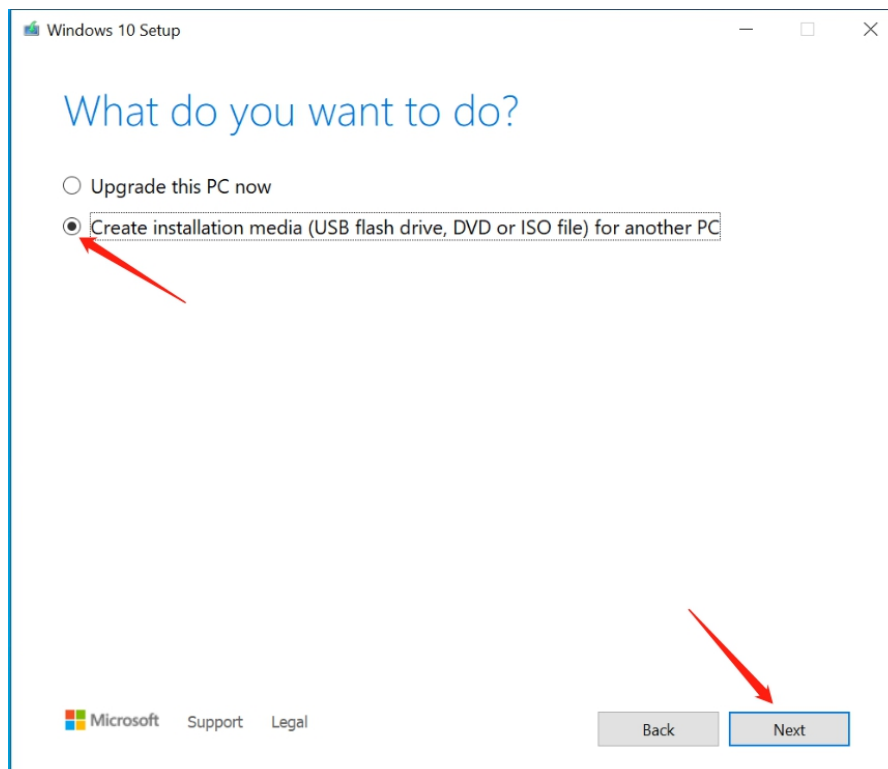

5. choose language:

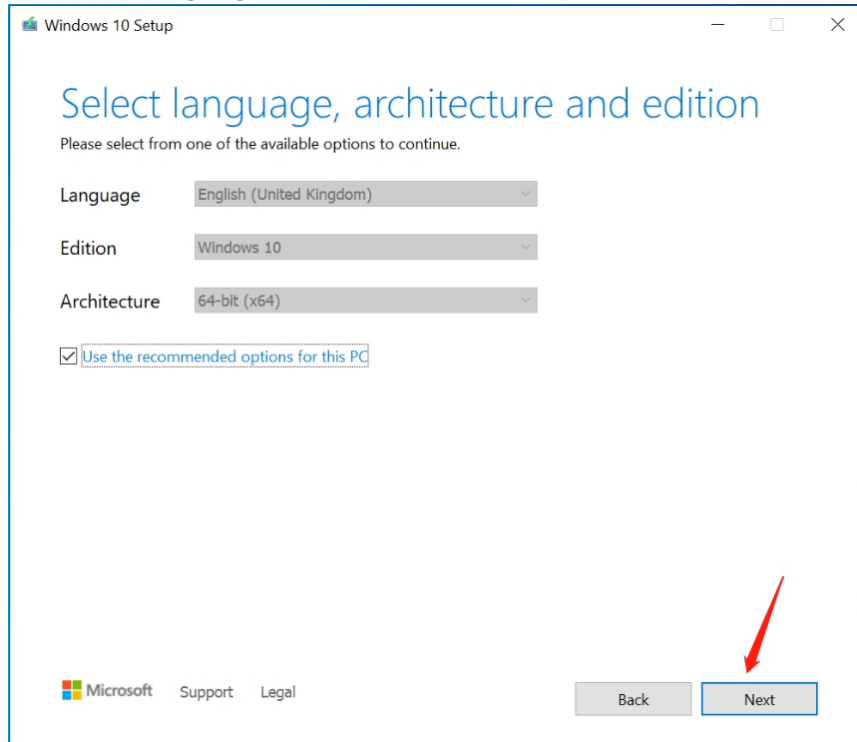

Windows 10 Setup

Select language, architecture and edition

Please select from one of the available options to continue.

Language: English (United Kingdom)

Edition: Windows 10


Architecture: 64-bit (x64)

☒ Use the recommended options for this PC

Microsoft Support Legal

Back Next

6. choose first option:

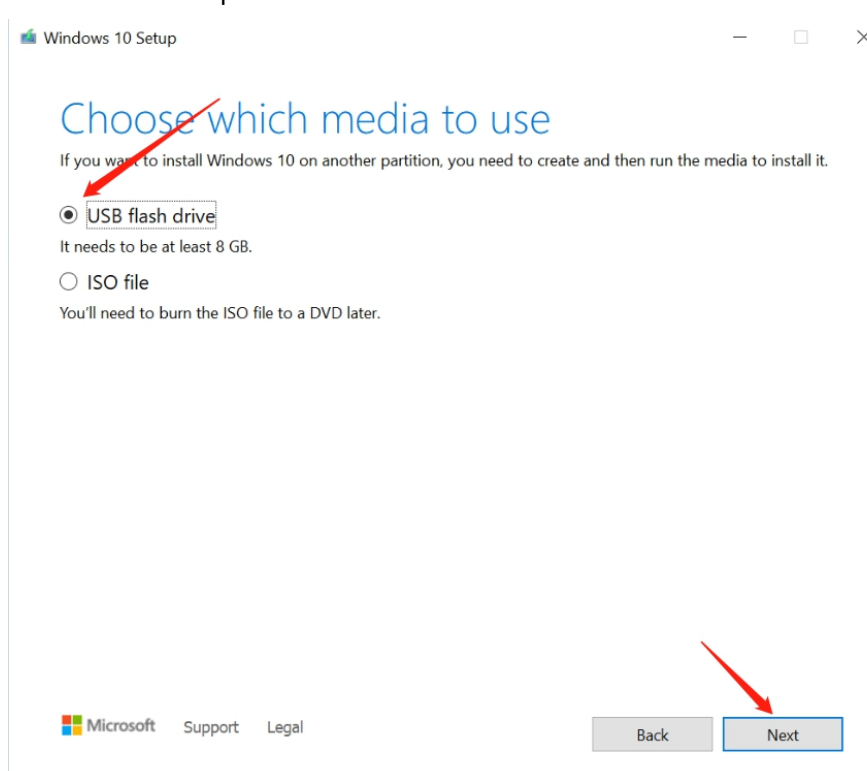

Windows 10 Setup

Choose which media to use

If you want to install Windows 10 on another partition, you need to create and then run the media to install it.


☒ USB flash drive
It needs to be at least 8 GB.

☐ ISO file
You'll need to burn the ISO file to a DVD later.


Microsoft Support Legal

Back Next


7. Next:

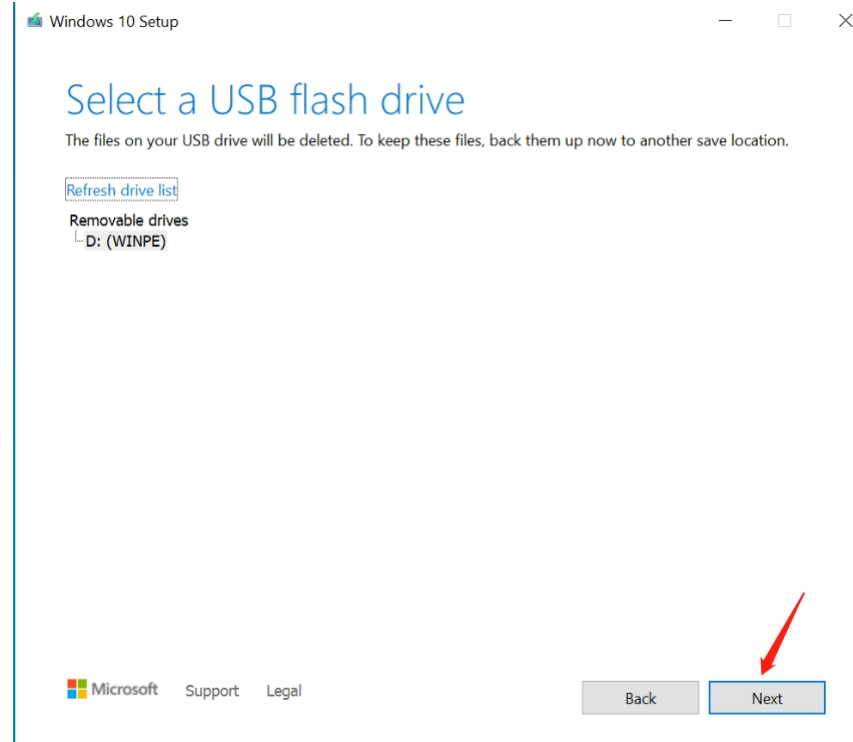


8. Waiting for download:

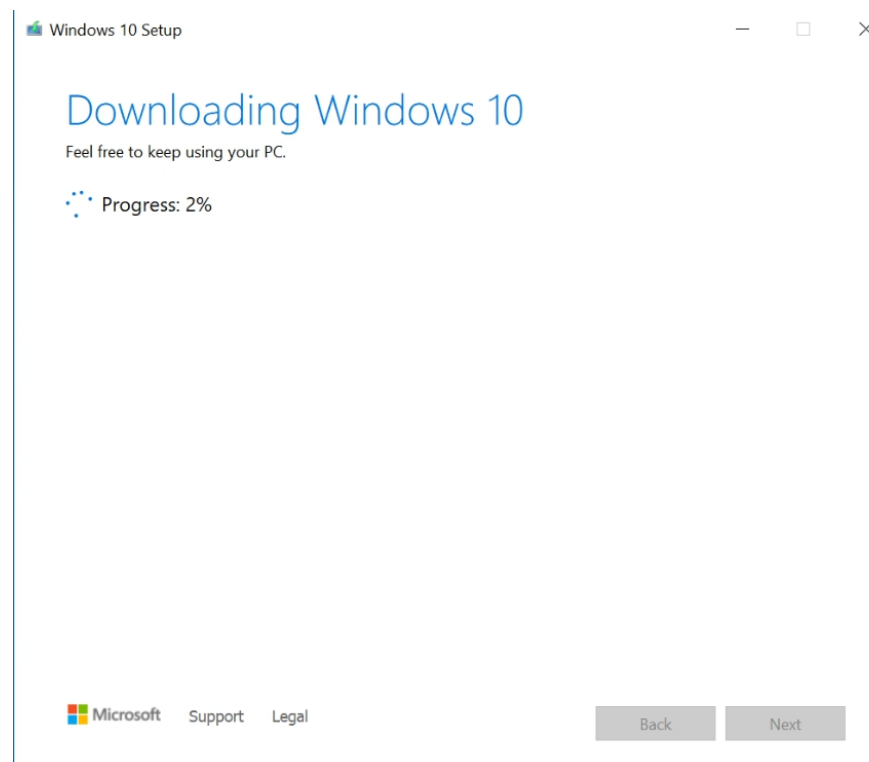


9. Finish:

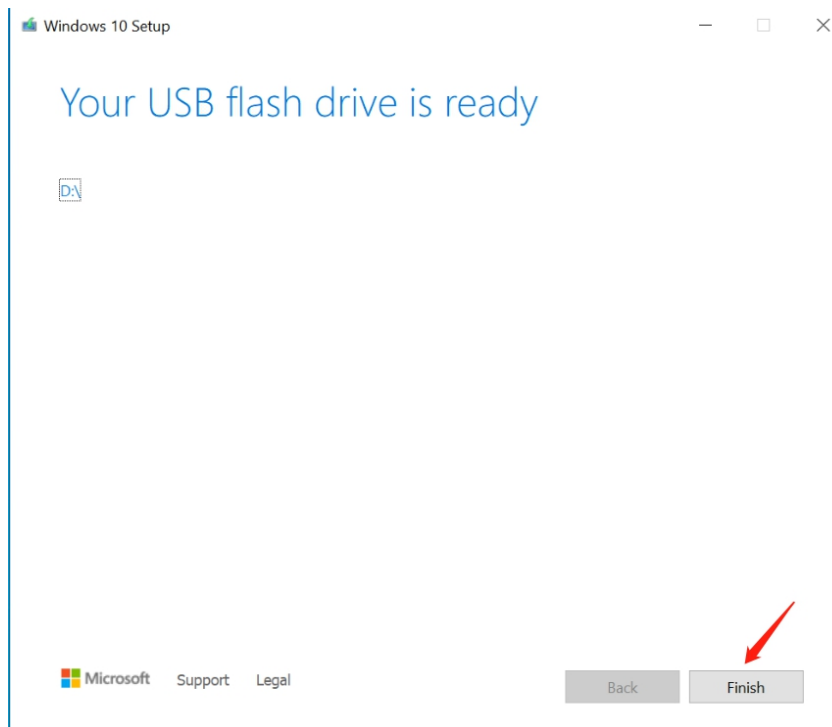

10. Remove the USB flash drive.

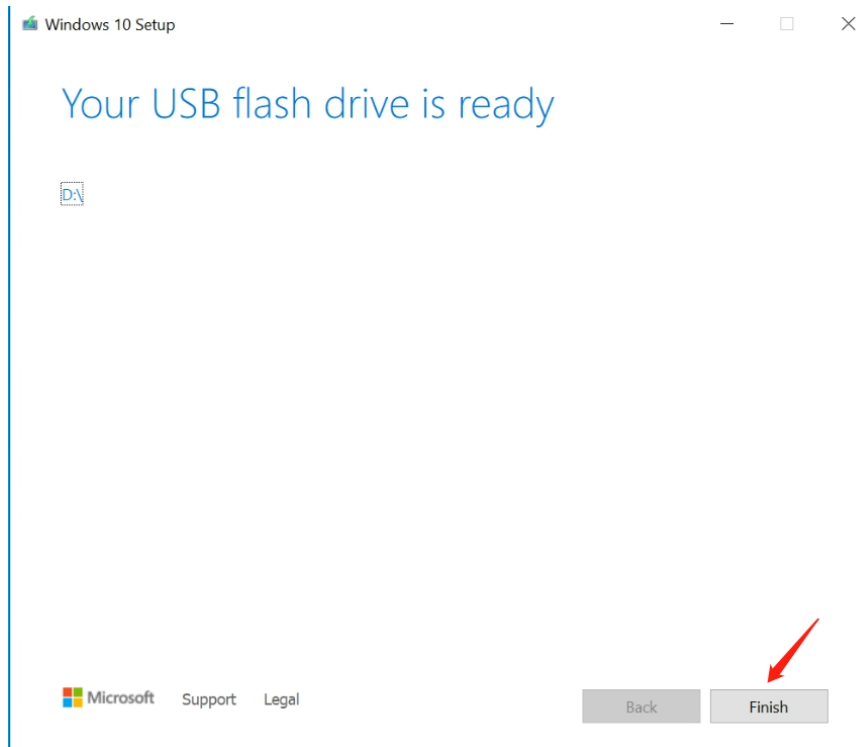


11. Turn off the laptop and Insert the USB flash drive into the USB port. Turn on the laptop and press "**F7**" until boot option appears in the screen. (hold down "**Fn**" and knock "**F7**" continuously, some model need press "**Fn**" + "**F7**")

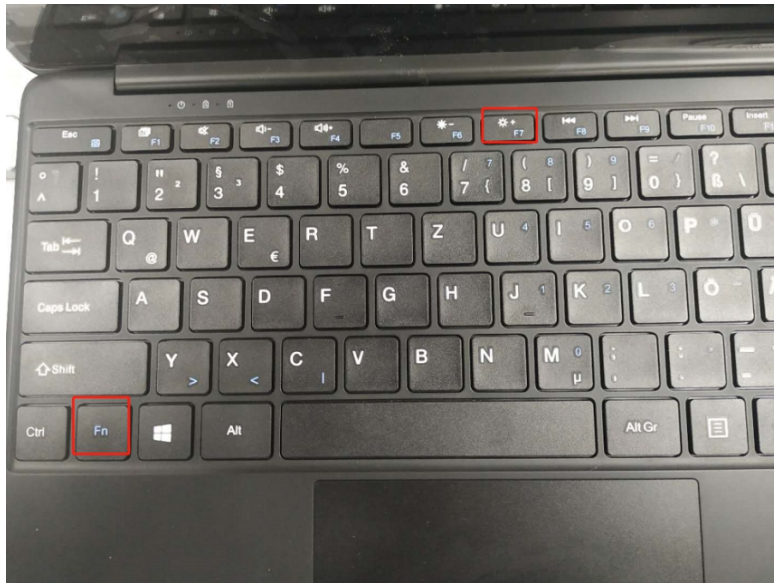


12. Then you can see the picture appears in the screen. You should choose your USB flash drive, and press "**Enter**":


(My USB flash drive is Kingston Data Traveler, so that you can fix the OS out of from your USB flash drive)

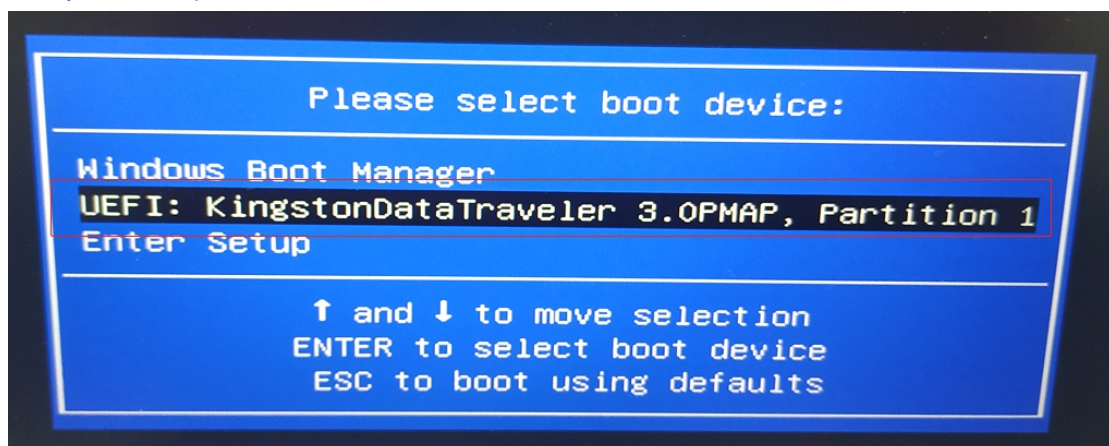


13. Next:

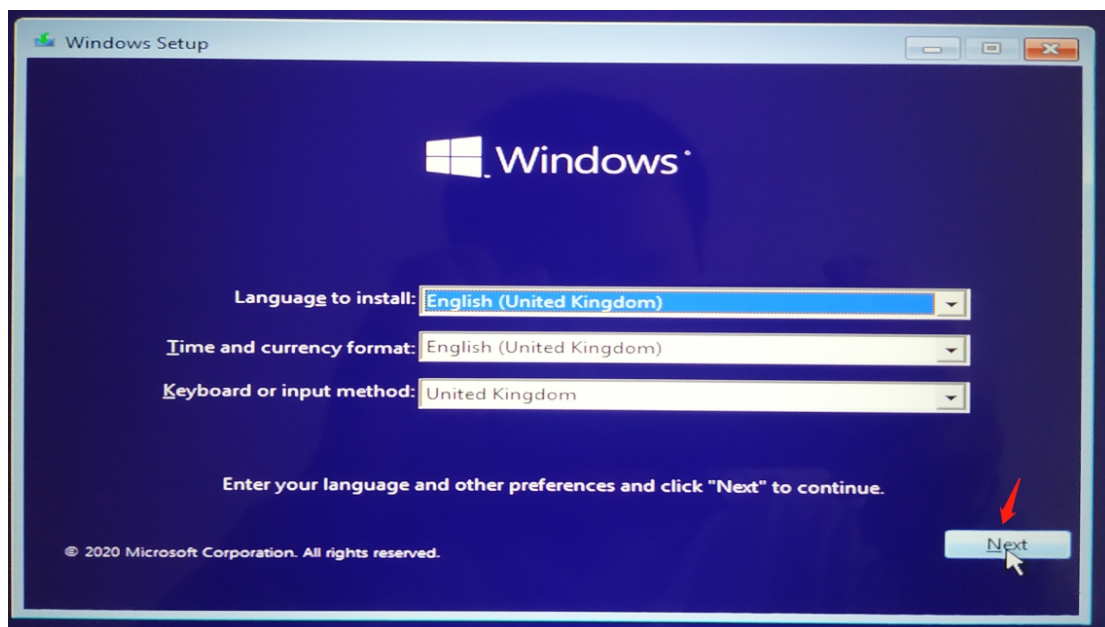


14. Install now:

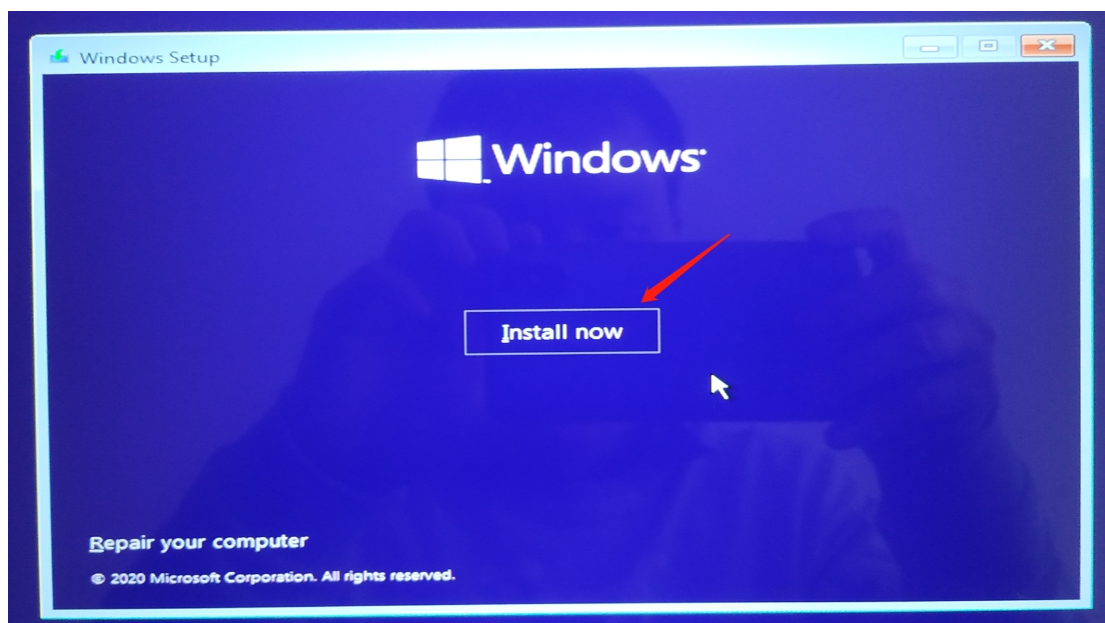


15. Next:

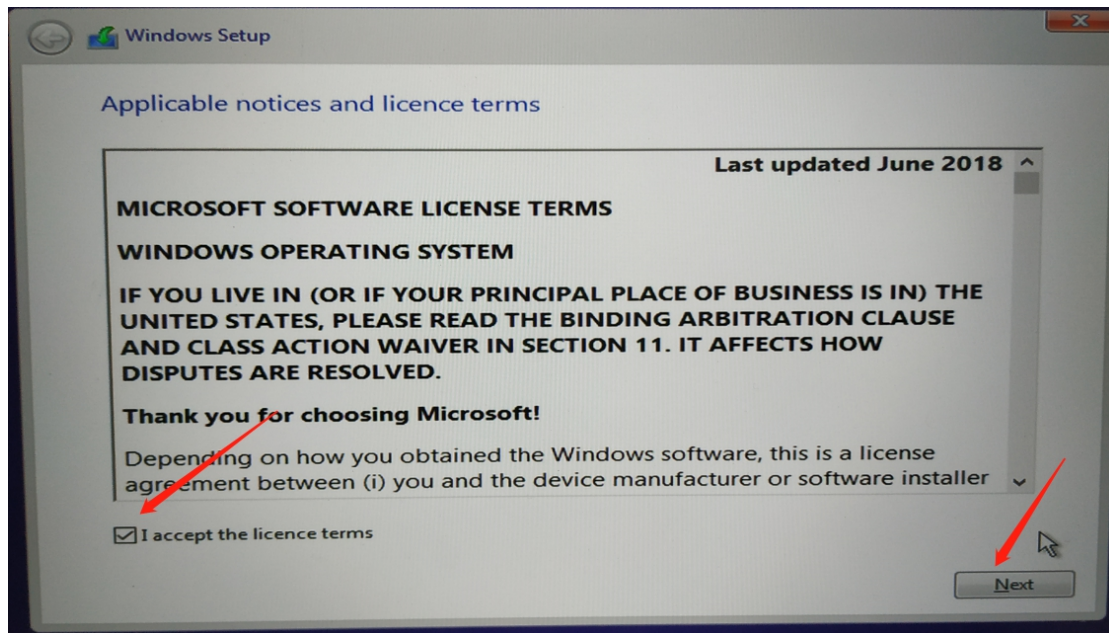

16. choose the second option:

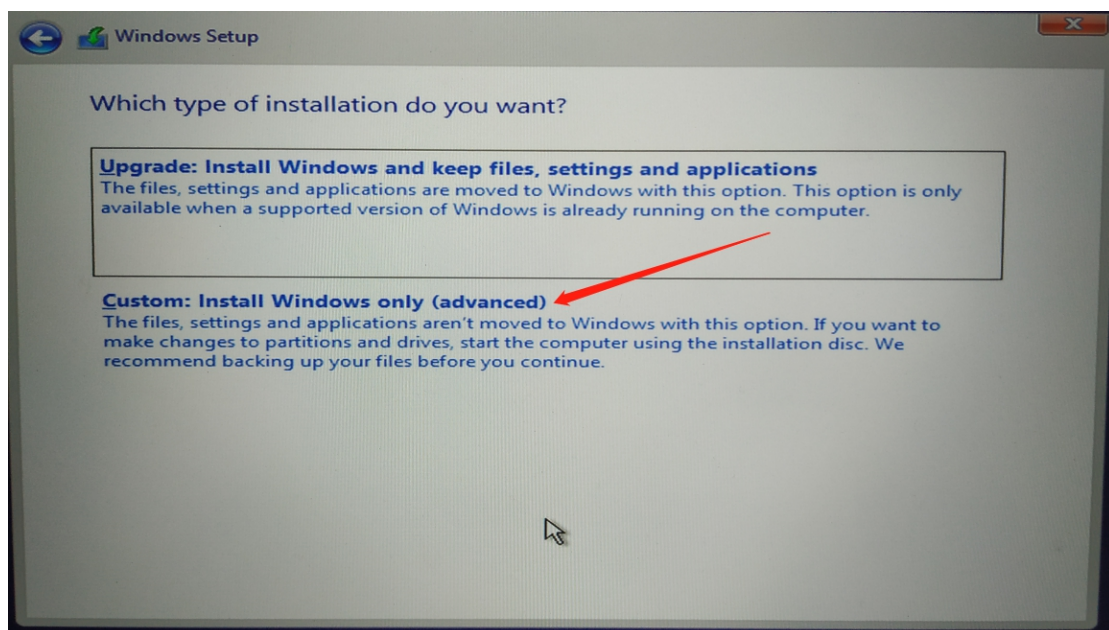

17. choose the SSD drive you want to install, this example is 120GB SSD (if your SSD have been divided into several partitions, recommended to delete all of the partitions before installation):

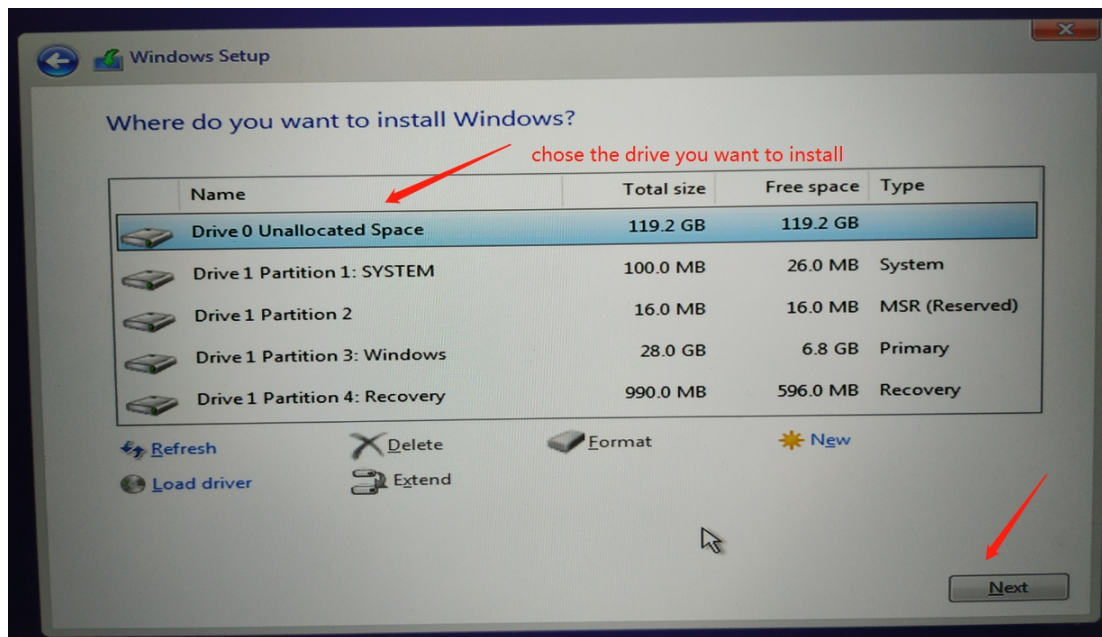


18. Waiting installation finish:





19. It will take several minutes for installation windows 10, it may reboot several times during this process, after installation, it will reboot and may show the below interface, choose the windows 10 operation system:



20. At the first boot time, it will take about 10 minutes to get ready, after that it will come to OOBE (Out-of-Box Experience) wizard:

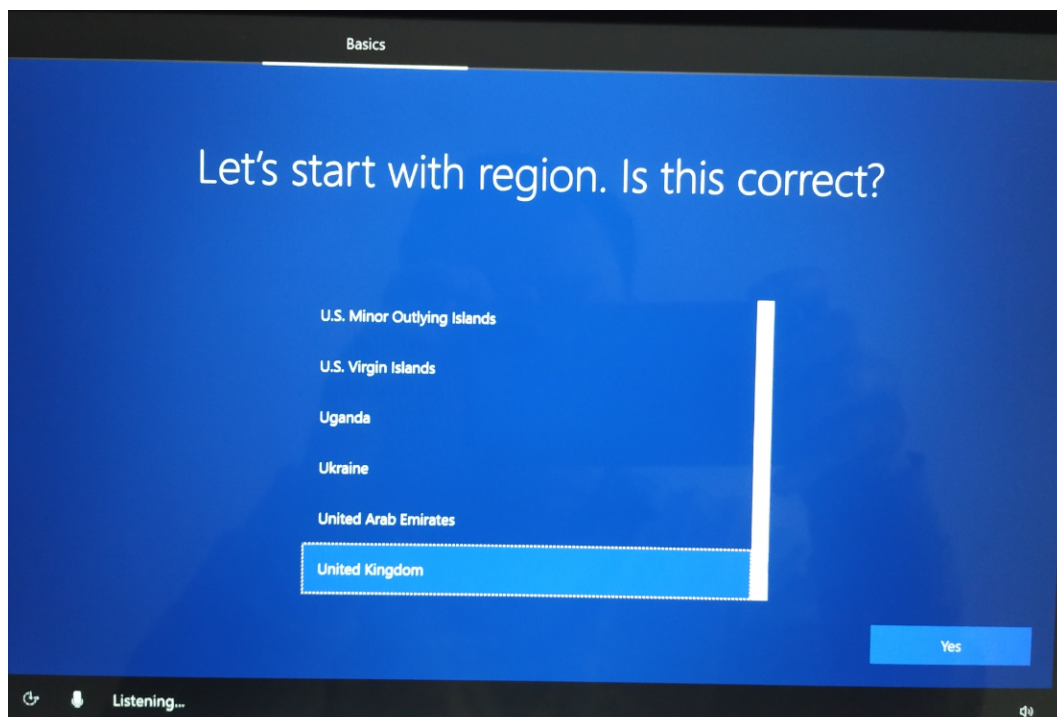


21. It is recommended to skip the internet option during this process to save some time:

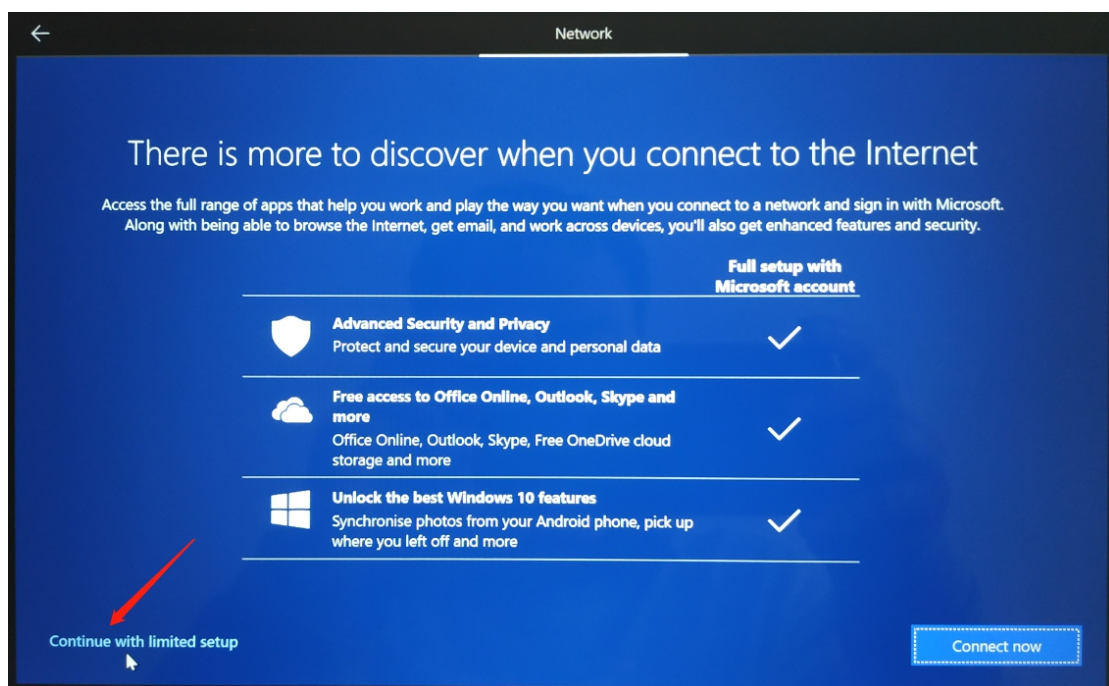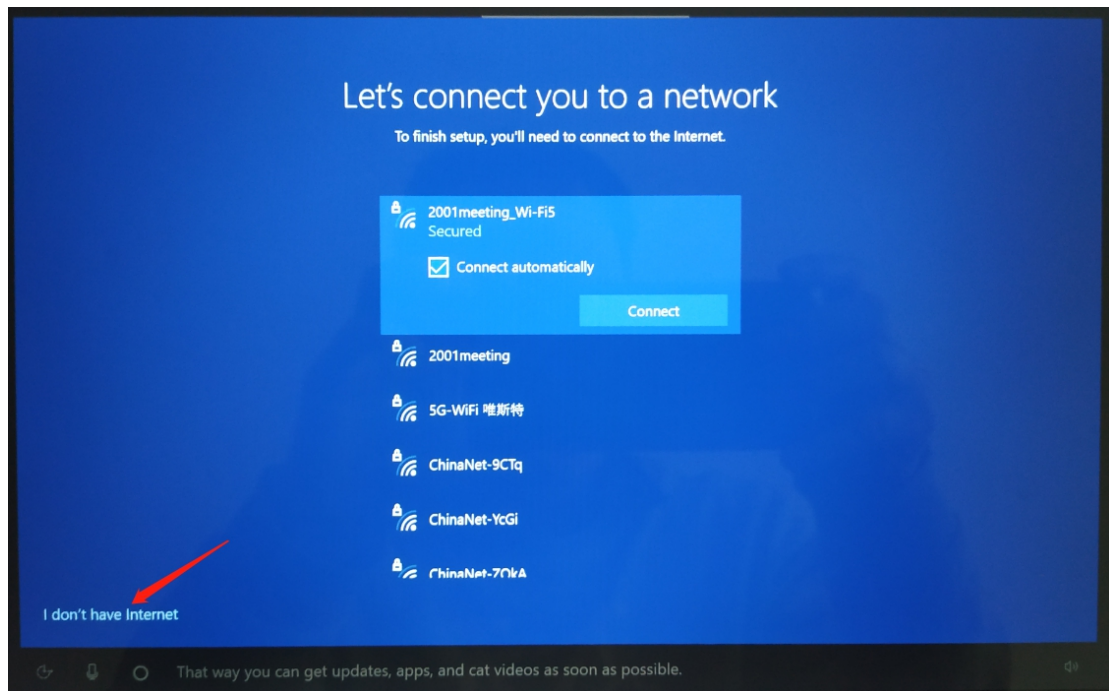


22. Enter desktop:



23. Connect the wifi and navigate to the **settings->Update & Security ->Windows Update** menu,click the **Check for updates** button,waiting for download and install all of updates and drivers:

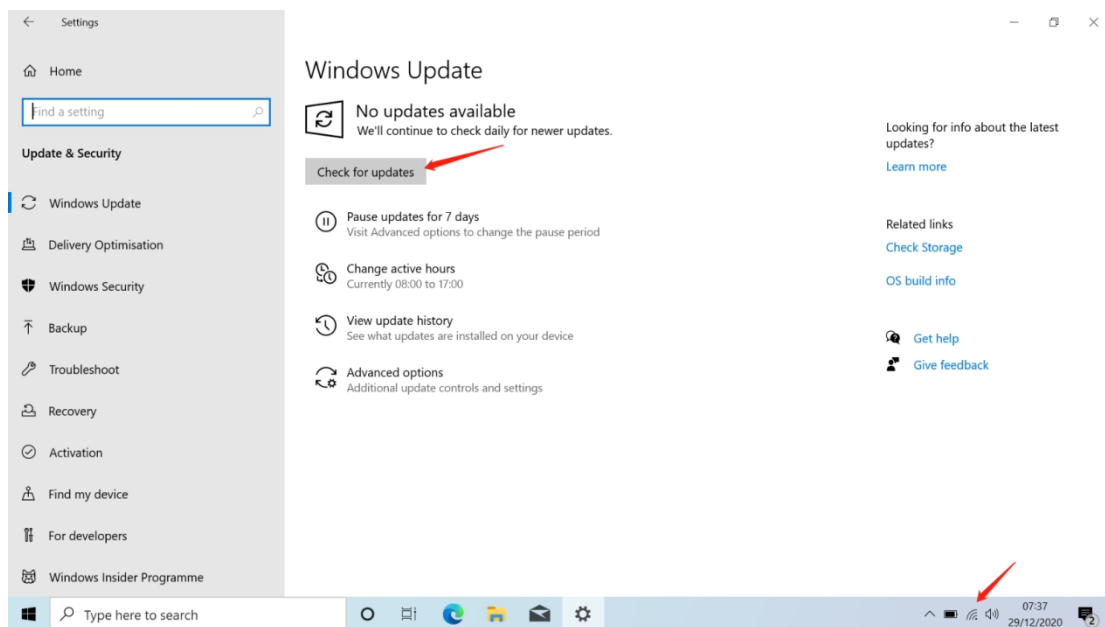

24. If there are some drivers not being installed under device manager as below:

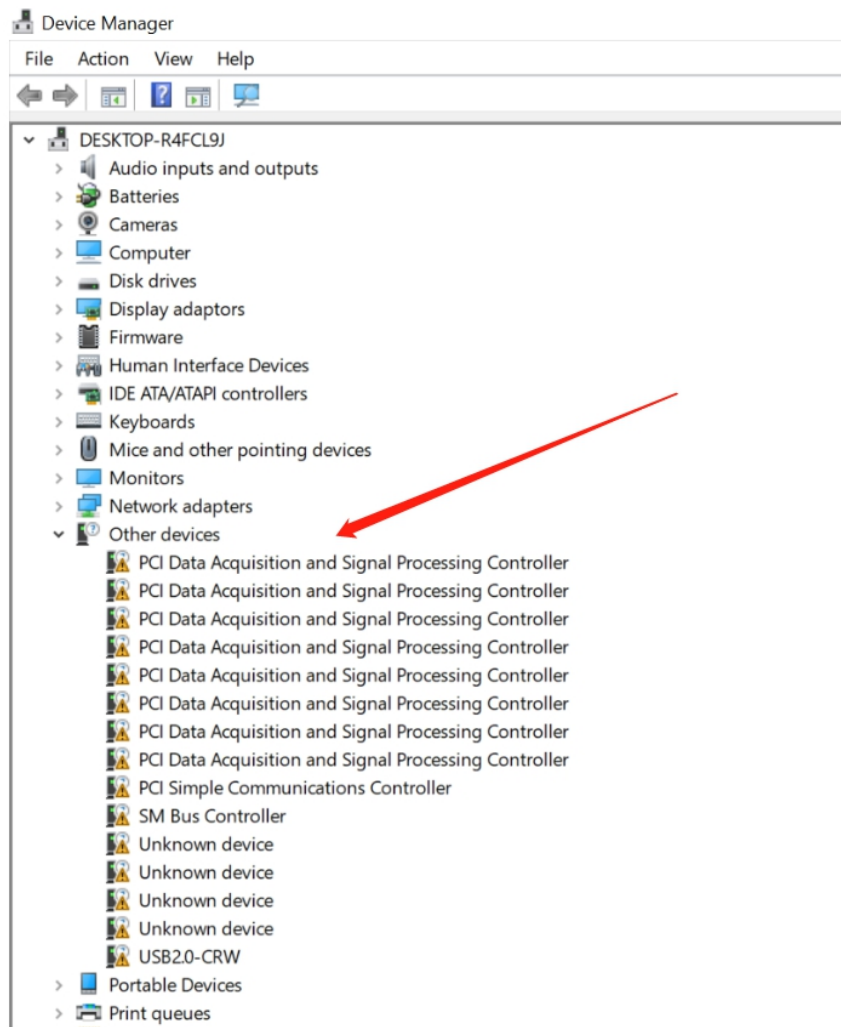



25. please download the drivers from the below link, and install the drivers refer to the readme.txt of the drivers package: (note: please choose the correct model of LincPlus notebook)

1315E_P1:

1315E_P1_20190805.zip:

<https://1drv.ms/u/s!AmF8yo8663cfiiJ0GxHQe4yhezDO?e=Y5CZh5>

1408P_P2:

1408P_P2_20201229.zip:

<https://1drv.ms/u/s!AmF8yo8663cfiiPqopLoAls7DPR9?e=9MpyCu>

LincPlus P3:

1409P_P3_20200922.zip:

https://1drv.ms/u/s!AmF8yo8663cfiiG-1tOp_2Yo2bll?e=Jg3Zpd

If you have any question, please don't hesitate to contact the supporting e-mail

Info@lincplus.com.cn we are standing by to help you!

By the way, if you are please with our service, could you please leave us an honest review?

Your kindness will encourage us a lot.

Thank you very much!