
INSTRUCTION MANUAL



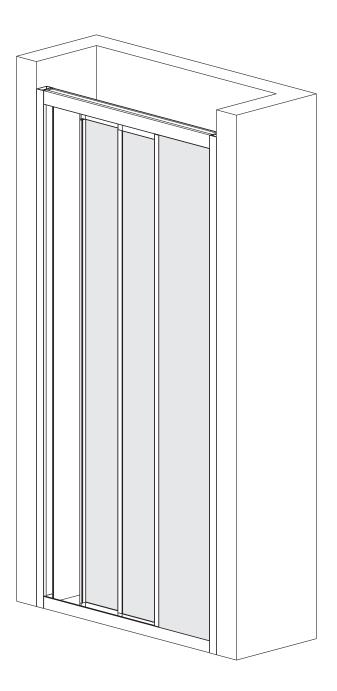

Please keep this manual and product code number for future reference and for ordering replacement parts if necessary.

GENERAL INSTRUCTIONS

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION OVER CERAMIC TILES

- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.

NOTICE

- Caulking: no sealant is required inside the shower, unless otherwise stated.
- Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR

- Never use scouring powder pads or sharp instruments on metal pieces or glass panels.
- An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and aluminum parts looking new.
- We recommend wiping the glass panels with a squeegee after each use.

TOOLS REQUIRED


SPIRIT LEVEL	POWER DRILL	PENCIL	SILICONE	MALLET	
TAPE MEASURE	SCREW DRIVER	6mm&3mm(1/4" & 1/8") DRILL BITS	HACKSAW	SAFETY GLASSES	


* Use a 6mm(1/4") drill bit for ceramic when drilling into ceramic tiles

CHOOSE A CONFIGURATION


Open from the left

Open from the right

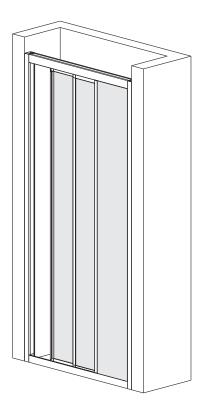

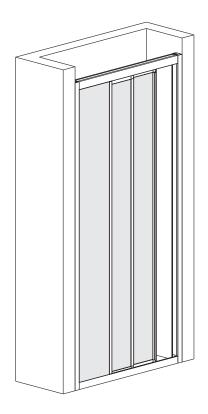



PARTS LISTING

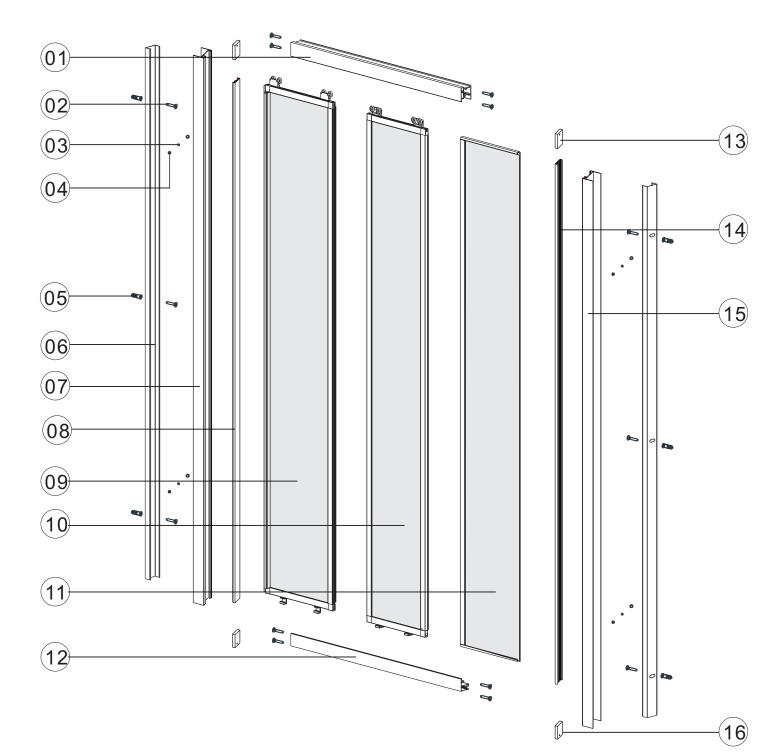



ITEM	PARTS	DIAGRAM	QTY	ITEM	PARTS	DIAGRAM	QTY
1	Top Rail		1	9	Door panel		1
2	Screw St4x20	On	14	10	Middle panel		1
3	Screw St4x12	Ø5	4	11	Fixed panel		1
4	Screw cover cap	00	4	12	Bottom Rail		1
5	Wall plugs Ø6		6	13	Big Cushion block	ſ	2
6	Wall Channel		2	14	Upright Frame Cover(Fixed pan	el) (c.c.)	1
7	Upright Frame for Door Side	F	1	15	Upright Frame for Fixed Panel	P 1 1	1
8	Upright Frame Cover(Door side)	(LESLE)	1	16	Small Cushion block	()	2


OPEN FROM THE LEFT

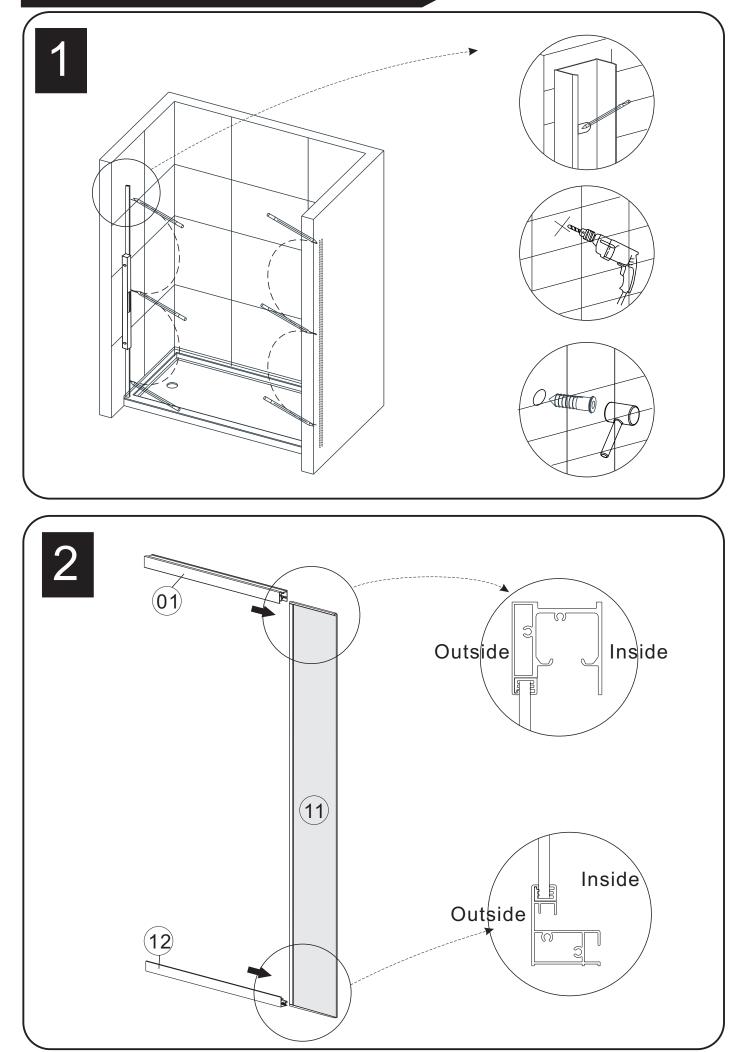

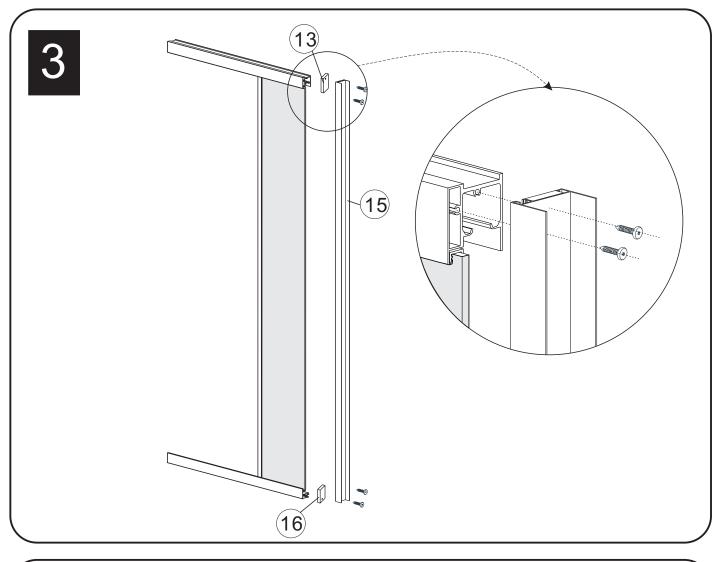

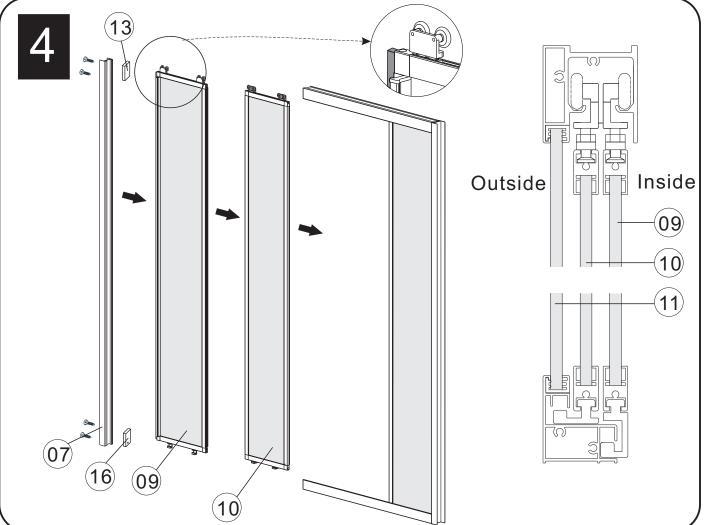

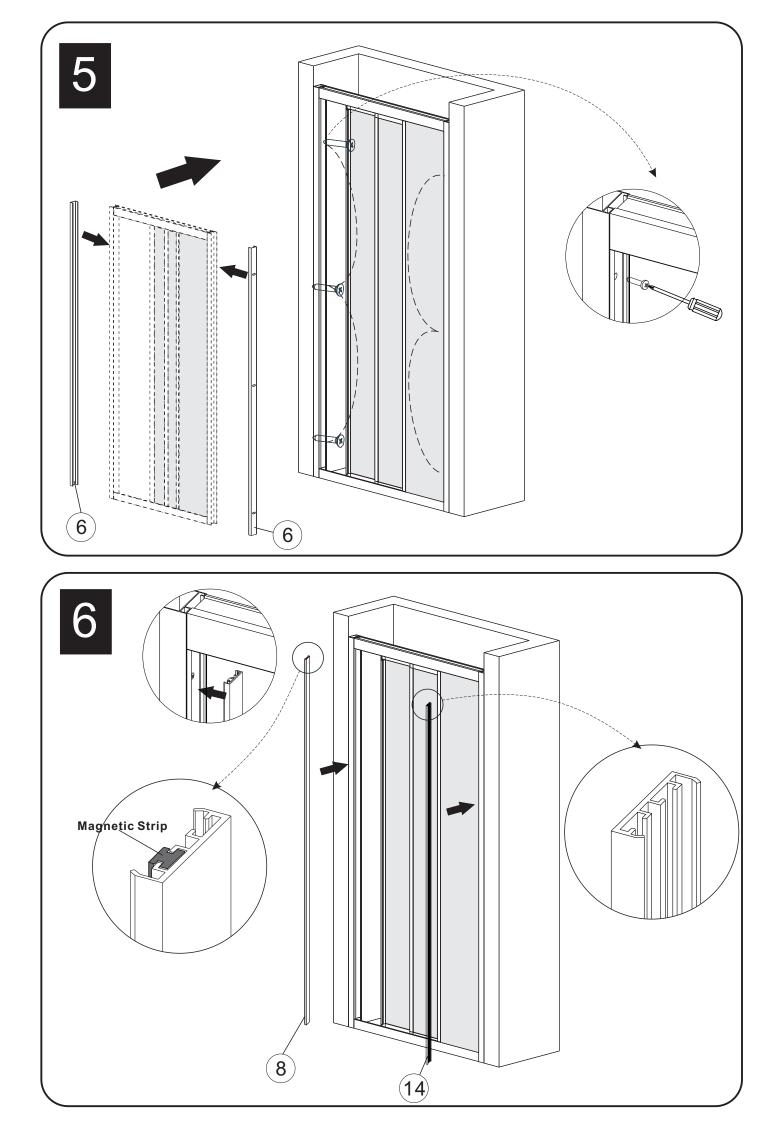

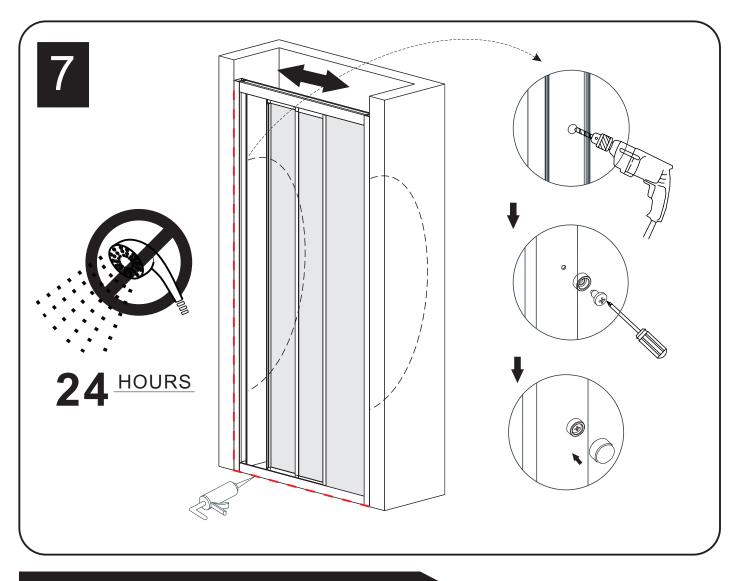

OPEN FROM THE RIGHT

