

The background of the cover is a dark charcoal grey. On the left side, there is a large, stylized, semi-transparent graphic of a handgun, oriented vertically with the barrel pointing upwards. The graphic is composed of several shades of grey, creating a layered effect. In the center-right of the cover, there is a white rectangular area that appears to be a cutout or a label.

Multifunction Pistol Safe (RP2016) Instruction Manual

Thank You for Your Recent Purchase

At RPNB Safe, we believe that everyone should have access to high-quality protection where they need it most. Whether you're looking to protect your most cherished people or possessions, we are here to help you find the right safe for your needs. Our mission is simple: Create a safer world.

Scan the QR code for more product information and events

RPNB[®]



@rpnbsafe



@RPNBsafe







RPNB SAFE



www.rpnbsafe.us

Box Contents

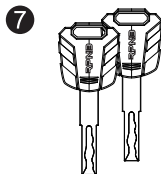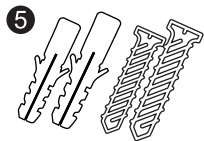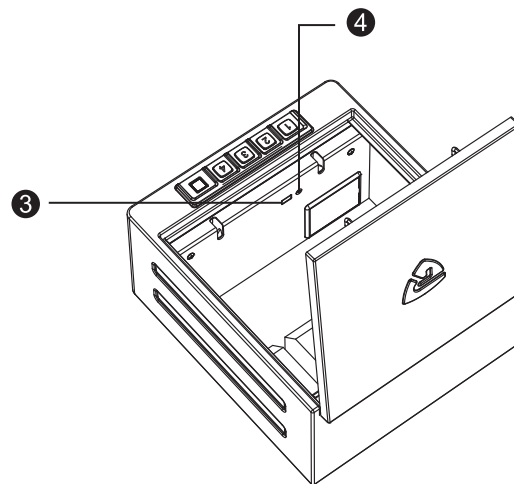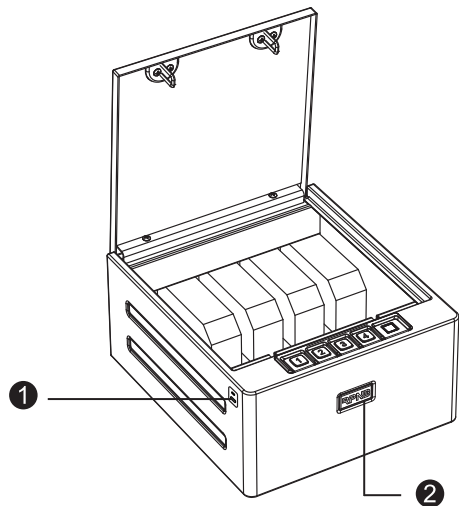

- ① USB Type-C Port
- ② Backup Key Cover
- ③ Interior Light
- ④ Program Button
- ⑤ Hardware Mounting Kit
- ⑥ Instruction Manual
- ⑦ Backup Keys (2)

Warning

To prevent damage to your RPNB® unit or bodily injury, read the following safety precautions before using this unit.

**DO NOT PLACE OR STORE THE BACKUP KEYS INSIDE THE SAFE AT ANY TIME.
IF THE BATTERY FAILS, YOU WON'T BE ABLE TO OPEN THE SAFE.**

DO NOT expose to extreme heat or cold. Battery power may be affected.

DO NOT store loaded guns in this unit. Firearms are serious in nature and must be handled with respect. Store responsibly.

ALWAYS check to make sure the safe is closed and locked when it is not in use.

Disclaimer

Neither seller nor manufacturer shall be liable for unauthorized access, any injury, loss or damage to personal property direct or consequential, arising out of the use of, or the inability to use the RPNB® Safe.

The user shall determine the suitability of the RPNB® Safe before the intended use and user assumes all risk and liability whatsoever in connection therewith, RPNB® Safe are not intended to protect against environmental hazards including fire and water.

Be sure and follow all local and state firearm laws.



DO NOT operate a firearm without proper training and experience.

Battery Installation

- 1 To get started, remove the backup key cover and insert one of your backup keys into the keyhole at the front of the safe. Push key in and rotate the key 60 degrees clockwise (RIGHT) to open the safe (see Figure A).
- 2 Locate the battery compartment door on the inside of the safe directly below the keypad (see Figure B).
- 3 Open the battery cover and insert the 4 AA alkaline batteries (not included) into the battery compartment. Note that pay attention to the "+" and "-" signs. The "-" end of the batteries go against the spring inside of the compartment.
- 4 When the batteries are inserted correctly you will hear a short beep.
- 5 Once you hear the beep, place the battery cover.

IMPORTANT :

- Use the NEW AA alkaline battery. Mixing batteries may cause device to become unusable.
- Your RPNB® safe will automatically lock when you fully close the lid.

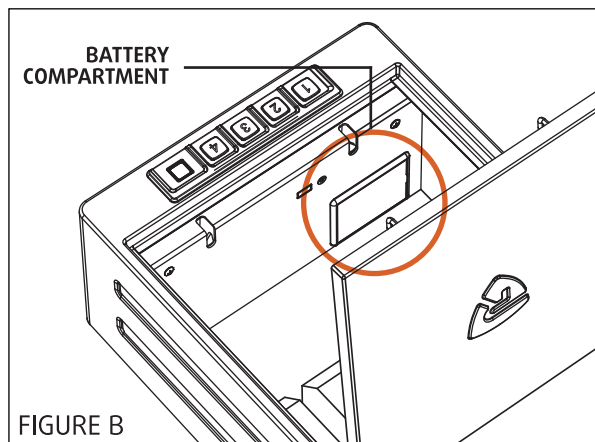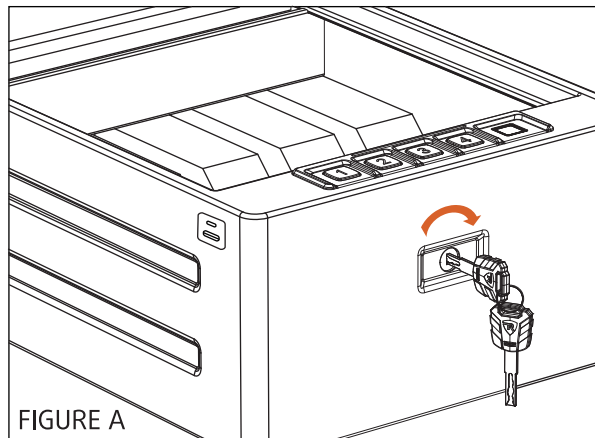


Master Code Programming

First time users should change the default code as soon as possible to prevent unauthorized access to your safe, the code should be kept confidential.

TIP: Code Requirements

- Your code can be a minimum of 4 and a maximum of 6 digits. For your security, the safe will time out and sleep for five minutes if 5 incorrect entries are made. The safe can still be opened by using the backup keys override.
- Two keys cannot be pressed simultaneously.
- Programming a new code will overwrite your previous code.

- 1 Enter default code 1-2-3-4 on the keypad to open your safe (see Figure A).
- 2 With the safe open, press and hold the "PROGRAM" button (3 seconds), the keypad will light up BLUE once with one beep (see Figure C).
- 3 Enter your NEW master code.
- 4 Press the "PROGRAM" button once and release it, the keypad will light up BLUE twice with the double beeps. This tone confirms that the password has been reset.
- 5 Now test the code. If you made a mistake, the keypad will RED 5 with 5 beeps, and the new code will not work, simply start over with step 2.

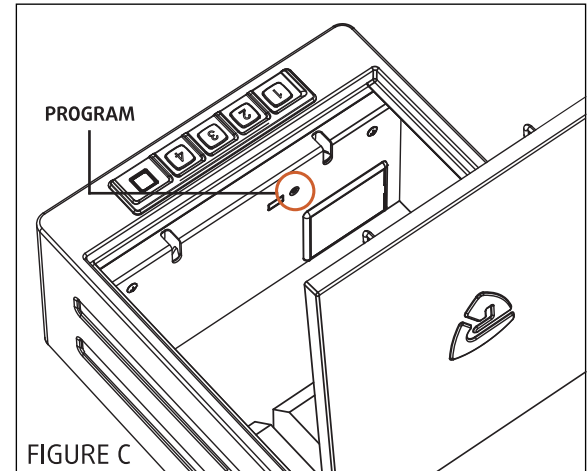

Programming the Fingerprints

To Register Your Fingerprint, Locate the "Program" Button.

- 1 With the safe open, press and hold the "PROGRAM" button (3 seconds) (see Figure D), the keypad will light up BLUE once with one beep.
- 2 Place your finger on the fingerprint scanner for the 1st of six scans. Make sure your finger covers the scanner completely. Remove your finger after the fingerprint scanner lights up BLUE once with 1 beep. You will repeat this process until the fingerprint scanner lights up BLUE 2 times with 2 beeps.
- 3 Now your fingerprint has been successfully registered. Close door and test to see if the safe will open using your fingerprint. If you made a mistake and the new fingerprint will not work, you must repeat the above steps.

Note:

- If all keys flash RED 5 times with 5 beeps, it means registration has failed and you must repeat the above steps.
- You cannot register more than 20 fingerprints. If the light flashes RED 5 times with 10 beeps when you register once your fingerprint, it means the fingerprint storage capacity is full.

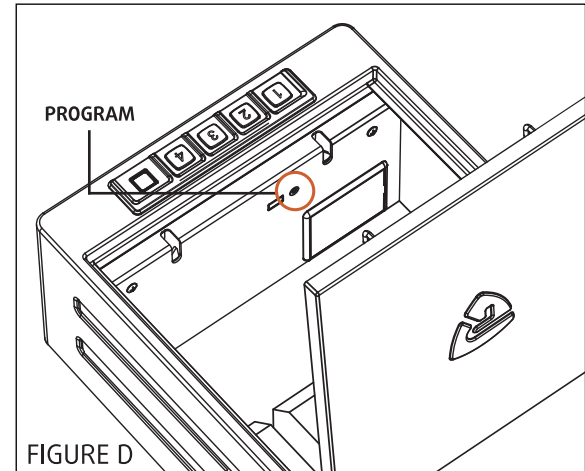



FIGURE D

Programming the Fingerprints

Helpful Programming Tips :

- 1 Place your finger on the center of the scanner (this allows the scanner to read where most of the fingerprint detail is located).
- 2 Adjust your finger slightly between scans for increased accuracy.
- 3 Excessive moisture, lotion, or dirt will affect your fingerprint and may cause inaccurate sensor reading.
- 4 If you are experiencing difficulty, try different fingers. Each finger is unique, and some fingers such as your thumb, contain more readable information than others.
- 5 To increase your success rate, please register the same fingerprint multiple times.

FIGURE E

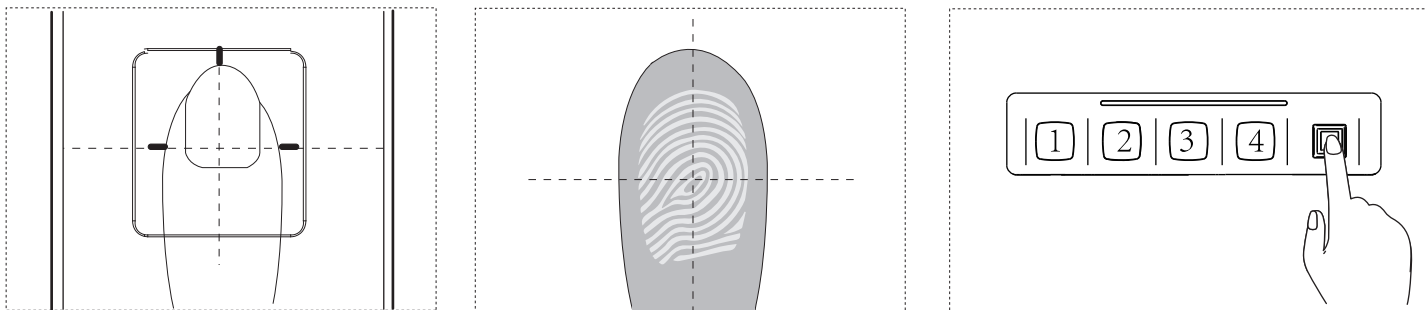

Delete the Registered Fingerprint


- 1 Press and hold the program button.
- 2 You will see the light flash BLUE once and hear one beeps.
- 3 Keep holding the program button until you hear another double beeps with two BLUE flashes, then release it. (The whole process will take 5-6 seconds.)
- 4 Now all registered fingerprints are erased.

IMPORTANT

When only flash BLUE once with one beep, do not let go. You must hold the program button until the light flash twice with double beeps, then release it.

Low Battery Warning

- If the keypad light up BLUE (1-3 seconds) and then light up RED 10 times with 10 beeps when opening the safe by electronic way, your battery level is critically low and your safe needs to be replaced the 4 new batteries.
- A built-in USB Type-C port on the right side of the safe can be used when the batteries are depleted without the keys. (see Figure F) This port is for emergency use only, not for long-term use.
- You can simply plug a USB Type-C cable (not included) into the port to electronically unlock the safe as normal. It cannot be used for charging.

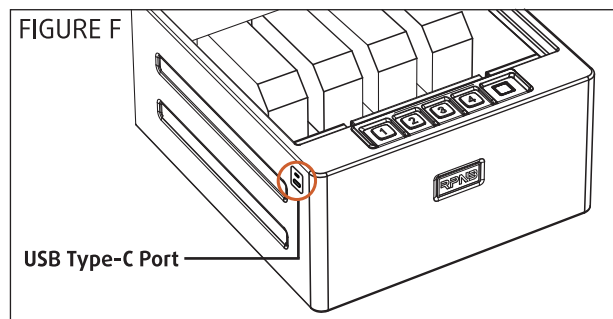

Silence Mode Setting

To silence the audible sound of the electronics, hold the “1” button for 4 seconds until you hear one beep and the light will flash BLUE once together. To unmute the keypad, repeat this step.

Securing Your Safe

There are some mounting screws included to mount your RPNB® safe to a flat surface using the pre-drilled holes on the bottom.

Using the Mounting Screws

TIP: Make sure you have enough clearance for the lid to open properly before mounting the safe.

- 1 Position the safe on a flat surface where you want to mount it.
- 2 Use a pencil to mark the holes for drilling.
- 3 Drill pilot holes.
- 4 Position safe in place and install screws through safe into pilot holes. Tighten screws.

IMPORTANT

Mounting the safe vertically so that the door flips upward will result in incomplete opening of the safe due to weight. The door will open if the safe is mounted vertically so that door opens down or to side.

How shall I view tutorial videos?



- 1 Go to our website via: **www.rpnbsafe.us**
- 2 Select "**Support**" on footer navigation bar
- 3 Click "**How to Use**"
- 4 Click the **Product Model** you purchased

How shall I replace keys?

- 1 Go to our website via: **www.rpnbsafe.us**
- 2 Select "**Support**" on footer navigation bar
- 3 Click "**Replace Keys**"
- 4 Fill in the required information

How shall I order accessories?

- 1 Go to our website via: **www.rpnbsafe.us**
- 2 Select "**Support**" on footer navigation bar
- 3 Click "**Accessories**"
- 4 Select the product model you purchased

 More online at **www.rpnbsafe.us** under support

Customer Support/Warranty

Customer Support

If you have a problem with your RPNB® safe that is not answered in this manual, we encourage you to email us: CUSTOMERSUPPORT@RPNBSAFE.COM

Linked Warranty (Terms and Conditions)

RPNB® is committed to building high quality products and will make every effort to ensure our products are free from any defects. We guarantee your safe will be free of defects in materials or workmanship for a period of one year from the date of purchase. This warranty does not cover abuse, misuse, use in any manner for which is not designed, neglect, modification, damage inadvertently caused by the owner, accidents, and/or tampering.

If your safe is determined to be defective and we are responsible for the cause we will have it repaired at our expense, or we will send a new replacement at no cost to you. You will be required to return your existing unit as well as all included accessories to RPNB® prior to replacement of the defective unit along with your proof of purchase.

If it is determined your safe needs to be returned, our customer support team will provide you with a return details.

Please have the following information available when contacting us:

- Purchaser's name and mailing address, email address, and phone number
- Online order number
- Detailed description of problem

HOW TO CONTACT?

Go to Your Orders, find your order in list, and click get product support.

You can e-mail the seller by doing the following:

Account&Lists Orders Try

Your Account

Your Account

Your Orders

Your Dash Buttons

Your Lists

Your Orders

Orders Open Orders Digital Orders

1 order placed in past 6 months

Get product support

Write a product review

Archive order

Talk to an expert

Figure out and fix what's wrong, get

phone

chat

if a new window doesn't appear, chan

1.Go to your account find the order

2.Find your order item

3.Click get product support

4.Give the seller 24hours to respond



Please email us to get a special **VIP** discount code before your next order.



Problem with the order? Please email us, give us a chance to help you first.



Do you love your new RPNB product? Help others find it by leaving a product review online !

ver 1.01

RPNB[®]

Welcome to a safer world