

Hall split core current sensor

Open loop split core type, Sub-plate installation, terminal output. Detect DC, AC and pulse current, High insulation between primary side and the vice side circuit.





Front view

Back view







Opening view

Installation diagram

Product features

- •Light weight
- •Low power consumption
- •Good linearity
- •No insertion loss
- Fast response time
- •Good anti-interference ability

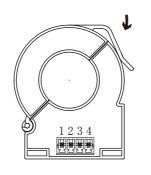

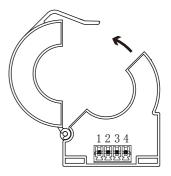

1.Loosen the card buckle


1234


3.In the lead

2.Open up

Product application

- •Railway
- •Metallurgical
- •Welding machine
- •Robot
- Motor
- Inverter power supply
- Variable frequency governor
- •Uninterrupted power supply and communication power supply

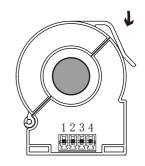

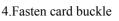

www.poweruc.pl



Electrical parameters: (The following parameters are typical values and actual values will be subject to product testing)									Remarks:
Ιp	Rated input	$\pm 50 \mathrm{A}$	$\pm 100 \text{A}$	±200A	$\pm 300 \mathrm{A}$	$\pm400 \mathrm{A}$	±500A	$\pm 600 \text{A}$	Standard input
Ipm	Input measurement range	$\pm 60 \mathrm{A}$	$\pm 120 \text{A}$	$\pm 240 \text{A}$	$\pm 360 \text{A}$	±480 A	$\pm600A$	$\pm720\mathrm{A}$	Default is 1.2 times of rated input
Vout	Rated output	$\pm 4V$							Standard output
Х	Accuracy				1%		I=Ip		
εL	Linearity	1%							$I=0^{\sim}\pm Ip$
Vс	Supply voltage	$\pm 12 V/\pm 15 V$							One or the other Supply voltage range±5%
Ιc	Current consumption	$\leq \pm 16 \mathrm{mA}$							Reference will be subject to the measured
R1	Load impedance	≥10K Ω							Collection port impedance while lower voltage affect accuracy
Voe	Zero offset voltage	$\leq \pm 15 \mathrm{mV}$							TA=25℃
Tr	Response time	≪5µs							Reference will be subject to the measured
N.w	Weight	84g							Reference will be subject to the measured
Ta	Operation temperature	$-10 \sim +70 \ ^{\circ}\text{C}$							
Ts	Storage temperature	$-25 \sim +70 \ {\rm ^{\circ}C}$							
Bw	Band width	DC [~] 25KHz							Factory test according to DC
Vd	Delectric strength	2.5KV 50Hz 1min							

Instructions for use:

- 1. According to the connection mode of correct connection
- 2. The direction shown by the arrow is positive
- 3. With hole measurement, response time and following the speed for the best
- 4. Faulty wiring can lead to product damage and output uncertainty

Safe operation:

*Please read this specification carefully before use.

*When you need to move the product, please be sure to disconnect the power and all the connected cables.


*If found shell, devices attached to the fixed parts, wire, or have any damaged, please immediately deal with hidden dangers.

*If there is any doubt about the safe operation of the equipment, the equipment and the corresponding accessories should be closed immediately, and the fastest time for troubleshooting.

Proclamations:

As our products are constantly being improved and updated, we reserve the right to modify the content of this specification at any time without prior notice.



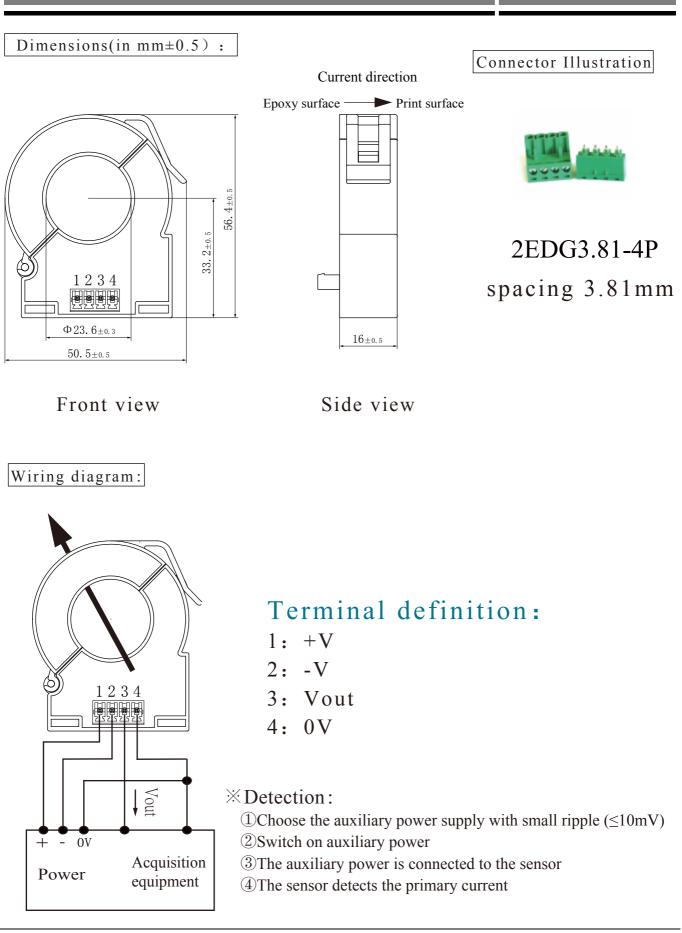

www.poweruc.pl