

## Hall split core current sensor

Open loop split core type, Sub-plate installation, terminal output. Detect DC, AC and pulse current, High insulation between primary side and the vice side circuit.









Front view

Back view


Fixed hole view


Opening view

# Installation diagram

### Product features

- ·Light weight
- •Low power consumption
- · Good linearity
- No insertion loss
- Fast response time
- Good anti-interference ability

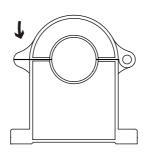

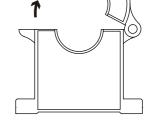


1. Loosen the screw


2. Open up

# Product application

- Railway
- Metallurgical
- ·Welding machine
- Robot
- Motor
- •Inverter power supply
- Variable frequency governor

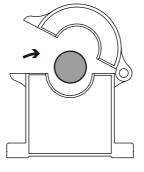

3. In the lead

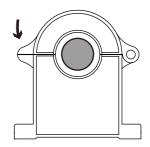

4. Tighten the screws

•Uninterrupted power supply and communication power supply



# Electrical parameters: ( The following parameters are typical values and actual values will be subject to product testing )

## Remarks:

Ιp	Rated input	$\pm 50$ A	$\pm 100 \text{A}$	±200A	±300A	±400A	±500A	$\pm600$ A	Standard input
Ipm	Input measurement range	±75A	±150A	±300A	±450A	$\pm600$ A	±750A	$\pm800$ A	Default is 1.5 times of rated input, and maximum \( \le 800A \) (saturation)
Vout	Rated output	$2.5V \pm 0.625V$							Standard output
X	Accuracy	1 %							I = I p
εĹ	Linearity	1 %						$I=0^{\sim} \pm Ip$	
Vс	Supply voltage	+ 5 V							Supply voltage range±5%
Ιc	Current consumption	≤16mA							Reference will be subject to the measured
R1	Load impedance	≥10KΩ							Collection port impedance while lower voltage affect accuracy
Voe	Zero offset voltage	$\leq \pm 15 \mathrm{mV}$							TA=25°C
Tr	Response time	≤5 μ s							Reference will be subject to the measured
N.w	Weight	94g						Reference will be subject to the measured	
Ta	Operation temperature	-10~+70°C							
Ts	Storage temperature	-25~+85°C							
Bw	Band width	$\mathtt{DC}^{\sim}25\mathtt{KHz}$						Factory test according to DC	
Vd	Delectric strength	2.5KV 50Hz 1min							

### Factory commissioning:

Calculation formula: 2.5V±0.625V 0V datum

- 1. Debugging with 0V as the reference point(acquiescence) Forward direction: 2.5+ (I/IP) \*0.625
- 2. Debug with Vref as the reference point(optional) Reverse direction: 2.5- (I/IP) \*0.625

#### Instructions for use:

- 1. According to the connection mode of correct connection
- 2. The direction shown by the arrow is positive
- 3. With hole measurement, response time and following the speed for the best
- 4. Faulty wiring can lead to product damage and output uncertainty

#### Safe operation:


- \*Please read this specification carefully before use.
- \*When you need to move the product, please be sure to disconnect the power and all the connected cables.
- \*If found shell, devices attached to the fixed parts, wire, or have any damaged, please immediately deal with hidden dangers.
- \*If there is any doubt about the safe operation of the equipment, the equipment and the corresponding accessories should be closed immediately, and the fastest time for troubleshooting.

#### Proclamations:

As our products are constantly being improved and updated, we reserve the right to modify the content of this specification at any time without prior notice.




### Dimensions(in $mm\pm0.5$ ):

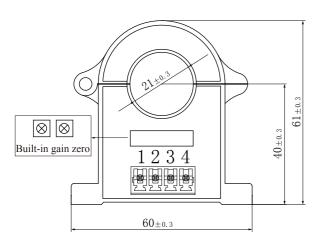


Front view

#### Current direction

Print surface **←** Epoxy surface

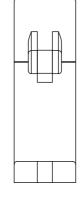

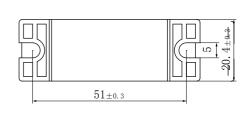

Side view

Bottom view

## Connector Illustration





Wiring diagram (based on 0 V)

Crimping terminal fast plug KF2EDGK-3.81-4P, spacing 3.81

# Terminal definition:

1: +V

2: 0V


3: Vout

4: Vref (Can be suspended, not grounded)

# Potentiometer definition:

Left: gain

right: zero

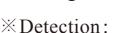

- ①Choose the auxiliary power supply with small ripple ( $\leq 10 mV$ )
- ②Switch on auxiliary power
- 3 The auxiliary power is connected to the sensor
- (4) The sensor detects the primary current

