

AC Voltage Tansmitter

Sub-plate mount, terminal output. Detect AC current. High insulation between primary and secondary circuits.








Product features

- ·Light weight
- •Low power consumption
- Good linearity
- •No insertion loss
- Fast response time
- Good anti-interference ability

Product application

- Railway
- Metallurgical
- · Welding machine
- Robot
- Motor
- •Inverter power supply
- · Variable frequency governor
- •Uninterrupted power supply and communication power supply

Installation diagram

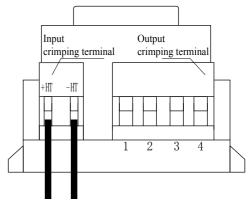

Ac wiring does not distinguish between positive and negative terminals



Electrical parameters: (The following parameters are typical values and actual values will be subject to product testing)

Remarks

Rated input Input measurement range Rated output 200V 300V 400V 500V Standard input 240V 360V 480V 600V Default is 1.2 times the input rating 0-20mA/4-20mA/0-5V/1-5V/0-10V Output one of five 0-10V output +24V power supply
measurement range 240 v 300 v 480 v 000 v Default is 1.2 times the input fating Output one of five
Accuracy 0.5%
Linearity 0.5%
Supply voltage (\pm 5%) +12V / +24V One or the other Supply voltage range =
Current consumption $\leq 35 \mathrm{mA}$ Reference will be subject to the measurement of the measurement of the measurement of the subject to the measurement of the measur
Load impedance Current type output: Voltage type output: $\geq 10K\Omega$
Zero offset voltage Current type output: $\pm 0.08 \text{mA}$ Voltage type output: $\pm 15 \text{mV}$ TA=25 °C
Response time $\leq 350 \mathrm{mS}$ Reference will be subject to the measurement $\leq 350 \mathrm{mS}$
weight 99g Reference will be subject to the measur
Operating temperature $-10 \sim +70 ^{\circ}\text{C}$
Storage temperature -25 \sim $+70$ $^{\circ}$ C
Band width 25Hz~1KHz
Delectric strength 2.5KV 50Hz 1min

Instruction for use:

- 1. Correct wiring as indicated
- 2. Full scale measurement, response time and following the speed for the best
- 3. Faulty wiring can lead to product damage and output uncertainty

Safe operation:


- *Please read this specification carefully before use.
- *When you need to move the product, please be sure to disconnect the power and all the connected cables.
- *If found shell, devices attached to the fixed parts, wire, or have any damaged, please immediately deal with hidden dangers.
- *If there is any doubt about the safe operation of the equipment, the equipment and the corresponding accessories should be closed immediately, and the fastest time for troubleshooting.

Proclamations:


As our products are constantly being improved and updated, we reserve the right to modify the content of this specification at any time without prior notice.



Dimensions(in mm±0.5):

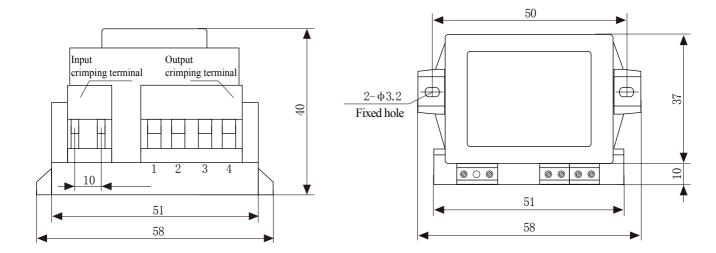

Wiring diagram:

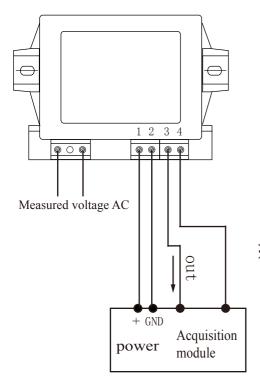

Terminal definition:

1: +V

2: GND

3: out

4: GND

+HT: Measured voltage

-HT: Measured voltage

- **※**①The auxiliary power supply with ripple small (≤20mV) is selected
- ②Switch on auxiliary power
- 3 Auxiliary power is connected to the transmitter
- **4** Transmitter detects the primary current
- ⑤Both GND internals are not isolated