

Hall split core current transducer

Sub-plate mount, terminal output. Detect DC current. High insulation between primary and secondary circuits.











Product features

- ·Light weight
- •Low power consumption
- Good linearity
- No insertion loss
- Fast response time
- Good anti-interference ability

Installation diagram

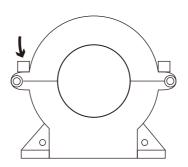


1. Loosen the screw

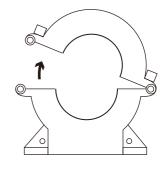


2. Open up

Product application

- Railway
- Metallurgical
- · Welding machine
- Robot
- Motor
- •Inverter power supply
- Variable frequency governor

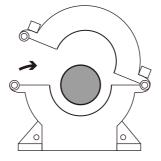

3. In the lead

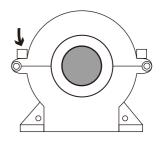

4. Tighten the screws

•Uninterrupted power supply and communication power supply



Electrical parameter	TS: (The following will be subject	parameters are ty t to product testir	pical values g)	and actua	ıl values	Remarks		
Rated input	400A 500A	600A 800	A 1000A	1500A	2000A	Standard input		
Input measurement range	480A 600A	720A 960	A 1200A	1800A	2400A	Default is 1.2	times the input rating	
Rated output	0-20mA	0-20mA/4-20mA/0-5V/1-5V/0-10V					Output one of five 0-10V output +24V power supply	
Accuracy	1%							
Linearity	0.5%							
Supply voltage (\pm 5%)	+12V / +24V					One or the other	Supply voltage range ±5%	
Current consumption	$\leq 48 \mathrm{mA} + \mathrm{Io}$					Reference will be subject to the measured		
Load impedance	Current ty 250Ω(Typ	Voltage type output: $\geq 10 K\Omega$						
Zero offset voltage	Current typ ±0.08mA	Voltage type output: ±15mV			TA=25°C			
Response time	≤350mS					Reference will be subject to the measured		
weight	648g					Reference will be subject to the measured		
Operating temperature		-10∼+70°C						
Storage temperature	-25~+70°C							
Band width	$DC\!\sim\!400\mathrm{Hz}$							
D.1. (1.)								

3KV 50Hz 1min

Instruction for use:

Delectric strength

- 1. Connect the wires correctly according to the marked connection mode
- 2. The direction indicated by an arrow for the positive current direction
- 3. With hole measurement, response time and following the speed for the best
- 4. Faulty wiring can lead to product damage and output uncertainty

Safe operation:


- *Please read this specification carefully before use.
- *When you need to move the product, please be sure to disconnect the power and all the connected cables.
- *If found shell, devices attached to the fixed parts, wire, or have any damaged, please immediately deal with hidden dangers.
- *If there is any doubt about the safe operation of the equipment, the equipment and the corresponding accessories should be closed immediately, and the fastest time for troubleshooting.

Proclamations:

As our products are constantly being improved and updated, we reserve the right to modify the content of this specification at any time without prior notice.




Dimensions (in $mm \pm 0.5$):

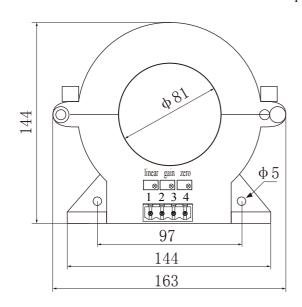


Current direction

positive **←** Epoxy surface

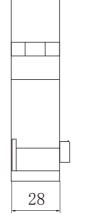

Fixed hole

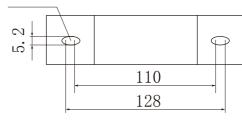


Connector Illustration





Crimping terminal fast plug2EDG-5.08-4p spacing 5.08mm

Wiring diagram:

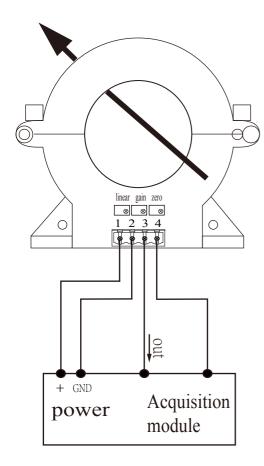

Terminal definition:

1: +V

2: GND

3: out

4: GND

- **※**①The auxiliary power supply with ripple small (≤20mV) is selected
- ②Switch on auxiliary power
- 3 Auxiliary power is connected to the transmitter
- 4 Transmitter detects the primary current
- ⑤Both GND internals are not isolated